

Predator

You have just purchased one of the most devastating control boards to be developed for the sport of paintball. We have given you total programming control so please read the directions carefully so you will understand everything your new Predator is capable of doing. Our code has been optimized for the extremely fast rate of fire that todays modern electronic paintball guns can achieve so set your rate of fire high and hold on.

LED:

RED = Ball in breech GREEN = No ball in breech Red Flashing = RED FLASHING = Program mode BLUE = Program mode

Dip Switches:

If either dip switches have been turned on the board will not allow you to enter program mode. To program this board both dip switches MUST be in the OFF position.

Activation:

Move the on/off switch in the on direction. The LED will show the status of the breech based on the colors from above.

Eye Operation:

Hold the trigger back 2 seconds to activate and/or de-active the eyes. The board boots up with the eyes turned on (provided that is the setting that has been selected in register 15) and you must turn the eyes off to dry fire the gun. If this is not done you will get a shot only if you hold the trigger back for 3/4 of a second which is a clearing shot feature. When the eyes are faulted/dirty your board will only cycle 11bps max. This is a feature we have incorporated to eliminate any chance of you breaking paint but still be able to maintain a rate of fire that will keep you in the game.

Example for programming your Predator:

1. Your tournament LOCK must be off (this is DIP 1 on your board). We strongly suggest you turn your tournament lock on while playing.
2. Pull and hold the trigger then turn the gun on by using the button on the back of the gun
3. Release trigger (LED turns BLUE)
4. You are now in the REGISTER select area
5. Pull trigger the appropriate number of times to go to register. Example: 2 pulls will take you to the MROF register (register 2)
6. LED will flash the current setting of the register you selected
7. You are now in MODE select area
8. You can now pull the trigger to insert the new setting.
9. The LED will flash 2 times to indicate it has taken the new setting
10. You are now back in the REGISTER select area
11. You can now move to a new register by simple pulling the trigger the appropriate number of times or turn the gun off and back on to use the new settings

NOTE: If you select Register 1, you are expected to enter a fire mode, again in trigger clicks. After you have made a selection, the light will flash and *remain on*. The gun is now prepared to fire. We suggest you make the fire mode the last register you select as the board will reboot after it has been selected.

Programming advanced firing mode example on Predator board:

Player wishes his or her marker to ramp once they reach 6 bps but NOT start ramping until they have fired 10 shots.

1. Go into programming mode by turning your board on while holding the trigger back
2. LED will flash once to indicate you are in program mode
3. Release the trigger
4. Pull trigger 5 times to enter the RAMPING ROF register (register 5)
5. LED will flash the current setting
6. Pull the trigger 6 times to set this register to 6bps
7. LED will flash 2 times to indicate it took the new setting
8. Pull trigger 6 times to enter the RAMPING SHOT COUNT register (register 6)
9. LED will flash the current setting
10. Pull the trigger 10 times to indicate you wish the ramping to start after you have fired 10 shots
11. LED will flash 2 times to indicate it took the new setting.
12. Pull trigger 1 time to enter the FIRING MODE register
13. LED will flash the current setting
14. Pull trigger 6 times to enter FAST RAMPING mode
15. LED will flash 2 times to indicate that it took the new setting AND the gun will reboot and be ready to fire. The gun reboots automatically after you set register 1. This does not happen after any of the other registers.

Speed and Other Features of the Predator Board:

If you feel that your gun is not shooting fast enough it could be that you are a little grandma fingered slow ass or your debounce is a bit high. Lowering your debounce is the most common fix for a slow gun even if you do have granny fingers. This can be adjusted in register 3 by using the programming method above. It is not uncommon to have a debounce setting as low as 2 or 3 provided that your trigger has a decent amount of return pressure. A trigger that does not use the return spring usually means a fast rate of fire but this is also accompanied by a trigger that will allow the gun to shoot more than 1 shot per pull when it is not appropriate. In most leagues this will get you a penalty or even removed from the event. Set your trigger correctly and you will have a fast but controllable gun.

CAUTION: Removing the return spring in your trigger will cause the gun to bounce and the trigger to wear out faster than it should.


The majority of the technical support calls we get at TAG are from users that have accidentally changed some of the settings on the board. This is usually done by turning the gun on with the trigger pulled. We find that this usually happens when you allow someone else to look at your gun or use it. We do not understand why there is such a need to turn the gun on with the trigger pulled but it does happen. When this is done you are now pulling the trigger and changing all kinds of crazy stuff. Not Good !!

If your gun was working fine then it comes back from a friend DEAD, try checking the dwell and rate of fire. These are the two registers that usually end up at 1 or 2 for a setting. If you find that your board is not working as it should it is always best to check the battery. Even though we have used some of the finest electronics that can be produced we cannot help you if the battery is dead. I am sure I do not have to tell you this but it is always a great idea to change your batteries in ALL of your equipment before an important tournament. I would also suggest testing your gun before you have to use it. You would be surprised how many players come to our tents at major events with guns that do not work and they found his out right before they needed to play. Take the time before the event and check ALL of your equipment. Your team members will love you for it.

The second most common reason for technical support calls at our office are from users that refuse to read the freakin' manual. If you have gotten this far then there is a good chance you will not be making one of these calls. However, once you get to the bottom of this page why don't ya go back and practice settings some of the registers before you really have to do it right before a game. You should have gotten this manual sheet and a REGISTER settings sheet. If you are missing any of these they can be found on our website. Just follow any link that says "MANUALS".

If you have purchased a new gun and it is powered by a Predator board then there is no need to contact the manufacturer for support. We will be more than happy to handle any issues you have and can spend as much time as needed to get you and your new gun killing as it was intended.

PREDATOR

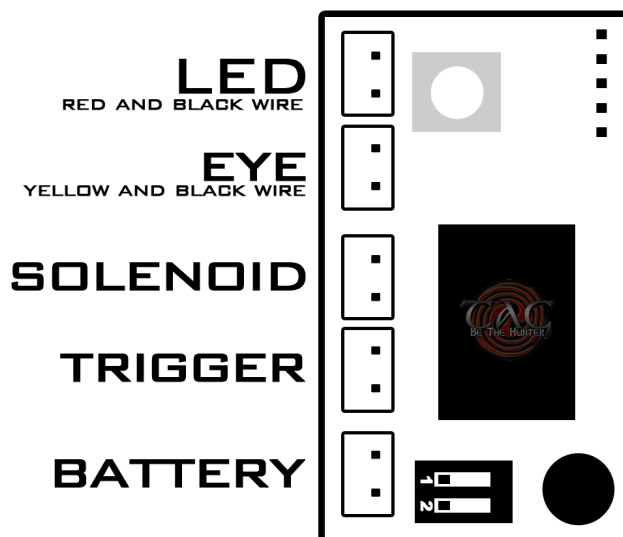

COPYRIGHT 2005 TAG SPORTZ INC.

Register	Default	Description
1	1	Firing Mode: 1. Semi 2. Auto Response 3. Full Auto 4. Smooth Ramp (debounce slowly drops) 5. Assisted Ramp (turbo style ramping where it adds shots based on the rate of fire. Slower trigger pulls add less shots. Faster trigger pulls will add more shots.) 6. Fast Ramping (Shots are added as soon as you reach the settings in register 5 and 6) 7. Triplet Shot Ramping (fires 3 shots every time the trigger is pulled. This speeds up the faster you pull the trigger) 8. PSP1 (3 shots semi then fast ramping) (no need to set register 6 as this feature is built in. However, you can set the AFA ROF in register 5) 9. PSP2 (3 shots semi then super-fast ramping) (no need to set register 6 as this feature is built in. However, you can set the AFA ROF in register 5) 10. PSP3 w/Triple Shot ramping (3 shots semi then fires 3 shots every trigger pull) (no need to set register 6 as this feature is built in. However, you can set the AFA ROF in register 5) 11. NXL (3 shots then full auto) 12. Breakout (Full Auto then fast ramping. Settings in registers 5/6 are honored) 13. OMFG (cant really explain it but it is amazing) WARNING: Don't stand behind your own players when using this one. 14. NXL Breakout First shot is full auto then 3 shots semi then full auto again. We have no idea why we do this stuff
2	30	Rate of Fire: This is the GLOBAL rate of fire. This controls the MROF in all modes with the eye on. IF register 11 is set to 1 this will also be your EYE off MROF. Otherwise your eye off MROF is controlled by the number you enter in register 11
3	10	Electronic Anti Bounce: A higher setting will keep the gun from firing extra shots with each trigger pull.
4	10	Dwell: Bolt Forward Duration. Length of time the bolt stays forward
5	5	AFA ROF: 1 = off, 2 and above is the rate of fire that must be reached and maintained before the advanced firing modes activate.
6	3	AFA Shot Count: Actual number of trigger pulls before ramping activates
7	15	Fire Hold Off: Delay before the gun will fire again after cycling, in ms
8	5	Eye Hold Off: Delay before the gun will fire after seeing a ball, in ms. If you are using a slow hopper it might be necessary to increase this to avoid chopping.
9	1	Anti Bolt Stick: This is the time the board waits before increasing the dwell to compensate for a gun that has an issue with bolt stick. NOTE: Using this feature on a gun without this issue will result in the first shot being hotter. 1 = off 2 = 5s 3 = 10s 4 = 15s
10	5	Anti Bolt Stick Time: This is the increase in dwell when register 9 is engaged.
11	1	Eye Off Rate Of Fire: 1 = rate set in register 2, 2 and above equals the maximum rate of fire when the eyes are turned off. Example: If this register is set to 1 then the rate of fire you select in register 2 will be the same with the eyes on or off. If this is set to 11 then your eye off rate of fire will be a maximum of 11 bps.
12	1	ROF Additions in .20 of a second: 1 = off, 2 = .20, 3 = .40, 4 = .60, 5 = .80
13	1	Disable Eye thru trigger: 1 = yes, 2 = no (this feature allows you to turn the eyes off by holding the trigger back for 2 seconds)
14	1	Clearing Shot: 1 = yes, 2 = no (This allows you to fire a ball if you hold the trigger back for ¼ of a second in the event the eyes do not see a ball)
15		Eye Statue on boot up: 1 = on 2 = off
16	10	Anti Mechanical Bounce - The higher setting will eliminate bounce caused by excessive gun movement. We have found that a properly setup trigger and proper shooting techniques is just as good and moving this register to a higher setting.
17	10	Debounce Filter