



WWW.PATRIOTMEMORY.COM

QUICK START GUIDE

PLAYSTATION 4

1. Plug in the PXD to a USB port on the console.
2. Go to settings in your PS4.
3. Select devices.
4. Select USB storage devices (The console should already recognize the drive as PXD).
5. The console will tell you the drive needs to be formatted and if you'd like to proceed.
6. Answer Yes, the drive is reformatted.
7. It will be set as the default drive.
8. To stop using it, user goes to settings and choose "stop using PXD" as storage.