

Service Schedule

Item	Routine	Every Ride	Mini-Service	Service Schedule is calculated by kilometres run or by time in months since previous service (whichever occurs first).				
			1,000 kms or 1 month	2,500 kms or 6 months	5,000 kms or 12 months	10,000 kms or 12 months	15,000 kms or 12 months	
Brake Fluid (front & rear)	Check brake fluid level.	✓	✓	✓	✓	✓	✓	✓
	Replace brake fluid (every 24 months).					Every 24 months		
Front & Rear Brake Lever Pivot Shaft	Check operation and for fluid leakage. Replace brake pads if necessary.	✓	✓	✓	✓	✓	✓	✓
	Apply silicon grease lightly. Check operation and for oil leakage. Service as necessary.		✓	✓	✓	✓	✓	✓
Wheels	Check run-out, and for damage. Replace if necessary.			✓	✓	✓	✓	✓
Tyres	Check air pressure at 20°C <small>XI FR 28PSI, RR 32PSI Arthur FR 32PSI, RR 32PSI NKD FR 32PSI, RR32PSI</small> Correct if necessary	✓	✓	✓	✓	✓	✓	✓
	Check tread depth. Replace if necessary.			✓	✓	✓	✓	✓
Fasteners	Check all fasteners, bearings and fittings operation. Refer to torque adjustment chart. Replace / adjust if necessary.		✓	✓	✓	✓	✓	✓
Front & Rear Shock Absorber Assembly	Check operation and for oil leakage.	✓		✓	✓	✓	✓	✓
Throttle Grip	Check operation and adjust if necessary.	✓		✓	✓	✓	✓	✓
Ignition/Saddle Locks	Check operation. Apply grease on pivot. Replace if necessary.			✓	✓	✓	✓	✓
Power connector	Check operation and adjust / lubricate with non-conductive lubricant as necessary.	AS REQUIRED						

You can select to carry out the one month mini-service or 6 month service. If you choose the mini service the first scheduled service will be 12 months later.