


ESE 001-625 Single Lock Hand Seamer

Parts List

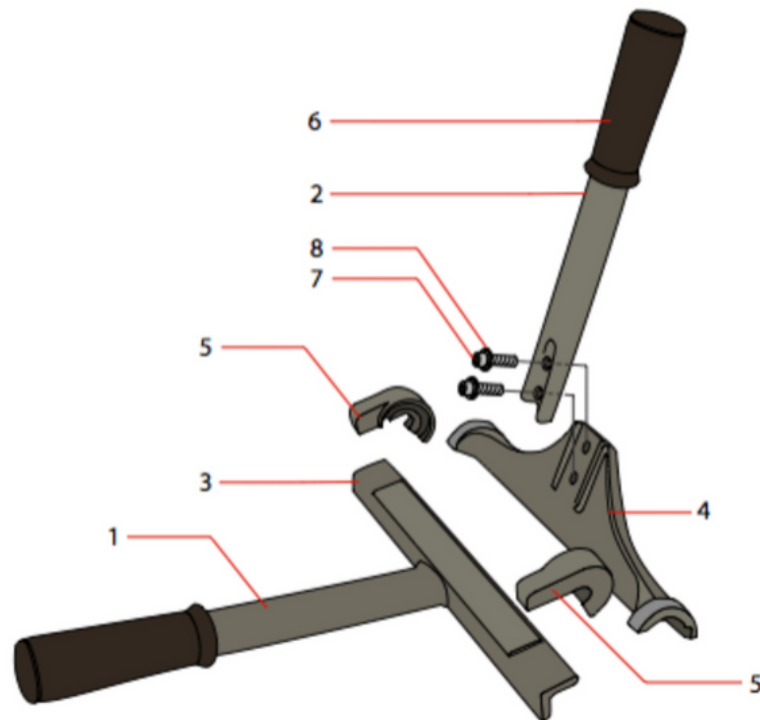

1	Angle Handle	SL-01
2	Pivot Handle	SL-02
3	Angle	SL-03
4	Pivot	SL-04B
5	End Plate - Left	SL-05L
5	End Plate - Right	SL-05R
6	Rubber Grip	SL-06
7	M6x16 SHCS	SL-07
8	Schnorr Washer	SL-08