

PLEASE READ ALL INSTRUCTIONS AND WATCH RELATED VIDEOS BEFORE ASSEMBLY AND USE OF THE DOORLIFT.

WARNING:

1. Please take necessary caution when assembling the DoorLift.
2. It is necessary to keep the U channel in upper position when door is on. **FAILURE TO DO SO COULD RESULT IN INJURY.**
3. Make sure the Pop pin locating mount is securely in the hole of U channel shaft.
4. Keep your children and pets away when you remove door from Jeep with DoorLift.
5. Do not use DoorLift as a door storage device.
6. Use the DoorLift on level ground with a smooth surface. A slight incline or decline can be acceptable.
7. Always check to make sure your door release angle is 90 degrees, too small or too large an angle can cause paint scratches on your door.

RETURN INSTRUCTIONS

If you have questions or would like to make a return/need replacement parts please contact us first, we are more than happy to provide support. Leave us a message with your name and order number and we will solve your issue and make things right! We will get back to you as soon as possible

We are best reached by email: help@rollnjack.com

For returns PLEASE attach the return sticker provided in this box



How to
remove Jeep
door using
Doorlift



How to install
Jeep door
using Doorlift



Doorlift Assembly




For more products
please visit



RollnJack Youtube
Channel


DOORLIFT ASSEMBLY INSTRUCTION

A

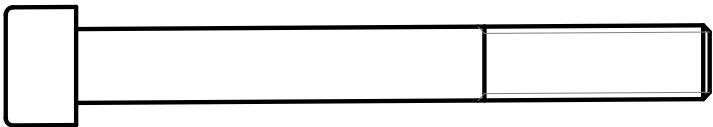


M10x100 (4X)

B

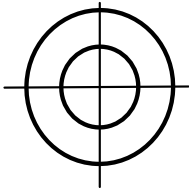


M10-Flat (4X)

C

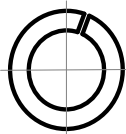


M10-Lock (4X)

D

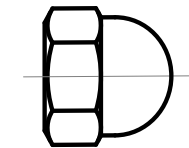


M10-Nut (4X)

E

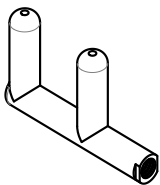


Door Support Arm (1X)

 F




Plastic Handle (1X)

G

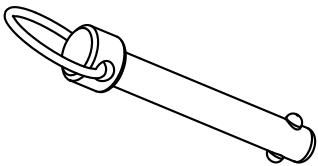


Ø8x60-Security bar pin (X1)

H

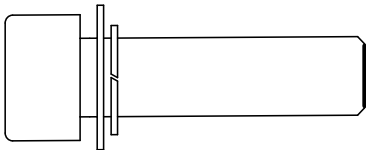


M10x40 (1X)

I

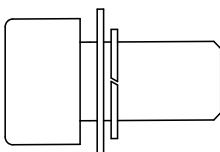


M10x20 (1X)


1

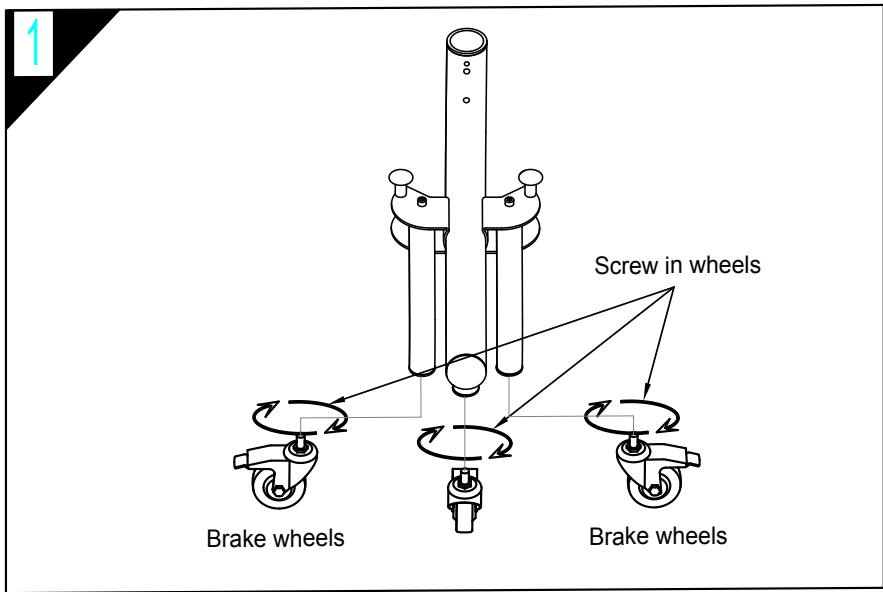


2

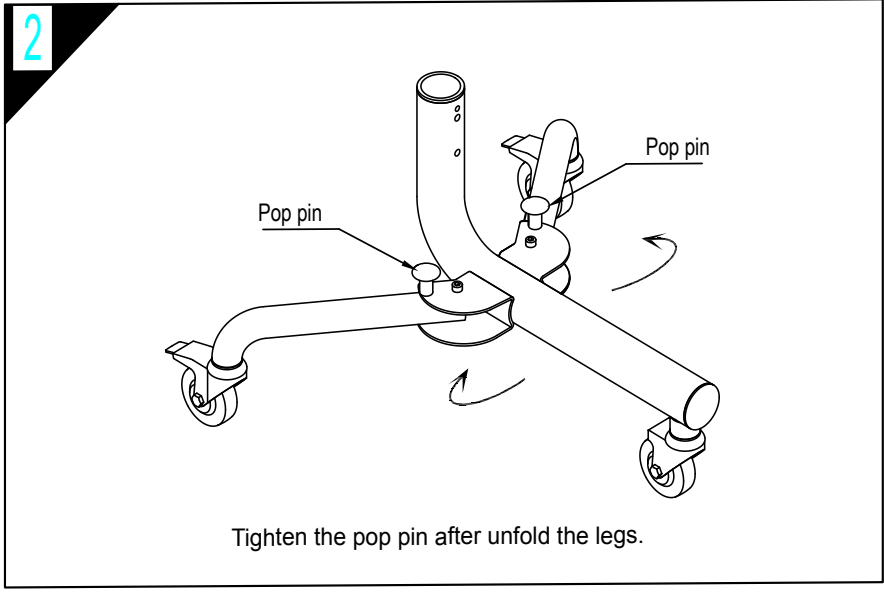


3

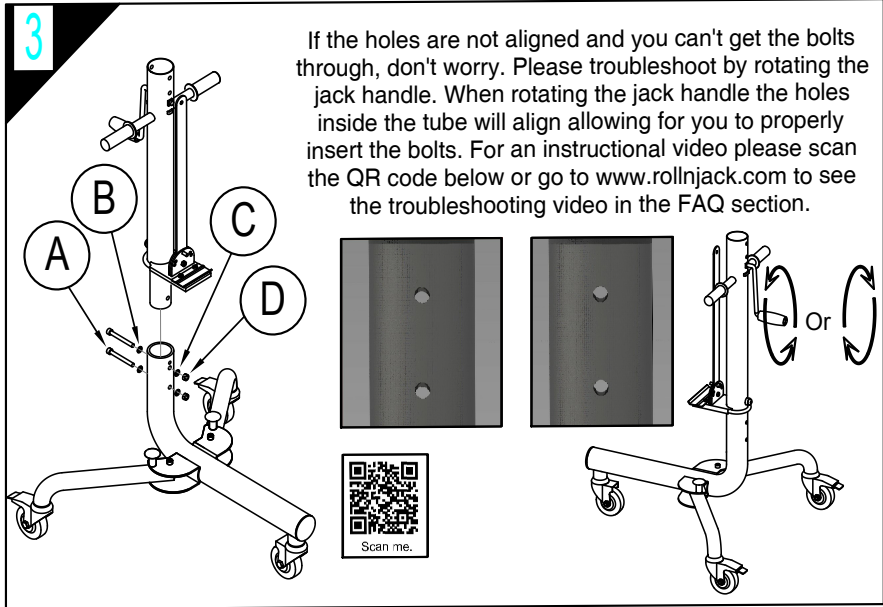


4

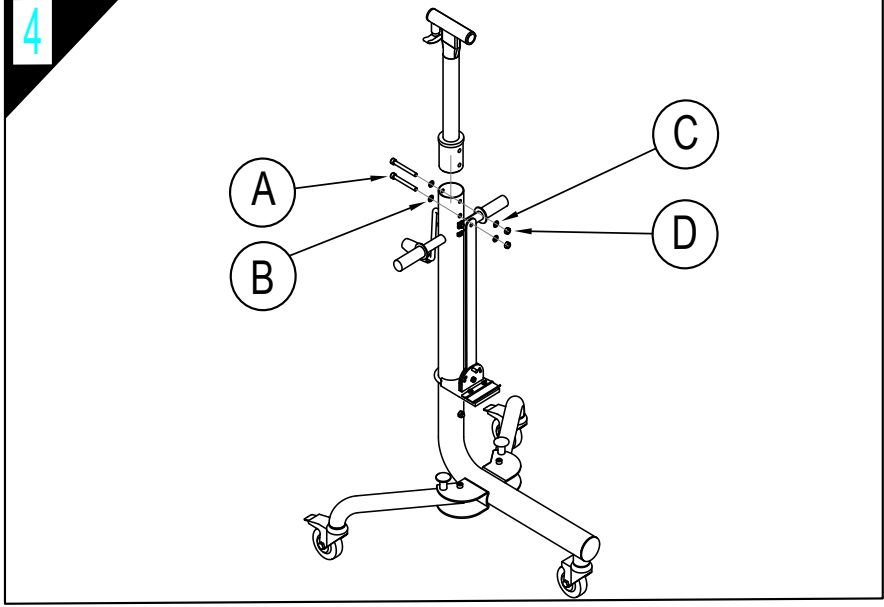

5

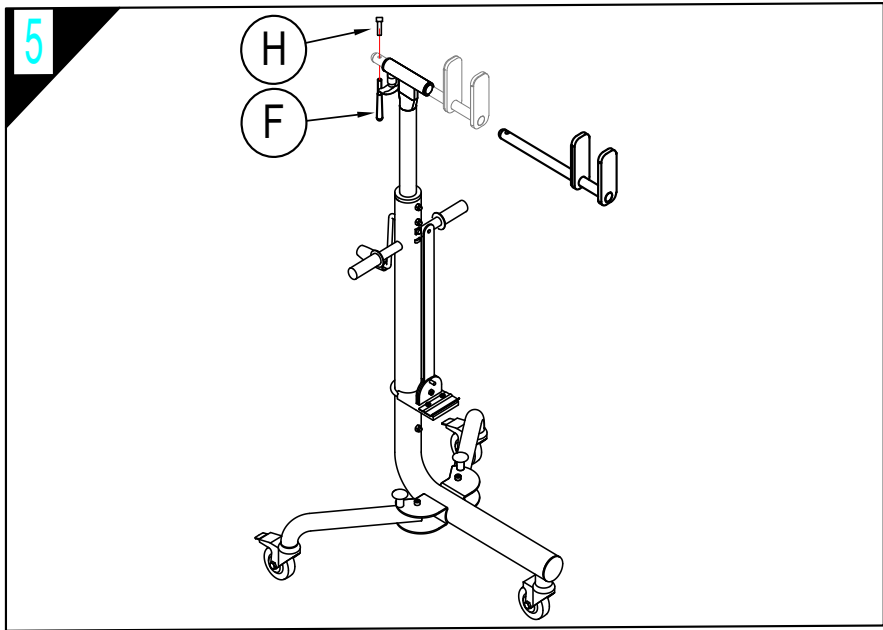

6

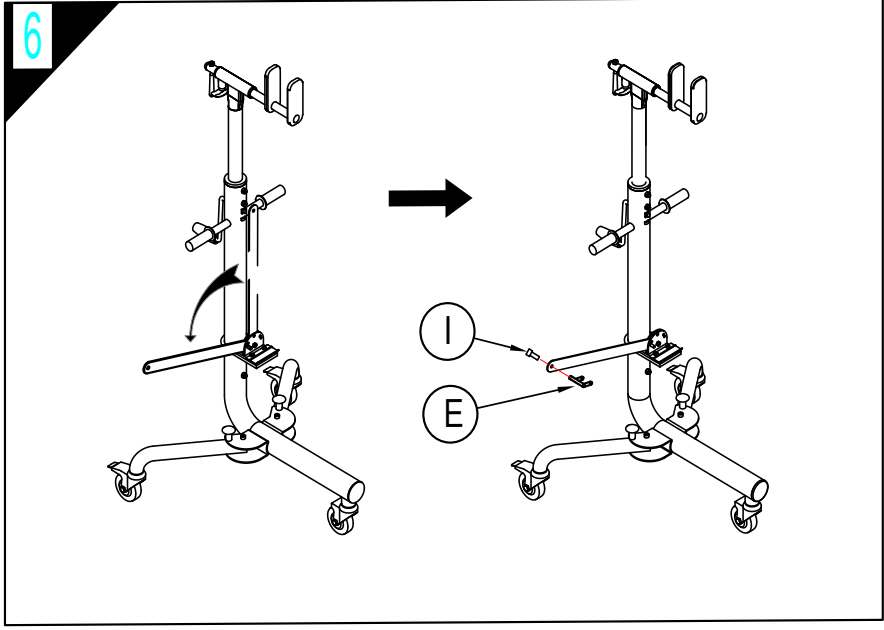


HOW TO REMOVE DOOR BY DOORLIFT


1

Prepare to remove the door from Jeep:

1. Roll down all the windows.
2. Remove both door hinge pin screws.
3. Remove wire harness (Check according to your Jeep model owner manual.)

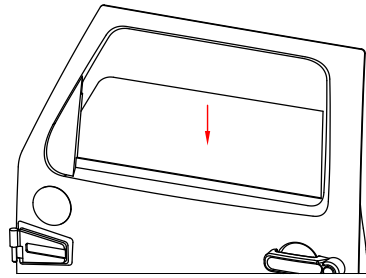


1

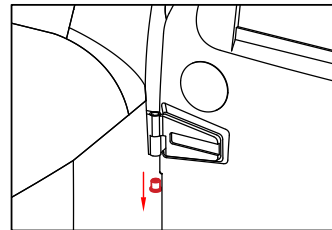

2


2

- 1 Driver side front door.
- 2 Driver side back door.
- 3 Passenger side back door.
- 4 Passenger side front door.

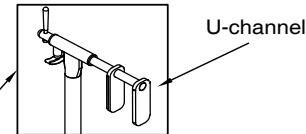

U-channel

Before removing the door from your Jeep, make sure the security bar is at the correct hole position on the Doorlift doorsupport plate. And U channel has to be downwards.

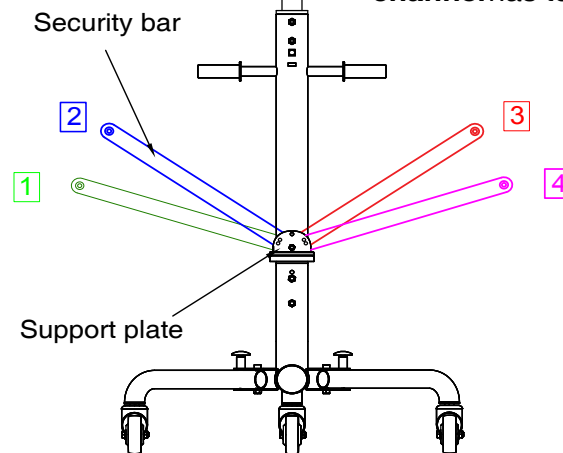


Security bar

Support plate

3


3.2 Before removing the door you must align your door at a 90° angle.

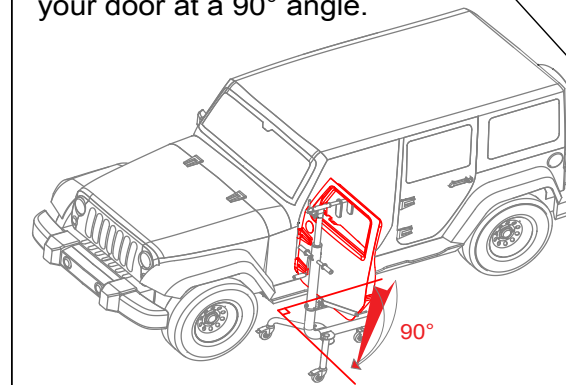

90°

90°

3.1 Put the Doorlift handle at a 90° angle with your Jeep.

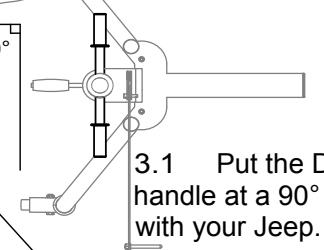


5


5 MOST IMPORTANT STEP: ALWAYS REMEMBER TO ROTATE THE U-CHANNEL AND LISTEN TO THE "POP!" SOUND OF THE POP PIN BEFORE START TURNING THE JACK HANDLE TO LIFT THE DOOR.

* Please go to www.RollINJack.com to see video demonstration of the above.

U-channel

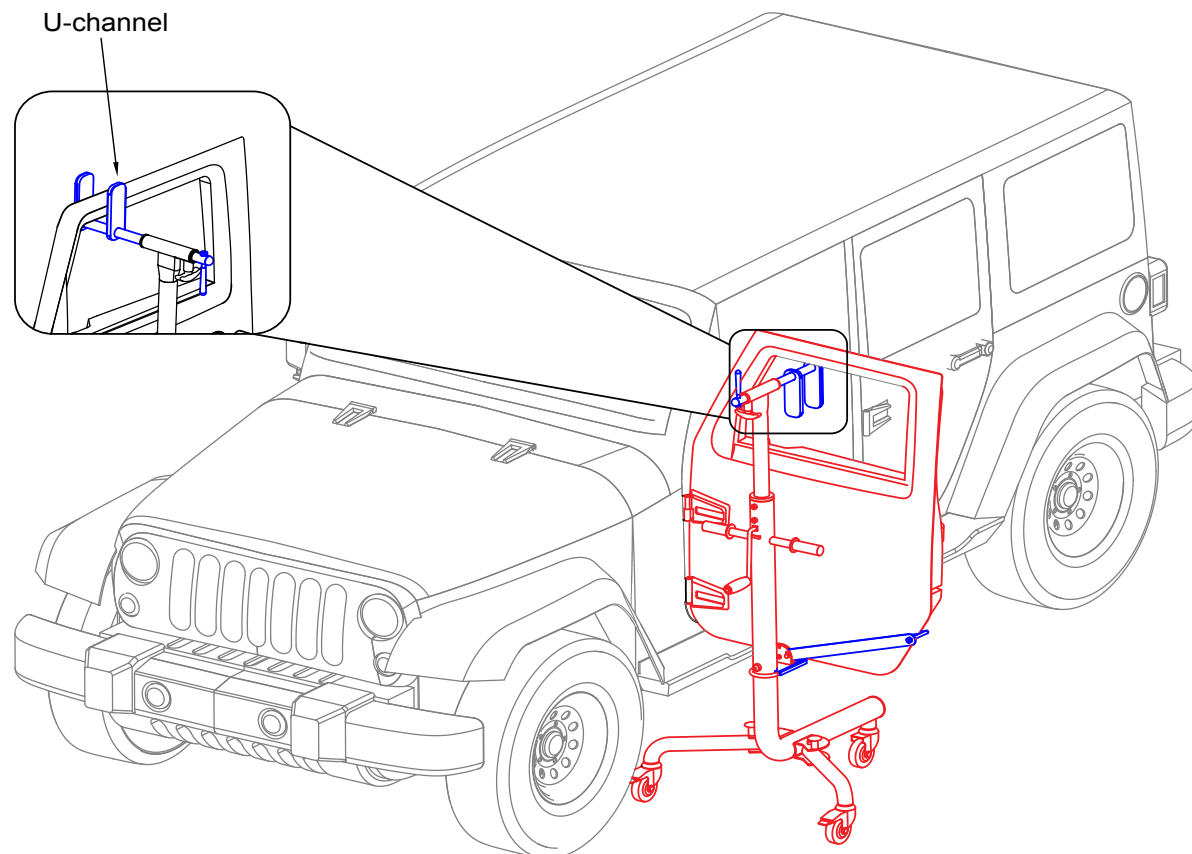

4

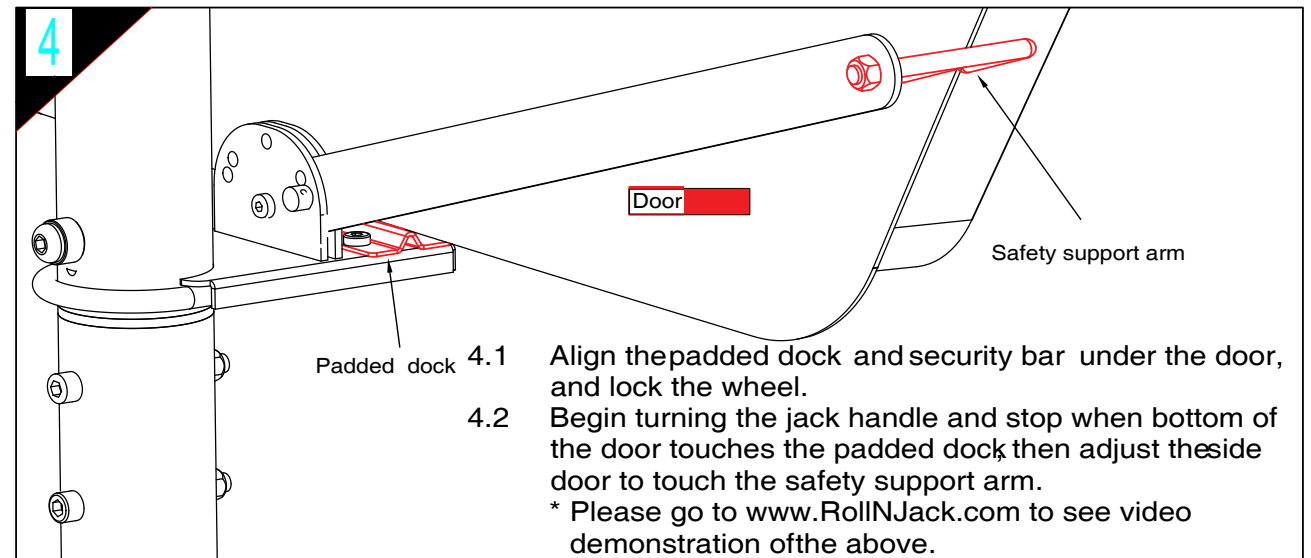

Padded dock

Door


Safety support arm

4.1 Align the padded dock and security bar under the door, and lock the wheel.

4.2 Begin turning the jack handle and stop when bottom of the door touches the padded dock then adjust the side door to touch the safety support arm.

* Please go to www.RollINJack.com to see video demonstration of the above.

6

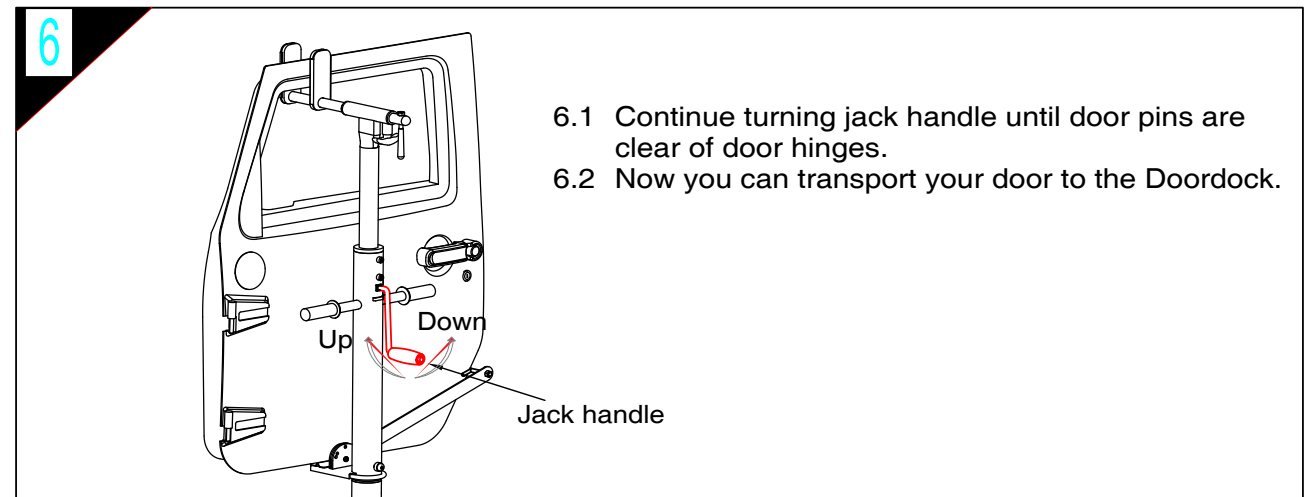

6.1 Continue turning jack handle until door pins are clear of door hinges.


6.2 Now you can transport your door to the Doordock.

Up


Down

Jack handle



HOW TO INSTALL DOOR BY DOORLIFT

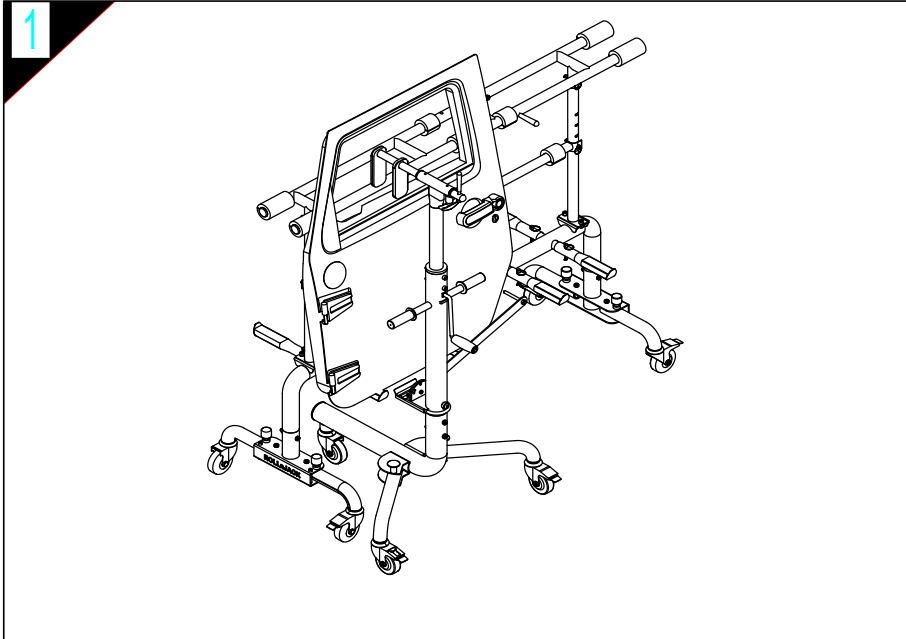


2 Before removing the doors from Door dock, make sure the security bar is at the correct hole position on the Doorlift door support plate. And U channel has to be downwards.
* Please go to www.Rollnjack.com for video demonstration.

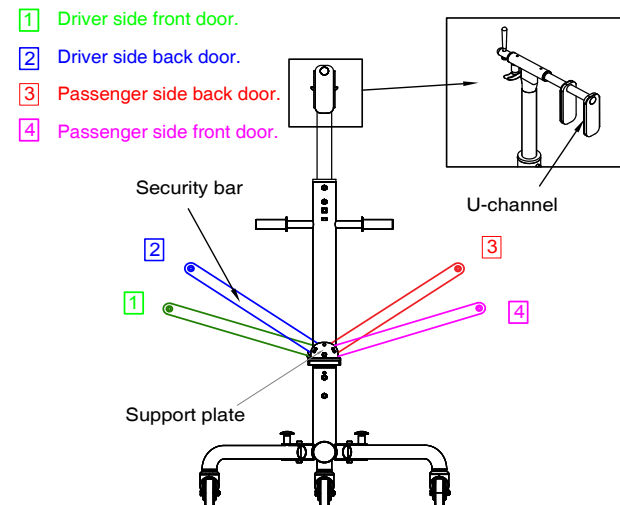


3 Align the padded dock under the door on Doordock.

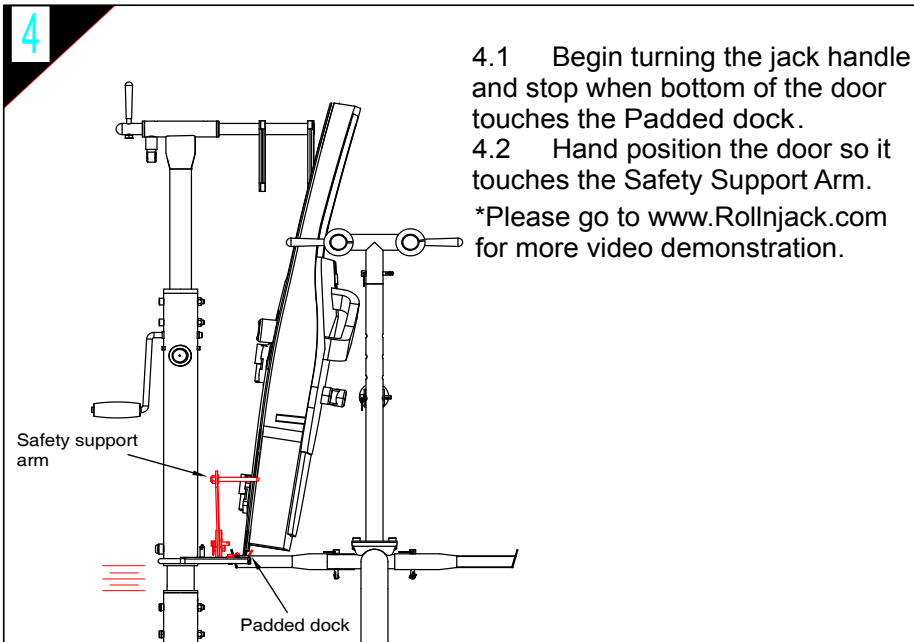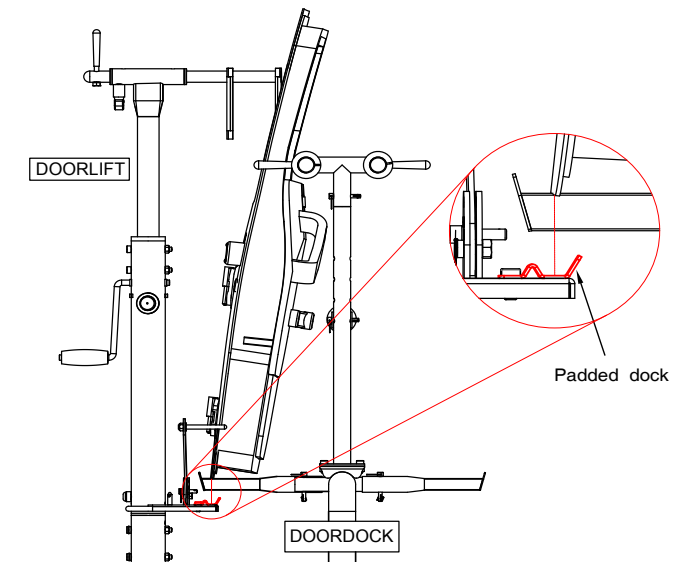


4.1 Begin turning the jack handle and stop when bottom of the door touches the Padded dock.
4.2 Hand position the door so it touches the Safety Support Arm.
*Please go to www.Rollnjack.com for more video demonstration.

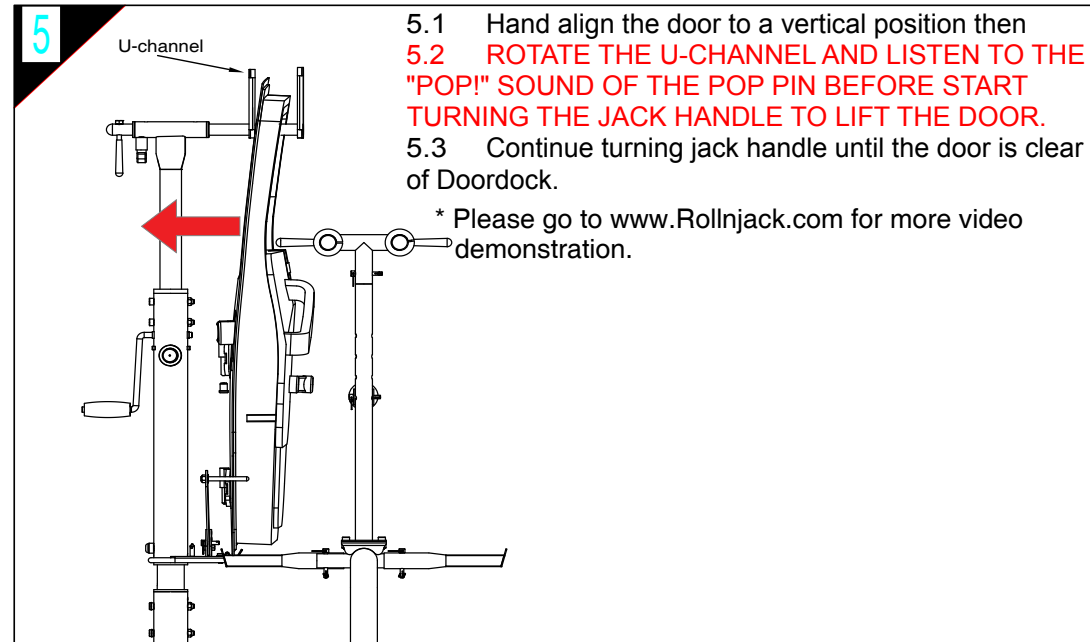


5.1 Hand align the door to a vertical position then
5.2 **ROTATE THE U-CHANNEL AND LISTEN TO THE "POP!" SOUND OF THE POP PIN BEFORE START TURNING THE JACK HANDLE TO LIFT THE DOOR.**
5.3 Continue turning jack handle until the door is clear of Doordock.
* Please go to www.Rollnjack.com for more video demonstration.

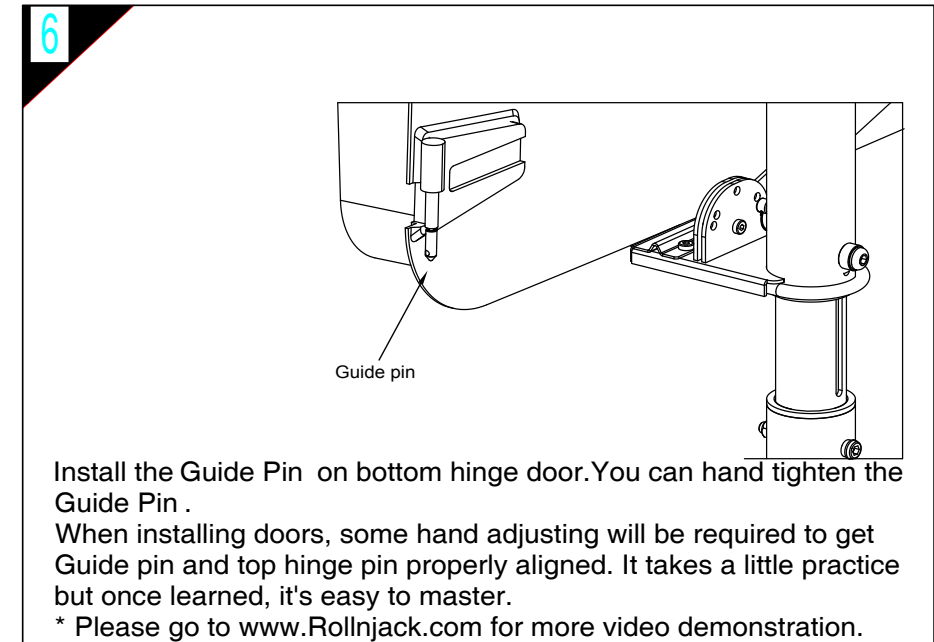


Install the Guide Pin on bottom hinge door. You can hand tighten the Guide Pin.
When installing doors, some hand adjusting will be required to get Guide pin and top hinge pin properly aligned. It takes a little practice but once learned, it's easy to master.
* Please go to www.Rollnjack.com for more video demonstration.

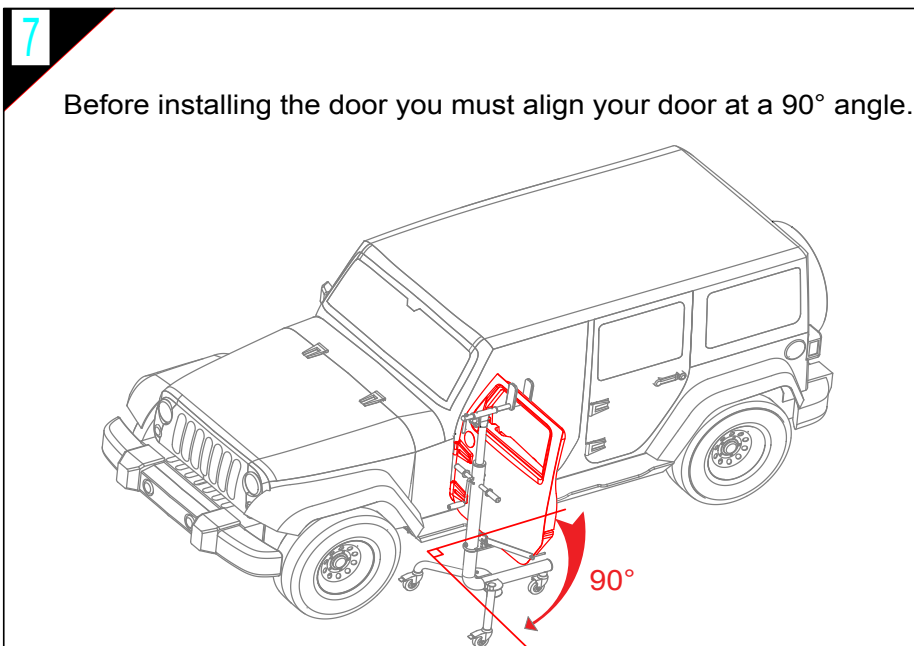

Before installing the door you must align your door at a 90° angle.

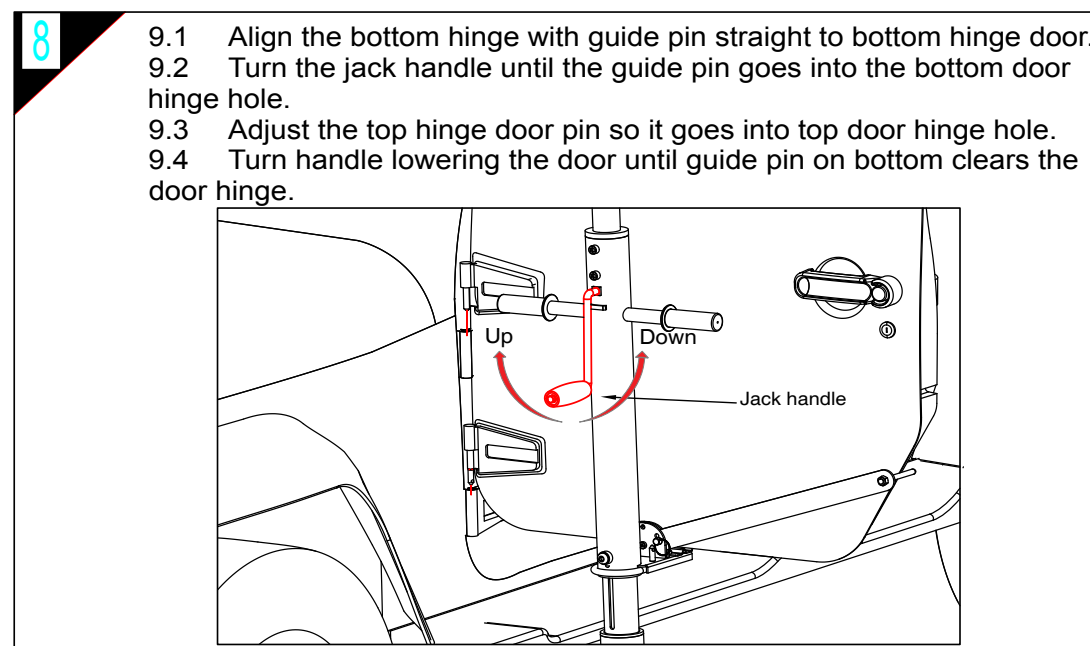

9.1 Align the bottom hinge with guide pin straight to bottom hinge door.
9.2 Turn the jack handle until the guide pin goes into the bottom door hinge hole.
9.3 Adjust the top hinge door pin so it goes into top door hinge hole.
9.4 Turn handle lowering the door until guide pin on bottom clears the door hinge.

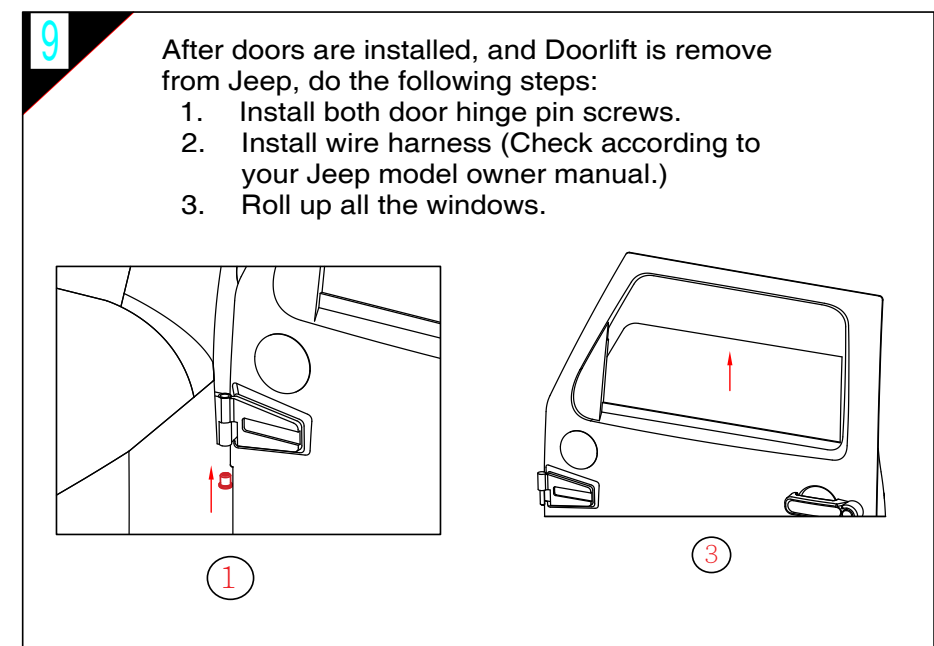

After doors are installed, and Doorlift is remove from Jeep, do the following steps:

1. Install both door hinge pin screws.
2. Install wire harness (Check according to your Jeep model owner manual.)
3. Roll up all the windows.



Warranty

RollnJack warrants your product to be free from defects in metal tube materials and workmanship for lifetime from original date of shipment delivery to the address provided at checkout. All moving parts are covered under warranty for a period of twelve months. If you discover a defect in a product covered by this warranty, we will repair or replace the part(s) with new part(s). If repair is not possible, we will replace the item.

Exclusions

This warranty applies only to the original purchaser of the item. We do not cover warranty claims nor offer product warranties for items that were purchased by any persons other than the original purchaser.

This warranty covers defects in manufacturing discovered while using the product as recommended by the manufacturer. The warranty does not cover loss from theft, nor does coverage extend to damage caused by misuse, abuse, unauthorized modification, improper storage conditions, weather, or natural disasters. This warranty does not cover parts subject to normal wear and tear replacement requirements, such as caster wheels worn from constant use.

RollnJack will not be held liable to you or any other party for any damages incurred as a result from improper use and subsequent failure of this product. Damages excluded from this warranty include, but are not limited to: damage to vehicle, other equipment, dwelling, and incidental or consequential damages arising from the use, or inability to use this product. Should this product fail, your sole recourse shall be repair or replacement, as described in this warranty statement. In no way will RollnJack be liable for more than the purchase price of your product, not to exceed the current list price, and excluding tax and shipping and handling charges.

RollnJack disclaims any other warranties, express or implied.

How To Obtain Service Under This Warranty

Please complete your warranty signup on our website at rollnjack.com/warranty

or scan



Your warranty is valid once you complete the form and you confirm that you are the original purchaser of the item.