

# Remsafe Cable Lock

## World's smallest cable restrictor



- ✓ Suitable for all window types and materials
- ✓ Manufactured to ISO 9001 standard
- ✓ Complies with Australian, U.S and U.K. standards
- ✓ Tested to withstand a horizontal force of 4428N (451kg)

To ensure proper installation of the Remsafe Cable Lock, each installation site must be surveyed to determine the appropriate screw types and condition of each window frame.

The Remsafe Cable Lock must not be fitted to decayed or corroded materials or to structures that have in any way deteriorated and/or are in a poor condition.

### **The Remsafe Cable Lock is supplied with:**

- 4 x timber gauge screws (for timber window frames only)
- 4 x metal gauge screws (for metal window frames only)

### **Installation:**

1. Use a tape measure to measure a maximum opening distance of 12.5cm from the fixed frame to the open window frame. **The opening distance must not exceed 12.5 cm at any point.**
2. Secure the lock body on the fixed frame using either the timber screws or metal screws depending on window type. The lock body may be fitted either horizontally or vertically.
3. Hold the cable bracket on the open window frame in the fully extended position to ensure the opening distance does not exceed 12.5cm.
4. Using either the timber or metal screws secure the cable bracket to the open window frame.
5. Place screw cap over the lock body hole.
6. Test lock function by locking and unlocking with the key. Ensure the bullet head is securely locked into the lock body. The key must be used to lock the lock. Ensure the opening distance does not exceed 12.5cm.

### **Maintenance:**

The manufacturer recommends maintenance is carried out on the Remsafe Cable Lock by a licensed tradesman every six months. Consideration must be given to the local environment and maintenance carried out accordingly.

1. All screws should be checked to ensure they have not loosened. Loose screws must be tightened.
2. The lock body, cable and brackets should be checked for any signs of corrosion or loss of function. Manually pull on cable and lock body to ensure against excessive movement. Faulty locks should be replaced immediately.

**NEVER LEAVE THE KEY UNATTENDED IN THE LOCK**

**Remsafe Window Locks offer safety solutions for all window types.**

**Contact us for orders and enquiries on +61 2 9453 5625, email [info@remsafewindowlocks.com.au](mailto:info@remsafewindowlocks.com.au)  
or visit [www.remsafewindowlocks.com.au](http://www.remsafewindowlocks.com.au)**