 
 


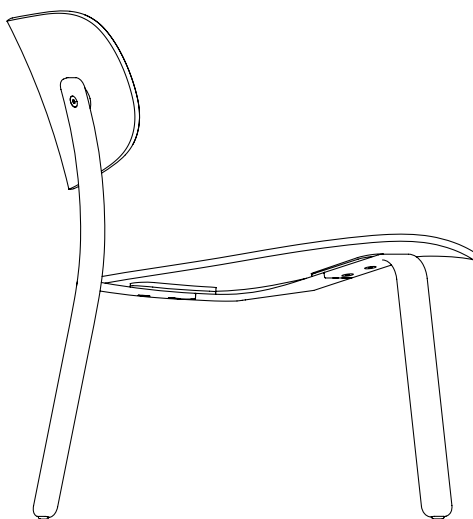

INSTALLATION GUIDE
SPRINGBACK lounge chair




PACKAGE CONTENT

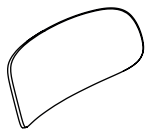


X1




X1

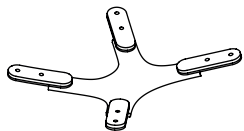


X1

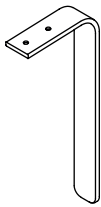


X2

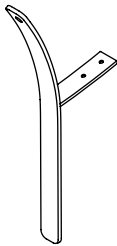

X2

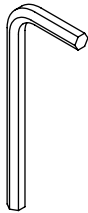


X1

 


X8






X2


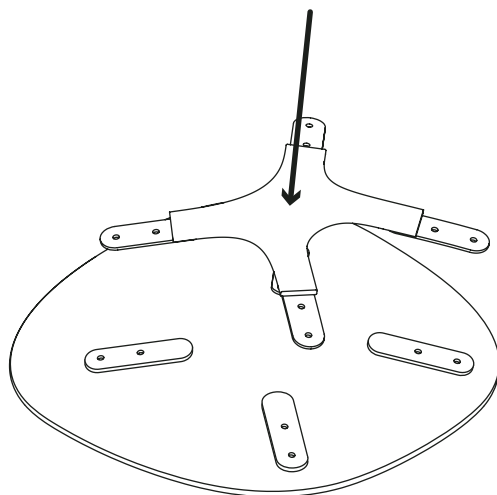


1. Place the cross on the bottom of the seat.

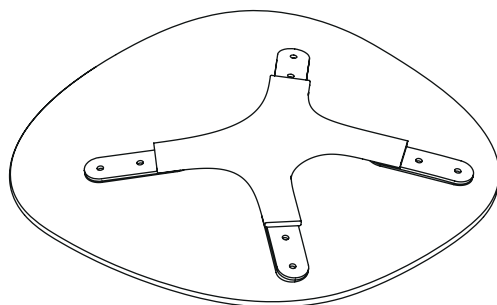


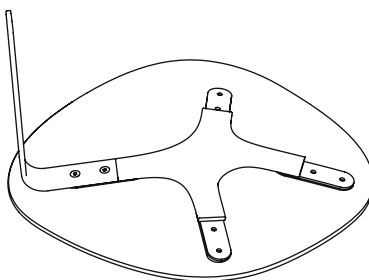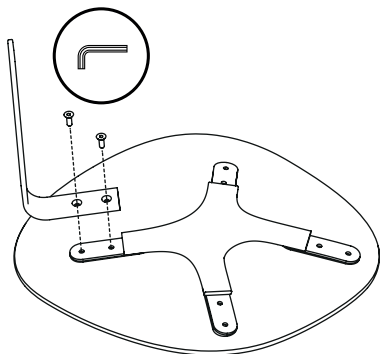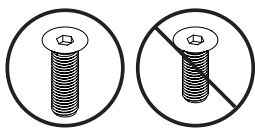


2. Screw the front legvs with
M6X20 screws (long screws).

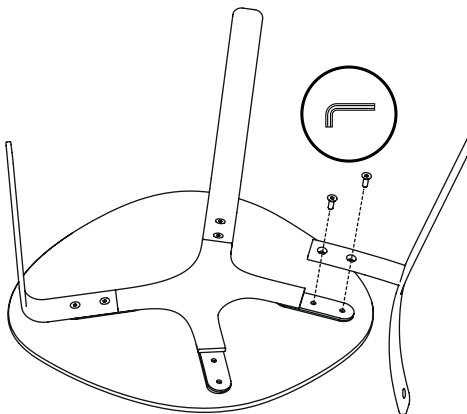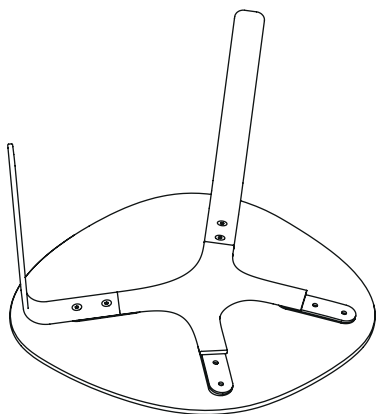



3. Screw the rear legs with
M6X20 screws (long screws).

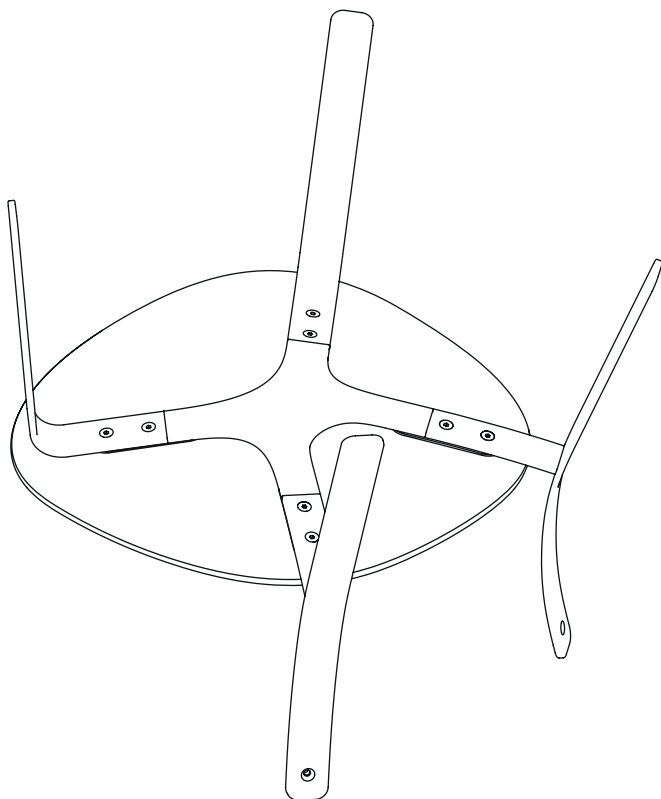

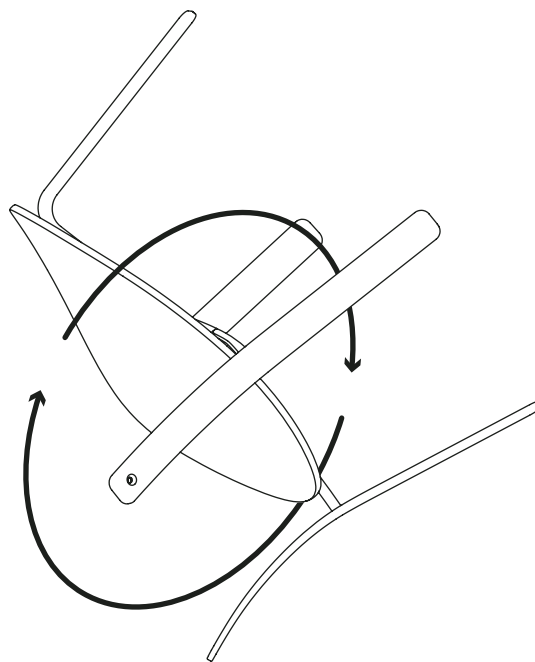

4. Flip the chair on its feet.

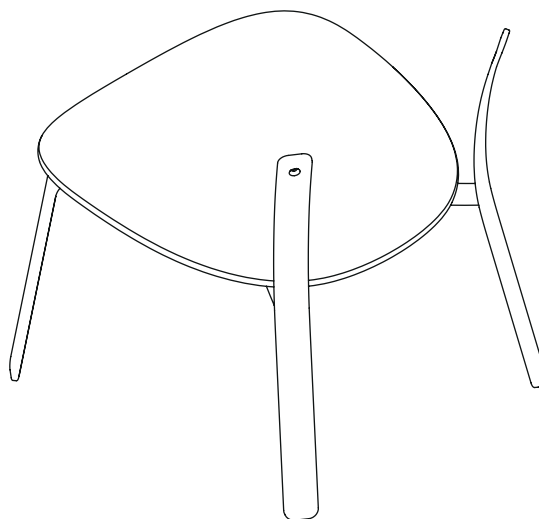

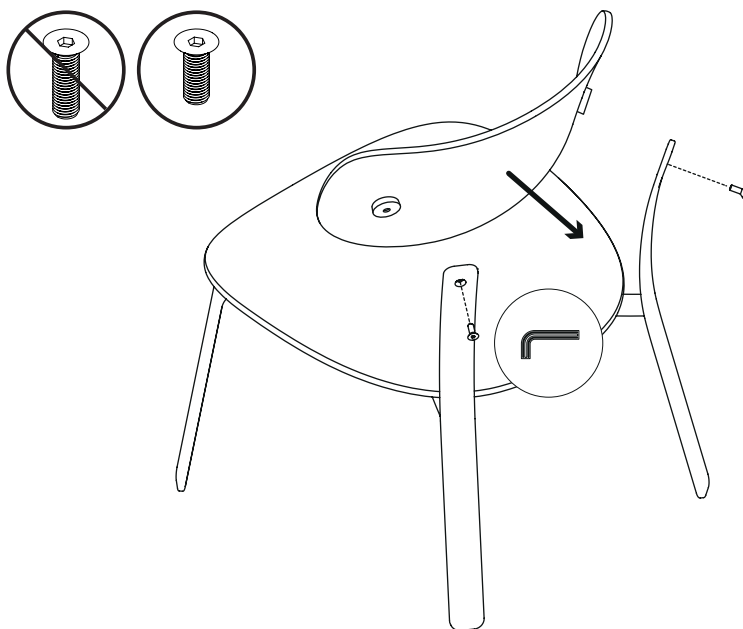

5. Fix the back rest of the SPRINGBACK lounge chair with M6X16 screws (short screws).

