




















 

 
## #88 ECLIPSE SAMPLING STATION PARTS LIST

PHOTO	PART NUMBER	DESCRIPTION
	X130	3/4" Cap, Handle, Screw Complete
134 Handle (1), 9452-88 Screw (1), 88-24 Washer (1), 137 Brass Screw (1), 124 Iron Cap (1) 344-N Bolt (2) 344-B Nut (2)		
	134	Iron Handle
	9452-88	Handle Screw
	88-24	Handle Washer
	137	3/4" Low Lead Brass Screw
	124	3/4" Iron Cap
	344-B	Iron Cap Bolt (2 per cap)
	344-N	Iron Cap Nut (2 per cap)
	915	Iron Neck
	918	Low Lead Brass Elbow
	88-3	Low Lead Brass Nozzle

	88-25	Vinyl Cap to Protect 88-3 Nozzle
	322	3/4" Iron Slide
	1GAL	1" Galvanized Exterior Pipe (price per foot)
	3/8BP	3/8" Operating Rod (price per foot)
	X8813-NS	New Style Plunger Complete (3/8" Female)
88-13-Plunger (1), 88-21 O-ring (1), 418-B Beveled Washer (1), 311 Nut (2)		
	88-13	Low Lead Brass Plunger 3/8" Female
	311-SS	Plunger Tip Nut (2 per plunger)
	X884	#88 Repair Kit
88-21 O-ring (1), 418-B Beveled Washer (1)		
	88-21	O-Ring for Plunger
	418-B	Beveled Seat Washer
	9435	Sampling Point Cover
	88-7	Copper Tubing 1/4" (price per foot)

	88-9	Low Lead Brass Needle Valve
	88-8	Low Lead Brass Elbow 1/4" Tube x 1/8" Pipe
	88-10	Brass Valve Body - 1/4"
	X883	Aluminum Cover and Base Complete
88-1-A Front Cover (1), 88-1-B Back Cover (1), 88-2 Base (2), 88-4 Bolt (4), 9465-88 Lock Washer (4), 88-5 Nut (4), 88-16 Bolt (2), 88-14 Washer (8), 9461-88 Lock Washer (2), 77Q-88 Nut (2)		
	88-16	Cover to Base Bolt (2 per assembly)
	88-14	Spacing Washer (8 per assembly)
	9461-88	Lock Washer (2 per assembly)
	77Q-88	Cover to Base Nut (2 per assembly)
	X881	Aluminum Cover Complete
88-1-A Front Cover (1), 88-1-B Back Cover (1), 88-6-AL Rivets (2)		
	88-1-A	88 Cover "A"
	88-1-B	88 Cover "B"
	88-6-AL	Rivets for #88 Cover (2 per case)

	X882	Aluminum Base Complete
88-2 Base (2), 88-4 Bolt (4), 9465-88 Lock Washer (4), 88-5 Nut (4)		
	88-2	88 Base
	88-4	Bolt for Base (4 per base)
	9465-88	Lock Washer (4 per base)
	88-5	Nut for Base (4 per base)
	88P-1S	Small Pump
	Z88PS	Large Pump
	88-3T	Low Lead Brass Threaded Nozzle
	88-26	Vinyl Cap to Protect 88-3T Nozzle
	1BP	1" Brass Exterior Pipe (price per foot)
	88-10-LL	Low Lead Brass Valve Body - 1/4"
	3/8CT	Copper Tubing 3/8" (extreme cold climate)
	3/8BV	3/8" Brass Ball Valve (extreme cold climate)

	88-9B1	3/8" Brass Elbow (extreme cold climate)
	88-9C	3/8" Brass Adapter (extreme cold climate)
	88-17	Clamp (extreme cold climate)
	88-9A	1/4" Low Lead Brass Ball Valve
	88-9B	1/4" X 1/4" Low Lead Brass Adapter
	3PN	3" Pipe for Pedestals (price per foot)
	88-23	Bolt for Pedestals (4 per pedestal)
	855	Coupling for 88 with Pedestal
	88-1-A-LOGO	88 Cover "A" with Logo (Specify Logo)
	X881D	Plastic Dome Assembly Complete
88-1D Dome (1), 882 Pipe Bracket (1), 883 U-Bolt (1), 884 Base Flange (1), 886 Lock Bracket (1), 887 Spring Pin (3), 889 Screw Nail (2), 3P Pipe (.625 feet), 344-B Bolt (2), 88-14 Washer (2)		
	88-1D	Plastic Dome
	882	Pipe Holder Bracket
	883	1/4-20 U-Bolt w/ Nuts

	884	Base Flange
	886	Lock Bracket
	887	Spring Pin - 1/4" x 7/8" (3 per flange)
	889	Screw Nail - #8 x 1/2" (2 per bracket)
	885	Pedestal Flange
	X8813-RETRO	Plunger Complete to Retrofit 1/4" Female
88-13-RETRO Plunger (1), 88-21 O-ring (1), 418-B Beveled Washer (1), 311-SS Nut (2)		
	X884-OLD	#88 Repair Kit 1/4" Female Plunger
88-21 O-ring (1), 418-A Flat Washer (1), 418-B Beveled Washer (1)		
	418-A	Flat Seat Washer
	X8813-FEMALE	Plunger Complete 3/8" Female Threads
88-13-FEMALE Plunger (1), 88-12 O-ring (1), 418-A Flat Washer (1), 418-B Beveled Washer (1), 311-SS Nut (2)		
	88-12	O-ring for X8813 (Male or Female)
	X884-FEMALE	#88 Repair Kit 3/8" Female Plunger

88-12 O-ring (1), 418-A Flat Washer (1), 418-B Beveled Washer (1)		
	X8813-MALE	Plunger Complete 1/4" Male Threads
88-13-MALE Plunger (1), 88-11 O-ring (1), 88-12 O-ring (1), 418-A Flat Washer (1), 418-B Beveled Washer (1), 311-SS Nut (2)		
	X884-MALE	#88 Repair Kit Male Plunger
88-11 (1), 88-12 O-ring (1), 418-A Flat Washer (1), 418-B Beveled Washer (1)		
	88-11	O-ring for X8813-MALE
	88-10/OLD	Brass Valve Body - 3/8"
	88-1P	Old Plastic Box for #88
	88-1PK	Key - Old #88 Plastic Box
	88-1PL	Old Plastic Box Lock Assembly
	88-20	Clamp for Old Plastic Box