


# ELECTRONIC TOILET SEAT

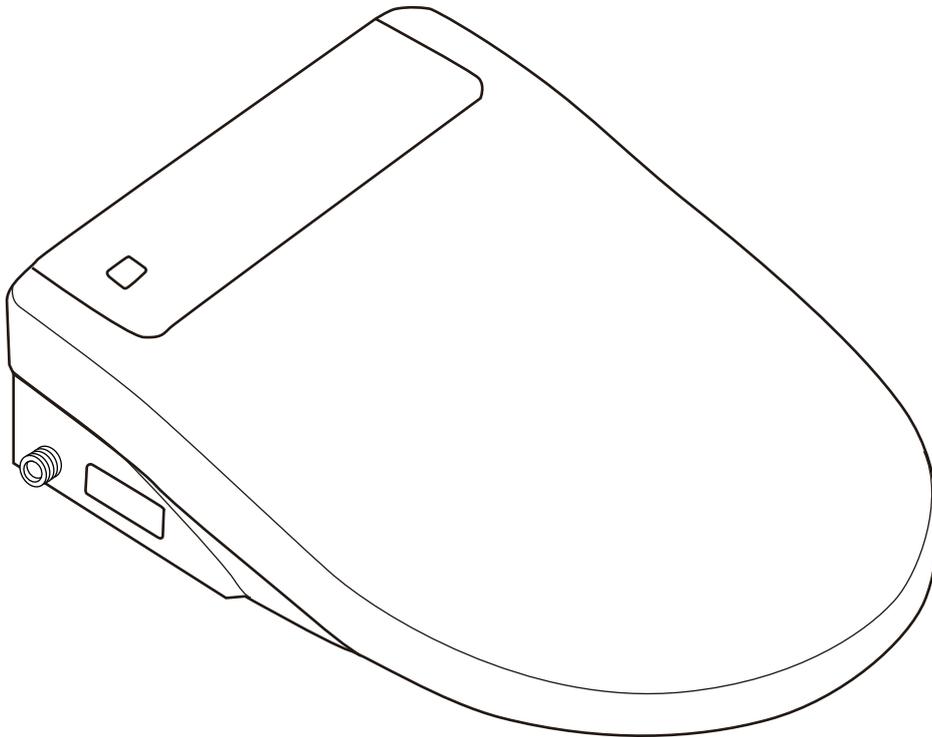

**V8100/V8100-01/V8100-02/V8100-03/V8100-04**

## **Installation Manual**

- Thank you for choosing our products.Please read the instructions carefully before installation and keep it available for future maintenance or reference.
- Our company reserves the right of final interpretation for this manual.  
The manual is subject to change without notice.

# Content

## Introduction

<b>Important Safeguards</b>	01
<b>Technical specification</b>	03
<b>List of packing</b>	04
<b>Parts identification</b>	05

## Operation

<b>Installation instructions</b>	06
1.Installation dimension	
2.Installation of mounting plate	
3.Installation and disassembly of main unit	
4.Connecting the water supply pipe	
<b>Usage instruction</b>	08
1.Checking the power and water supply	
2.Function illustration of keys in main unit and actuator	
3.Function illustration of keys in remote-control and LCD display instruction	
<b>Daily maintenance</b>	10
1.Main unit maintenance	
2.Spray nozzle maintenance	
3.Inlet filter cleaning	
4.Tank anti-freezing and anti-bacterial maintenance	
<b>Troubleshooting Guide</b>	12

## Others

<b>Warranty card</b>	13
----------------------	----

# IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:

- 1.The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- 2.Children being supervised not to play with the appliance.
- 3.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 4.Children shall not play with the appliance.
- 5.Cleaning and user maintenance shall not be made by children without supervision.

## READ ALL INSTRUCTIONS BEFORE USING



**DANGER**—To reduce the risk of electrocution:

1. Do not use while bathing.
2. Do not place or store product where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquid.
4. Do not reach for a product that has fallen into water. Unplug immediately.
5. Do not wash the main unit or electrical plug with water or detergent.
6. Do not handle the electrical plug with wet hands.
7. Do not put a hand or other staff over the outlet of air dryer or block the outlet of air dryer.
8. Never disassemble, repair or modify this product.
9. During installation, disassembly, repair and maintenance of the product, the power plug must be switched off and water supply be shut off.



**WARNING**—To reduce the risk of burns, electrocution, fire, or injury to persons.

1. Close supervision is necessary when this product is used by, on, or near children or invalids.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the product to a service center for examination and repair.
4. Keep the cord away from heated surfaces.
5. Never use while sleeping or drowsy.
6. Never drop or insert any object into any opening or hose.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Connect this product to a properly grounded outlet only. See Grounding Instructions.
9. Do not throw cigarettes and other burning stuff into toilet, otherwise it might cause fire.
- 10.This product is electric appliance, so it must be placed far away from water. Please don't drench urine and other liquid to it.
- 11.Do not lay on side or upside the product during the electrical circuit.
- 12.It is prohibited to use other electric appliances in the same socket.
- 13.It is forbidden to use the power extension or unstable loose outlet.
- 14.The old aging water supply hose can not be used, otherwise it might cause leakage, fire or electrical shock. Installation of the bidet seat should include specified components and new water supply hose.

# IMPORTANT SAFETY INSTRUCTIONS



**CAUTION**—Indicates that failure to follow the instruction may cause body injury or property damage.

1. Do not install or use the product in wet places as steam room etc.
2. It is recommended to use water-proof electrical outlet which should be installed in the place where is not easily got wet.
3. This product should be used with 110V-120V, 50/60Hz electrical current only, load current is at least 15A. Power plug must be equipped with ground fault circuit interrupter or ground fault electrical leakage protector or similar high sensitive, rapid type leakage switch (Rated sensitive current under 6mA).
4. When it thunders, it is strongly recommended to pull out the power plug.
5. Do not stand on ceramic toilet.
6. Ceramic toilet must install floor fixing bolt.
7. Do not stand on product unit, seat and cover.
8. Do not lean against the seat cover when using the product, to avoid damage.
9. This product is equipped with soft-closing seal cover. Heavy pressing or pushing may damage the soft-closing damper.
10. Do not use lacquer thinner, petrol, liquid medicine, detergent, insecticide, toilet cleanser and scrubbing brush to clean the product.
11. Exposure to direct sunlight is prohibited.
12. Only use tap water or potable water; otherwise it may cause chafing.
13. Do not connect water supply to heater outlet. Make sure inlet water temperature at 3~35 °C.
14. When the room temperature is under zero degree, please dry up the water tank, to avoid freezing.
15. Raise rest room temperature to prevent the toilet from damage due to freezing.
16. When move the product from cold or wet environment into normal room temperature, wait for 2 hours until the condensation water is fully volatilized. Doing so can prevent the product from electrical short-circuit.
17. When not using the product over three(3) days, drain the water out of the container and pull the electrical plug from the wall outlet.
18. Stop using the product and shut off the power when product malfunctions, please contact the service people for professional service.

## GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.



**DANGER** — Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.





This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided — if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.

## SAVE THESE INSTRUCTIONS



# Technical Specification

<b>Main Unit</b>	Rating pressure	110-120V,50/60Hz
	Rating power	1050-1250W
	Water pressure range	Minimum water pressure 0.07MPa (20L/min. flowing pressure). Maximum water pressure 0.8MPa (Hydrostatic pressure)
	Electrical wire	length is about 1.8m
<b>Cleaning device</b>	Container capacity	600ml
	Heating power	1000W
	Water temperature	6 different level adjustment
	Water volume	5 different level adjustment
	Cleansing mode	Rear cleaning/Rear massage,Front cleaning for ladies
	Spray cleansing location	5 different level adjustment
	Water pressure protector	Pressure stabilize ,Automatic pressure discharging
	Anti-fouling device	Speedy water discharge device, Automatic nozzle cleaning, Anti-syphon device, Anti-backflow device, Filter device
	Safety device	Temperature controller, Thermal fuse, Ground protection, Leakage protection device, Air burning preventer
<b>Drying device</b>	Warm wind speed	Over 4 m/s
	Warm wind temperature	6 different level adjustment
	Heating power	250W
	Safety device	Temperature sensor, Temperature controller, Thermal fuse
<b>Heated seat</b>	Surface temperature	6 different level adjustment
	Heating power	50W
	Open and close device	Quiet soft-closing device
	Heated burning protection	The seat temperature will automatically lower to level 1 in 10 minutes after using
	Safety device	Seat sensor, Temperature sensor, Temperature controller, Thermal fuse
<b>Intelligent</b>	Night light assembly	Intelligent,often in the off state
	Mute setting	Buzzeroff during night
	User ID setting	To avoid disturbance from remote controls by multi-user

# Packaging List
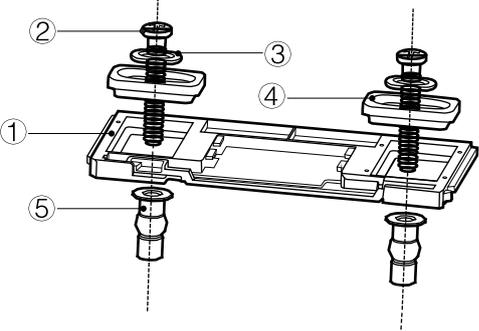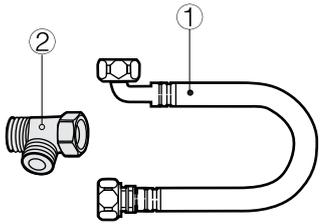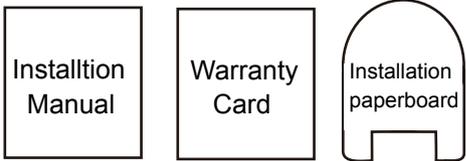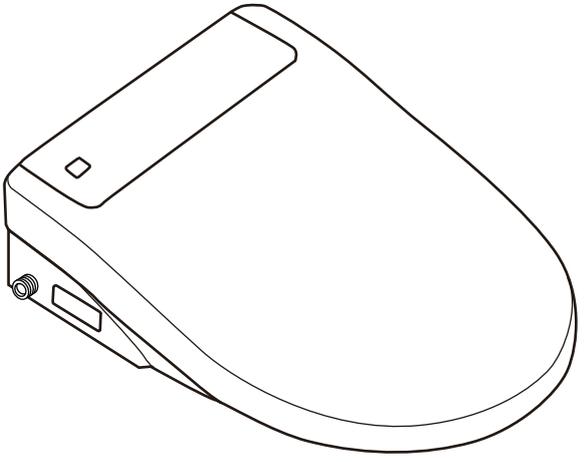
<p><b>Remote Control Panel Parts</b></p>		 <p>The appearance and function of the remote control are subject to the actual product</p>
<p><b>Base Plate Parts</b></p>	<ul style="list-style-type: none"> <li>① Base plate</li> <li>② Bolt (2pcs)</li> <li>③ Flat Washer (2pcs)</li> <li>④ Plastic Plate (2pcs)</li> <li>⑤ Expansion Nut (2pcs)</li> </ul>	
<p><b>Water Supply Assembly</b></p>	<ul style="list-style-type: none"> <li>① Water Supply Pipe (1pcs)</li> <li>② 3-way Connector (1pcs)</li> </ul>	
<p><b>Installtion Manual</b> <b>Warranty Card</b> <b>Installation paperboard</b></p>	<p>Installtion Manual</p> <p>Warranty Card</p> <p>Installation paperboard</p>	
<p><b>Main Unit</b></p>		


# Main unit identification

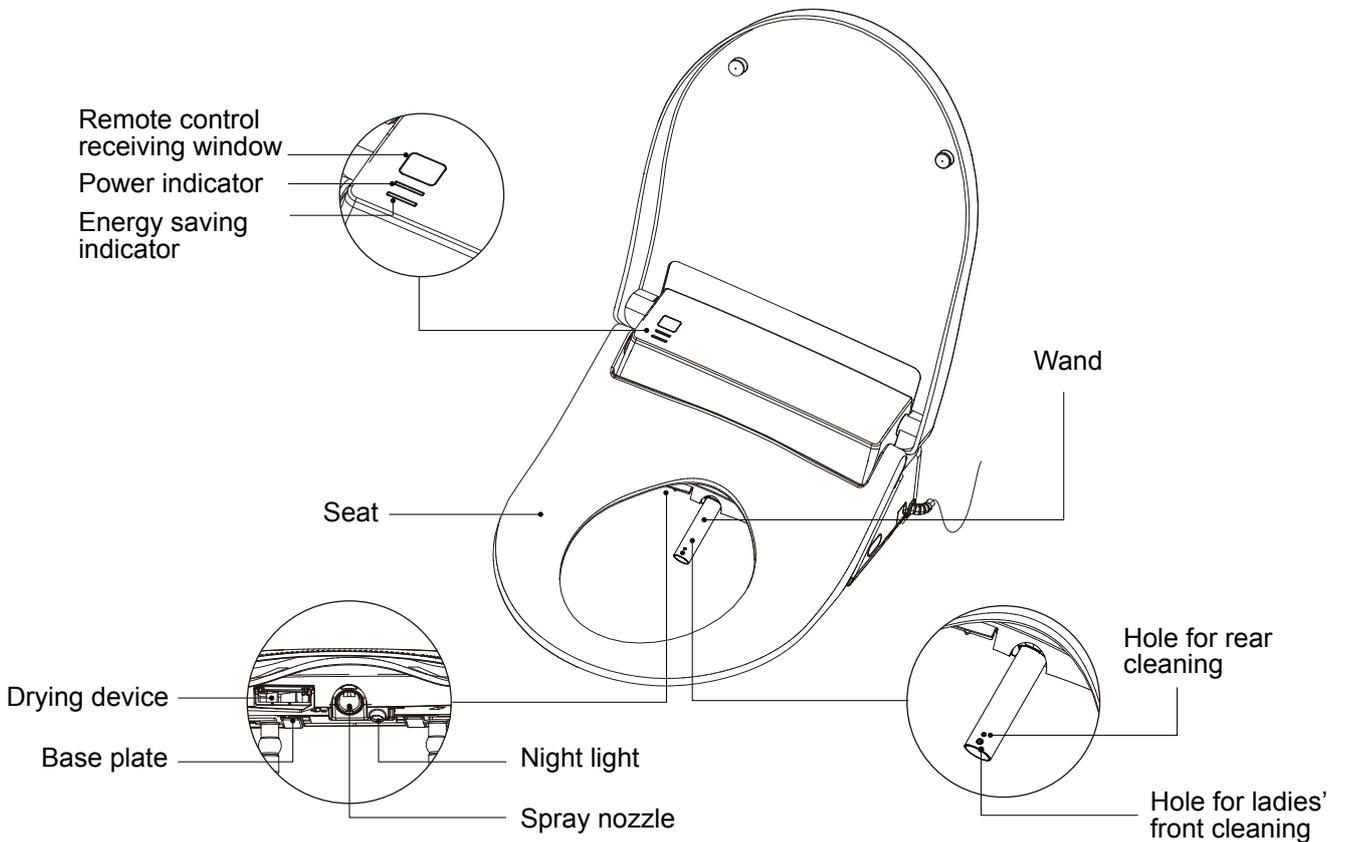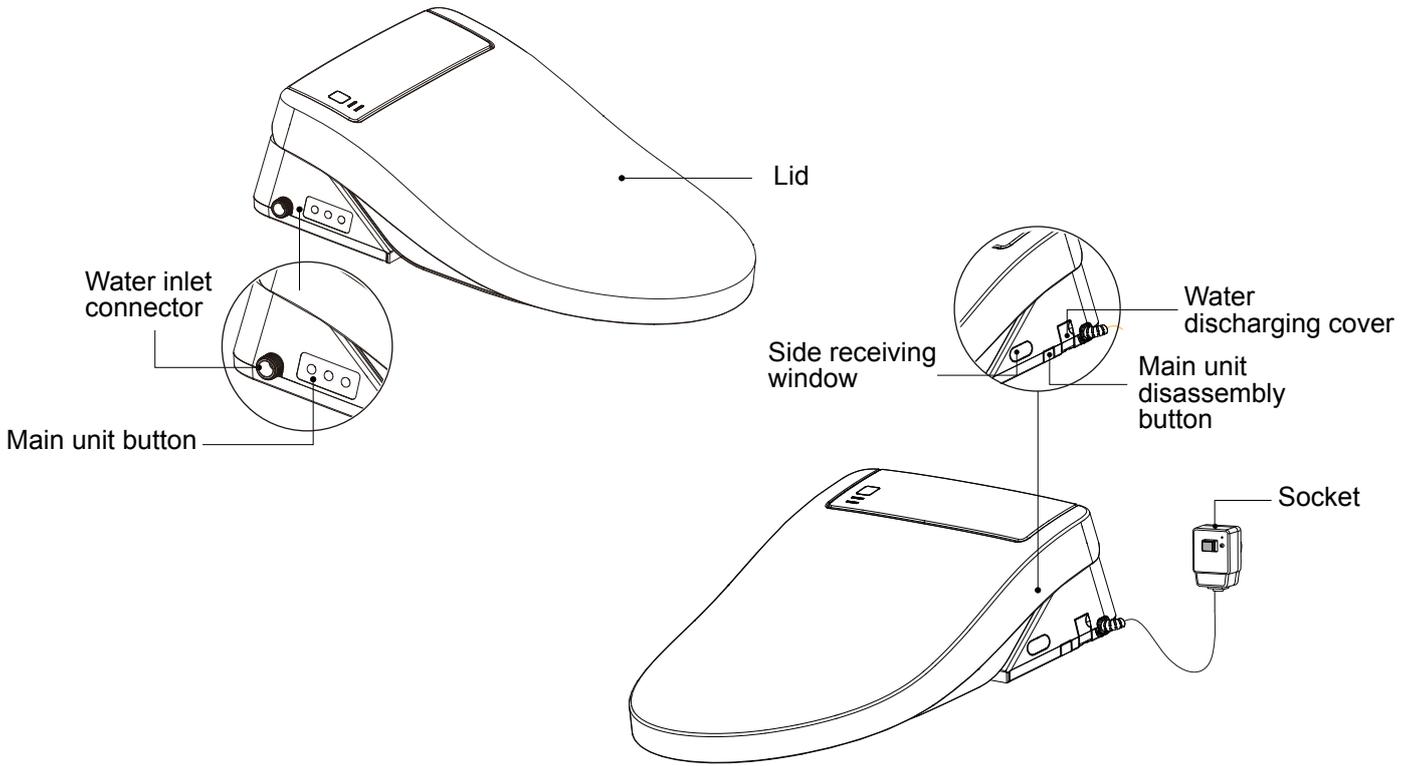

# Installation Instruction


## Installation dimension

Note: please check if the installation dimension matching the user's toilet.

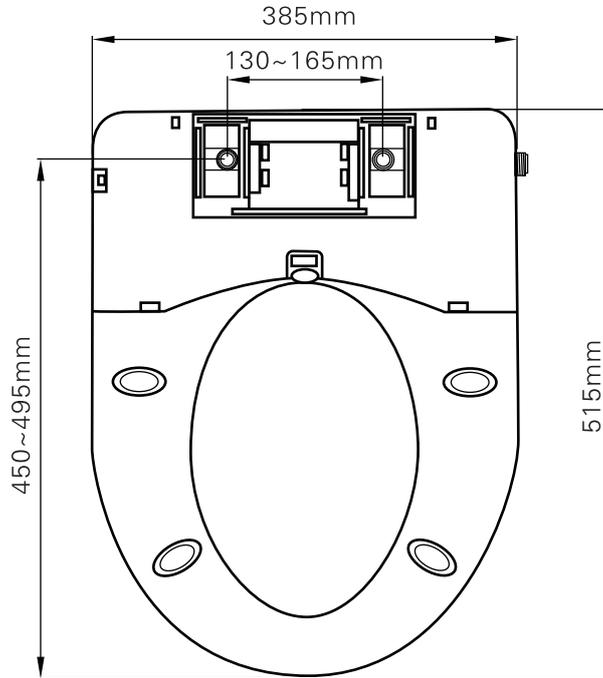

## Installation of mounting plate

Press the expansion nuts into the installation holes in the toilet, then install the base plate, plastic plates, flat washers and bolt as per the drawing and tighten the bolts.

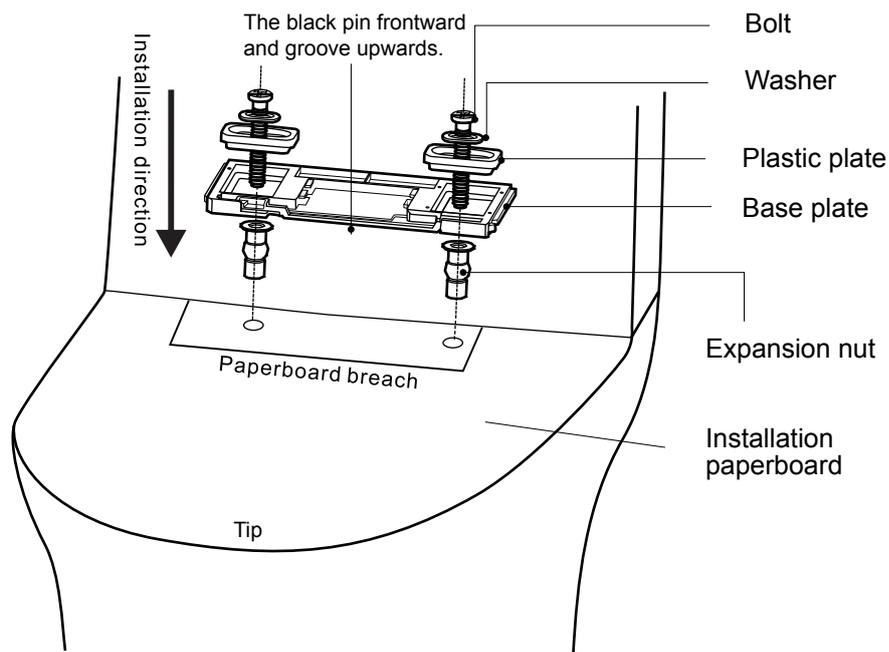


Note:

Unfold the installation paperboard, align the paperboard well fit ceramic bowl from the tip, and then insert base plate to the paperboard breach to make sure base plate allign with paperboard breach.

## Installation and disassembly of main unit

### Installation


Push the washlet back onto the base plate until a “click” is heard.

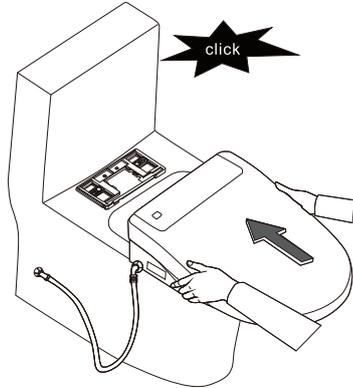

Installation

### Disassembly

Press the “removal button” on washlet, until a “click” is heard, and pull it out.

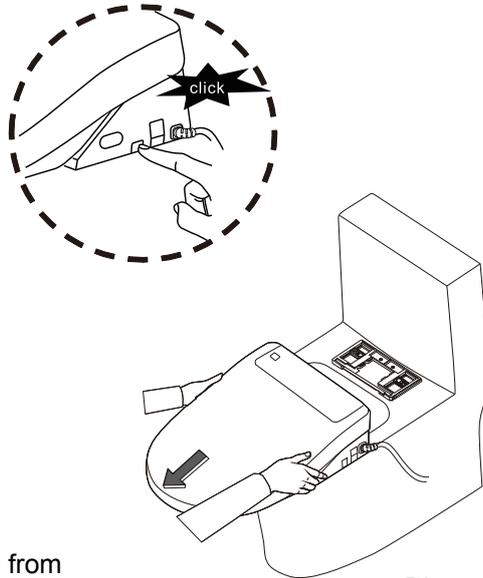

Disassembly


### Note:

Before pulling out the washlet, release hand from “removal button”.

## Connecting the water supply pipe

1. Side inlet: Install the 3-way valve onto angle valve, then attach the water supply hose and the washlet inlet hose into 3-way valve. Connect L-shaped end of water supply hose to the washlet inlet connector.







2. Bottom inlet: Connect water supply on the inlet connector, then put supply hose and power line through the relevant holes, finally install seat cover.

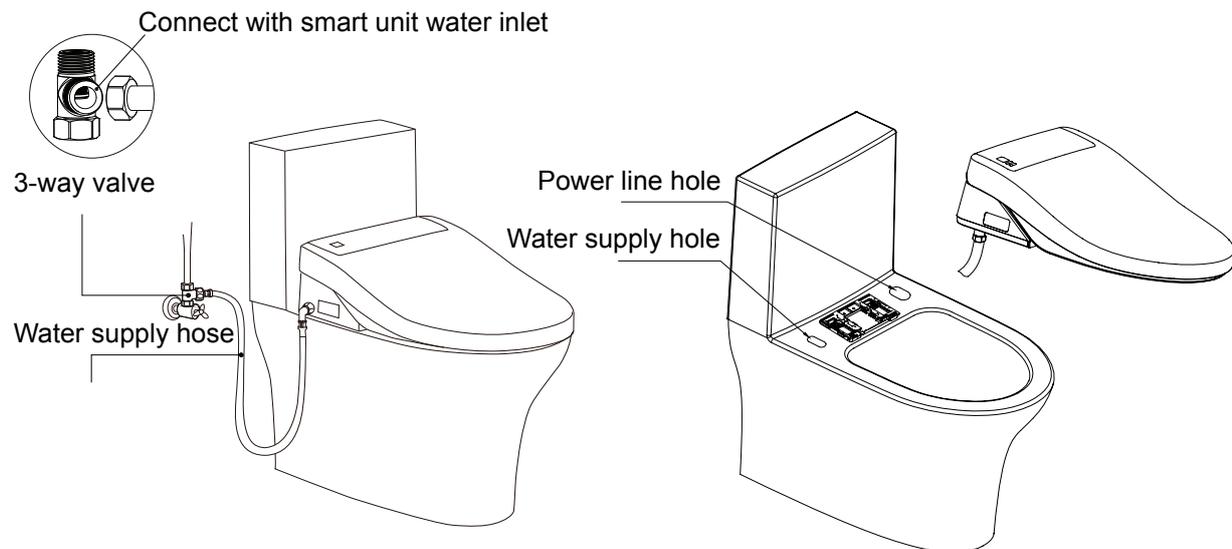

### Note:

Do not distort or damage the supply hose to avoid any leakage.  
Do not use water supply hose and other accessories of other brands, which may cause danger.  
Do not recommend to use our old water supply hose and accessories, which may cause danger.

# Installation instruction

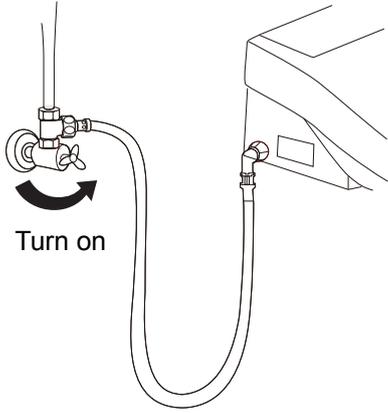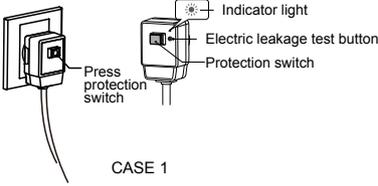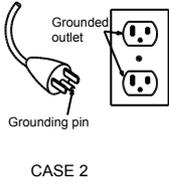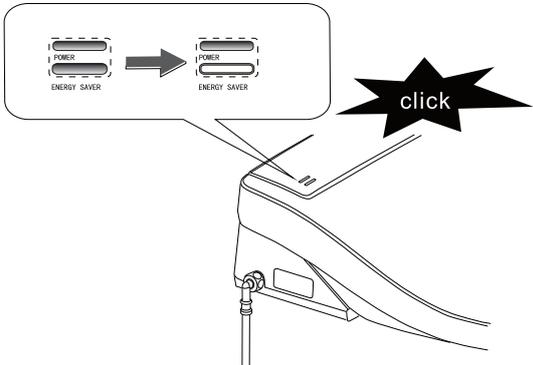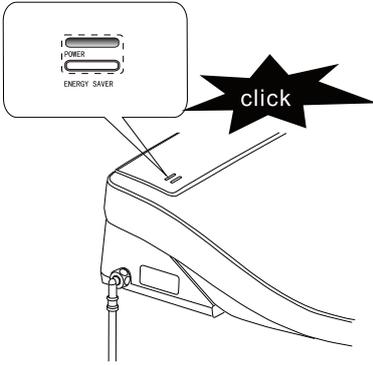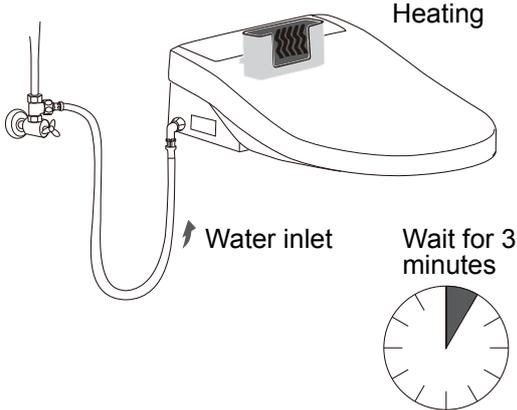Checking the power and water supply	
<p>Connect the water supply hose and turn on the angle valve. Check if any leakage.</p>	<p>Insert power plug into power socket.</p>
 <p>Turn on</p>	<div style="display: flex; justify-content: space-around;"> <div data-bbox="815 465 1193 651">  <p>CASE 1</p> </div> <div data-bbox="1225 465 1394 651">  <p>CASE 2</p> </div> </div> <p>NOTE: If it's an electric leakage protection plug, press protection switch, indicator light is on which means there is electricity. Press electric leakage test button prior to usage, protection switch bounces to show that protection function works normally.</p> <p>NOTE: If it's not an electric leakage protection plug, insert power plug into power socket directly.</p>
<p>The main unit buzzer rings first "click", the power light and energy saver light will flash. Power light on and energy saver light off means self-inspection.</p>	<p>The buzzer rings second "click" to show that self-inspection is finished.</p>
	
<p>The water starts to flow into tank and heating will take 3 minutes.</p>	
 <p>Heating</p> <p>Water inlet</p> <p>Wait for 3 minutes</p>	

### Function illustration of keys in main unit and actuator

	 Power	<ol style="list-style-type: none"> <li>1. Long press “Power” button to enter standby mode; and then quick press “Power” button to restore functional mode.</li> <li>2. When people sit, press “Power” button to stop the function of rear, front cleaning or drying. When no one sits, press “Power” button to switch between function mode and power save mode.</li> </ol>
	 Front cleaning button	When people sit, press “Front cleaning” button, it will clean the front portion of body; repress “Front cleaning” button or “Power” button, the function will be finished. After a cycle, this function will be finished automatically, if people keep sit, it will switch to drying function, and will stop after a cycle.
	 Rear cleaning button	<ol style="list-style-type: none"> <li>1. When people sit, press “Rear cleaning” button, it will clean the rear portion of body; repress “Front cleaning” button or “Power” button, the function will be finished. After a cycle, this function will be finished automatically, if people keep sit, it will switch to drying function, and will stop after a cycle.</li> <li>2. When no one sits, press “Rear cleaning” button, then the wand will stretch out to clean the nozzle and spray wand.</li> </ol>

**Remark:**

1. When main unit is in functional mode, the light of power goes on and energy saver light is off; When in energy save function, the light of power goes off, and energy saver light is on; When in standby mode, both lights are off.
2. The default setting of all function is on middle level, after using remote-controller, shift to the level showing on remote-controller.
3. If the product is not used for continual 72 hours, the water in the tank will automatically discharge for 90 seconds and replaced by fresh water, to avoid bacteria.


### Function illustration of keys in remote-control and LCD display instruction

- The operating method of remote control shows in instruction manual.

# Daily maintenance

## Main unit maintenance

1. Shut off power supply at maintenance.
2. Turn the seat upward open, press down the button located on the right side of main unit and pull out the seat. Wipe the stain with a soft damp cloth.
3. After cleaning, re-install the seat back to main unit.

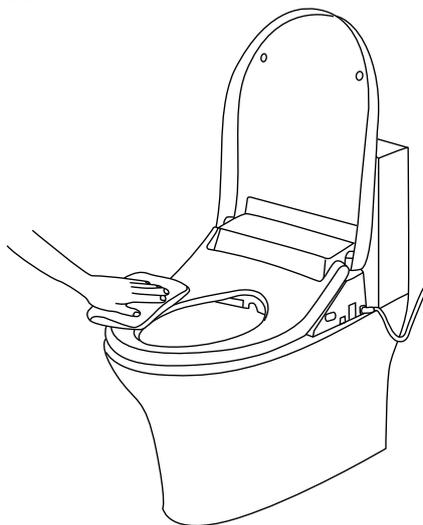


Note:

Do not pour the water on the product at maintenance.

## Spray nozzle maintenance

Do the following to clean the wand.

1. Press “nozzle cleaning” or “rear cleaning” button for a while and wand will come out. Wipe the wand clean with a soft damp cloth.
  2. Hold “nozzle cleaning” button and the wand doesn’t come out. The nozzle will automatically spray to self-clean.
  3. Press again “nozzle cleaning” or “stop” or “rear cleaning” button, it will stop the cleaning.
- (The button function will be different according to different optional remote control)

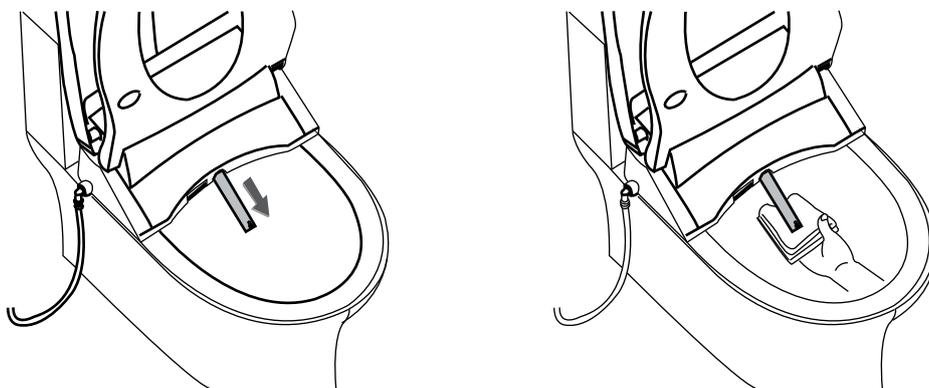


Note:

Do not apply force when pushing or pulling the wand, as this may damage the mechanism.

## Inlet filter cleaning


1. Pull out electrical plug, then shut off water supply valve and remove water supply hose.
2. Remove the filter. Use the brush to clean the filter.
3. Put the filter back into inlet after cleaning. Then connect the water supply pipe.

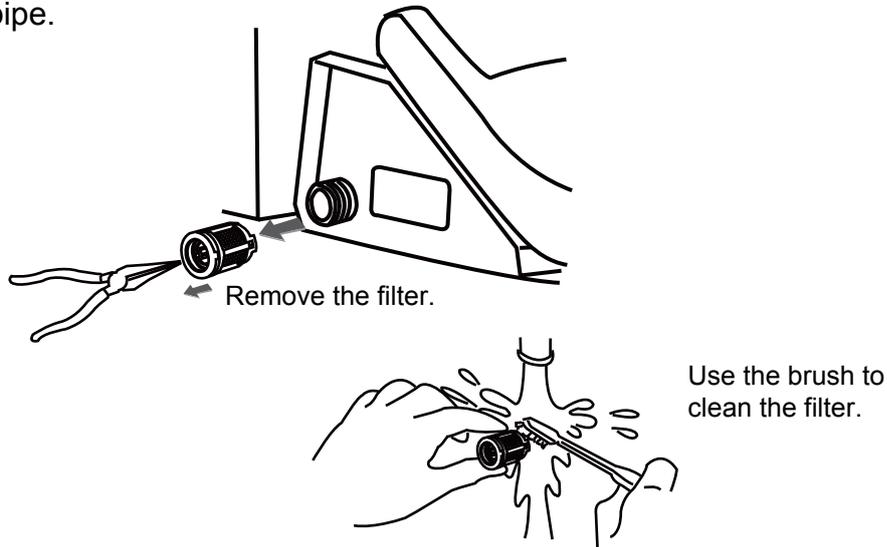

## Tank anti-freezing and anti-bacterial maintenance

When room temperature is under zero and electricity is disconnected, or user is away for a long time. The water inside the tank should be discharged.


- 1) Open the tank cover, press the discharge button, turn on valve to discharge the water.
- 2) Slightly press the discharge button protruding part to turn off discharging valve and cover.

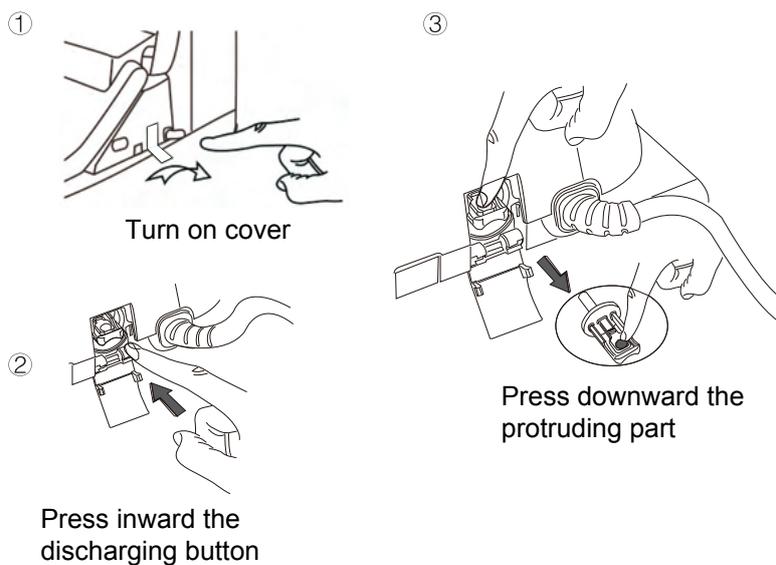

Note: Before water discharging, the power must be cut off!

# Troubleshooting Guide

Problem	Cause	Solution
No flushing	Water supply hose buckling causes block	Solve the buckling
	Fill valve is off	Turn on the fill valve
	Water supply is cut off	Connect water supply and wait for the water
Poor flushing	Water supply hose buckling causes partial block	Solve the buckling
	Fill valve is not fully turned on	Turn on the fill valve fully
	Filter is dirty and causes block	Clean the filter
The water is not hot	The water temperature is setted on normal temperature level	Reset the water temperature
	In standby mode or power save mode	Switch to function mode, and then wash after 3 minutes
Seat temperature is not hot	The seat temperature is setted on normal temperature level	Reset the seat temperature
	In standby mode	Shift to function mode for 3 minutes
Wind temperature is not hot	The wind temperature is setted on normal temperature level	Reset the wind temperature
No wind out	In standby mode or power save mode	Shift to function mode to use dry function
Spray wand cannot retracted	Power off	Push back the wand lightly and wait for the power
	Get stuck by impurities	Clear away the impurities
Spray wand cannot stretch out	Power off	Push back the wand lightly and wait for the power
	Do not sit in sensing area	Sit right in the sensing area
Controller cannot display	Reverse the polarity of battery	Reload the battery
 Caution	If the problems cannot be solved as per above methods, please shut-off the power, and contact service providers for maintenance.	
	If the leakage circuit breacker often trips off, it means the products has electricity leakage, so please shut-off the power, and contact service provider for maintenance.	

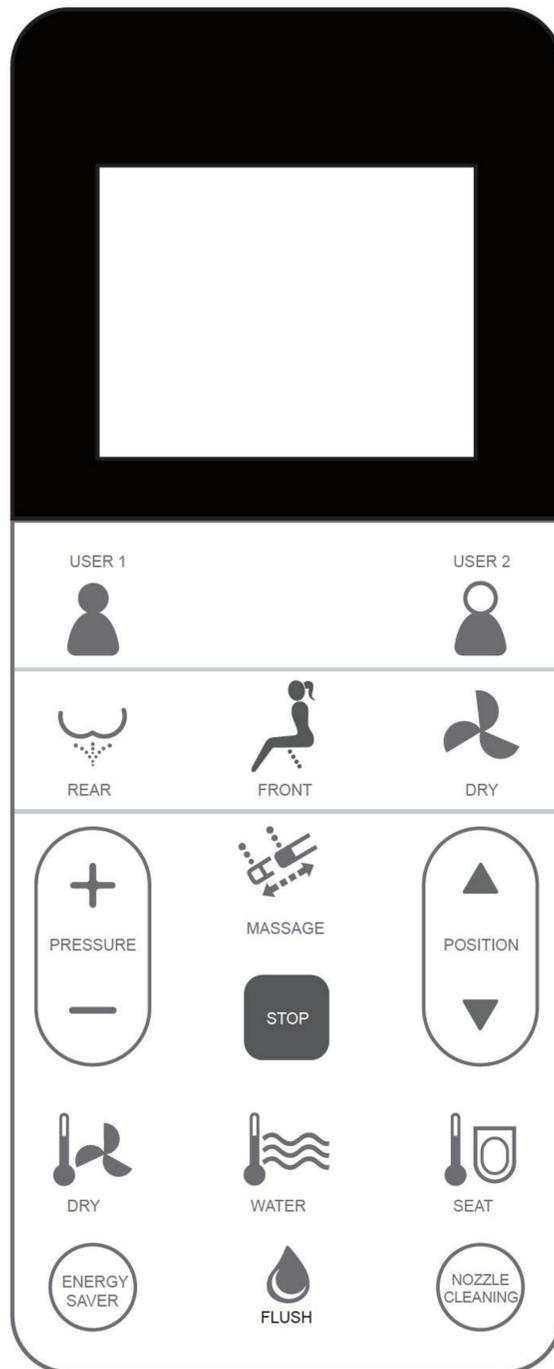

## Remote Control Illustration

Thank you for choosing our product. Please read the instructions carefully before installation and keep it available for future maintenance or reference.

# Content

## Installation preparation

01.Remote control installation	01
--------------------------------	----

## Usage Instruction

01.Remote control illustration	02
02.Rear/Front cleaning operation	03
03.Dry operation	03
04.Massage operation	04
05.Spray nozzle position adjustment	04
06.Water pressure adjustment	04
07.Energy saver	05
08.Full flush	06
09.Nozzle cleaning	06
10.Automatic deodorization	06
11.Temperature adjustment	07
12.User code	08
13.Open/close by remote controller	08
14.Auto function	09
15.Combination button	10

## Automatic function setting

01.Setting rear cleaning	12
02.Setting front cleaning	13
03.Setting rear/front cleaning	14


## Installation Preparation

### Remote control installation

#### Remote control hanger installation

- (1) Drill a hole of  $\phi 6$ mm on the wall with depth of 35mm.


Make sure end-user be able to reach the remote control when sitting on the seat.

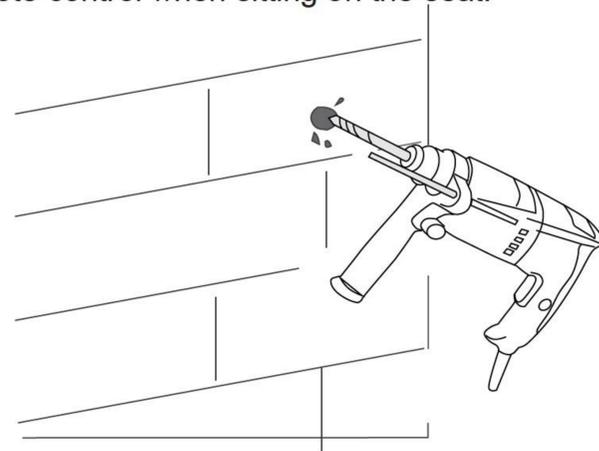


- (2) Tear the paster on back of hanger.



- (3) Insert expansion tube into the hole on the wall, install the hanger to the wall with a screw, and paste the double faced adhesive tape on hanger to the wall, tighten the screw.

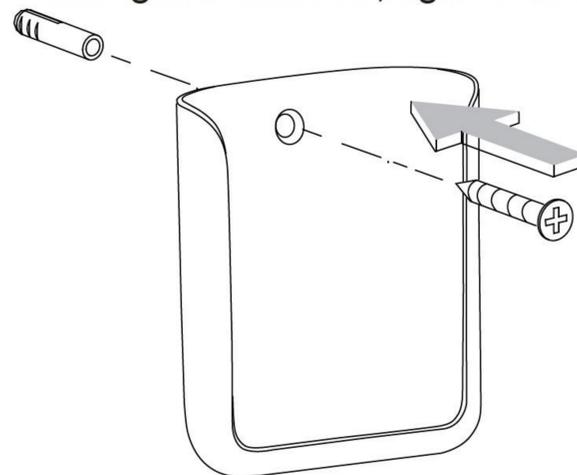


- (4) Install battery and place remote control to the hanger.

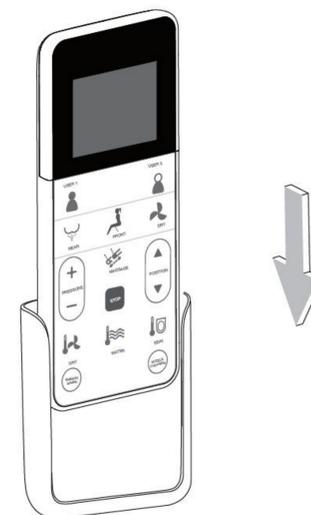

**Notice :** Please do not install and use the product in moist place, such as steam room, and prohibit to place in the space where is easily got wet.

# Usage Instruction

## Remote control illustration

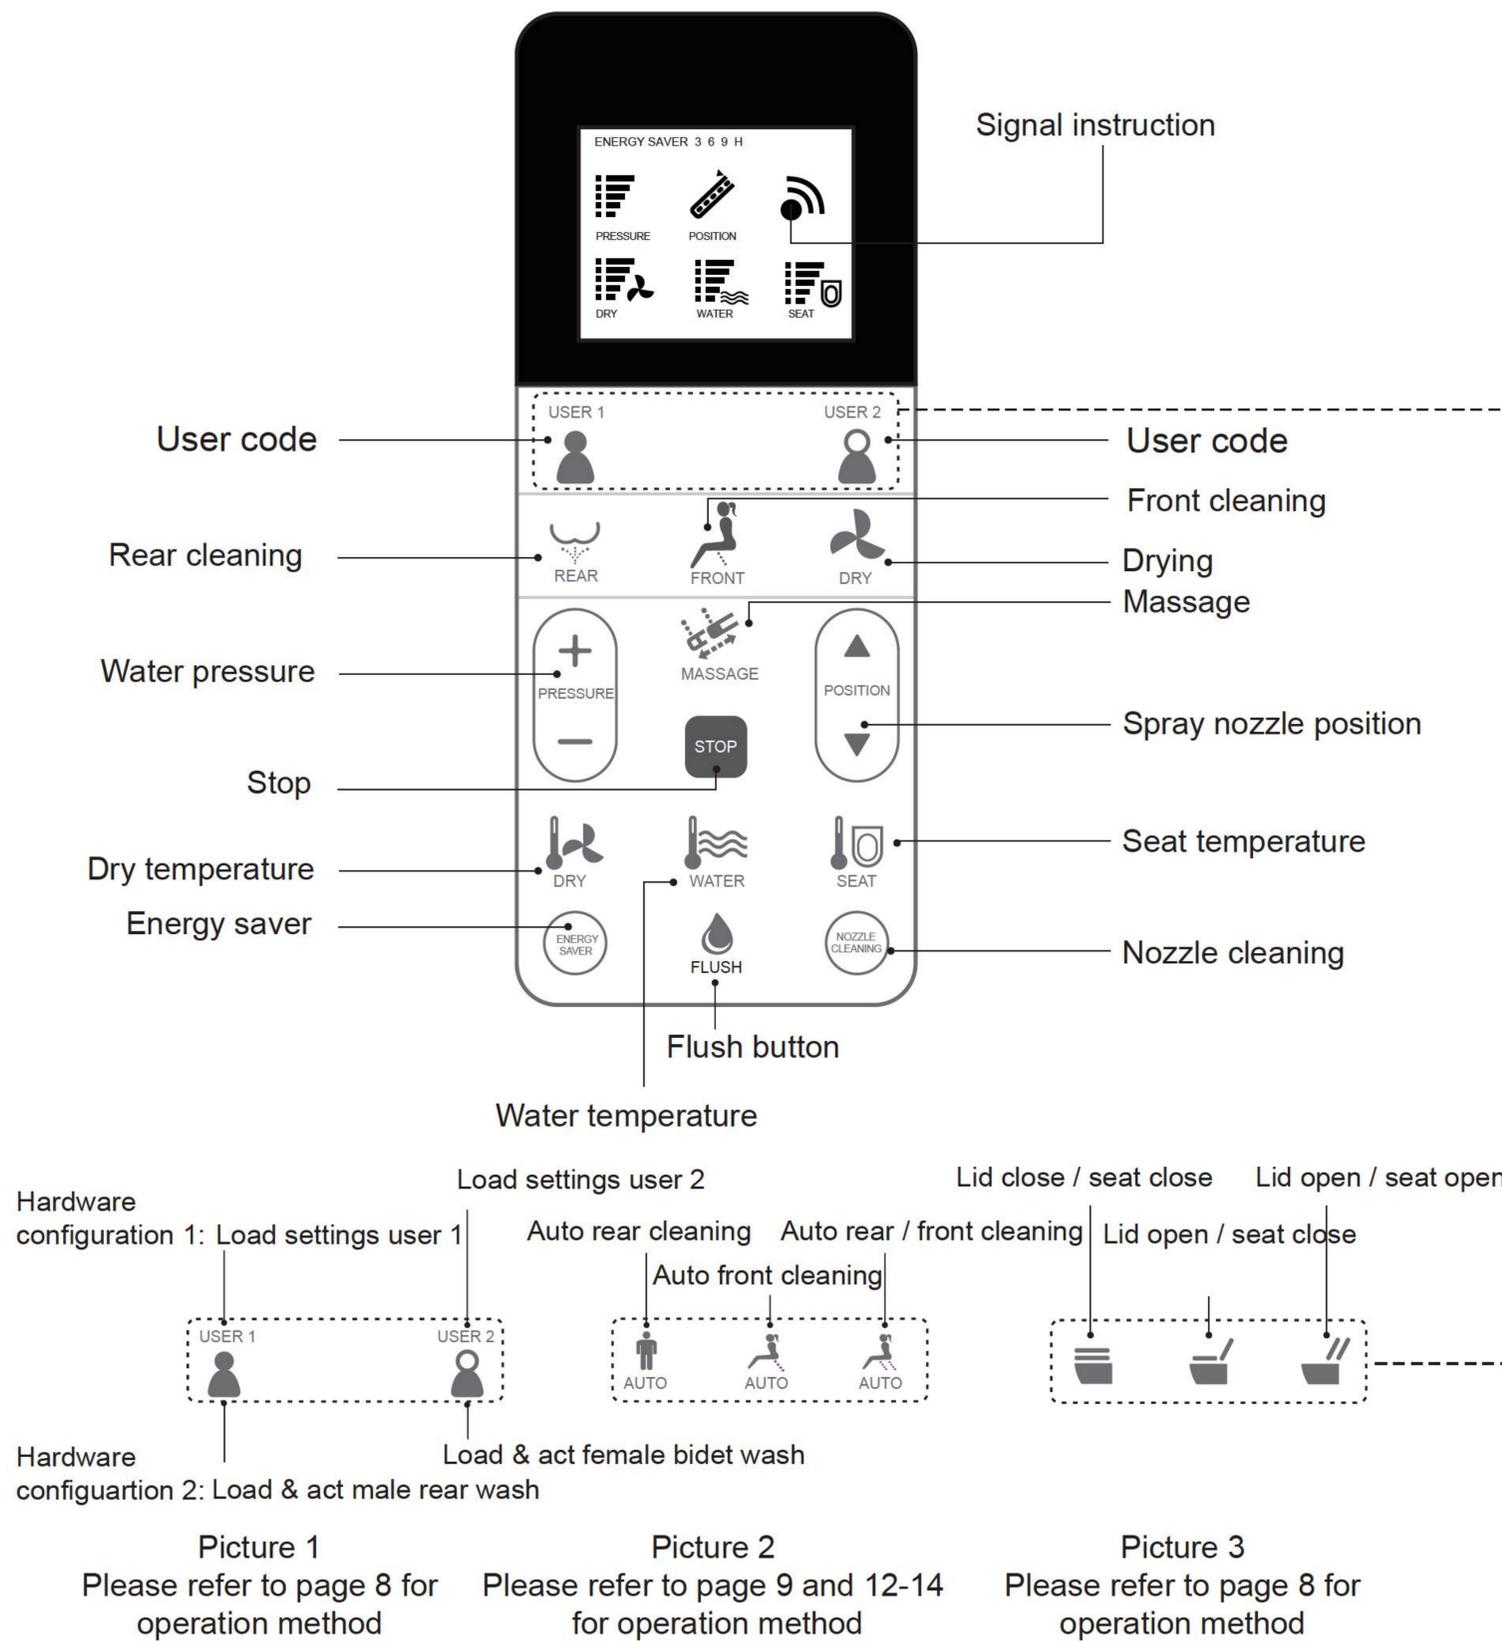


## Usage Instruction

### Rear/Front cleaning

Press “REAR”/“FRONT ” button, the water comes out of wand to clean the rear/front portion of body. It automatically stops after a cycle of cleaning. If press “STOP” button when using, the function will stop immediately.

### Drying Operation

Press “DRY” button, warm wind comes out of wand to dry. After a cycle or user leaves the seat, it automatically stops.

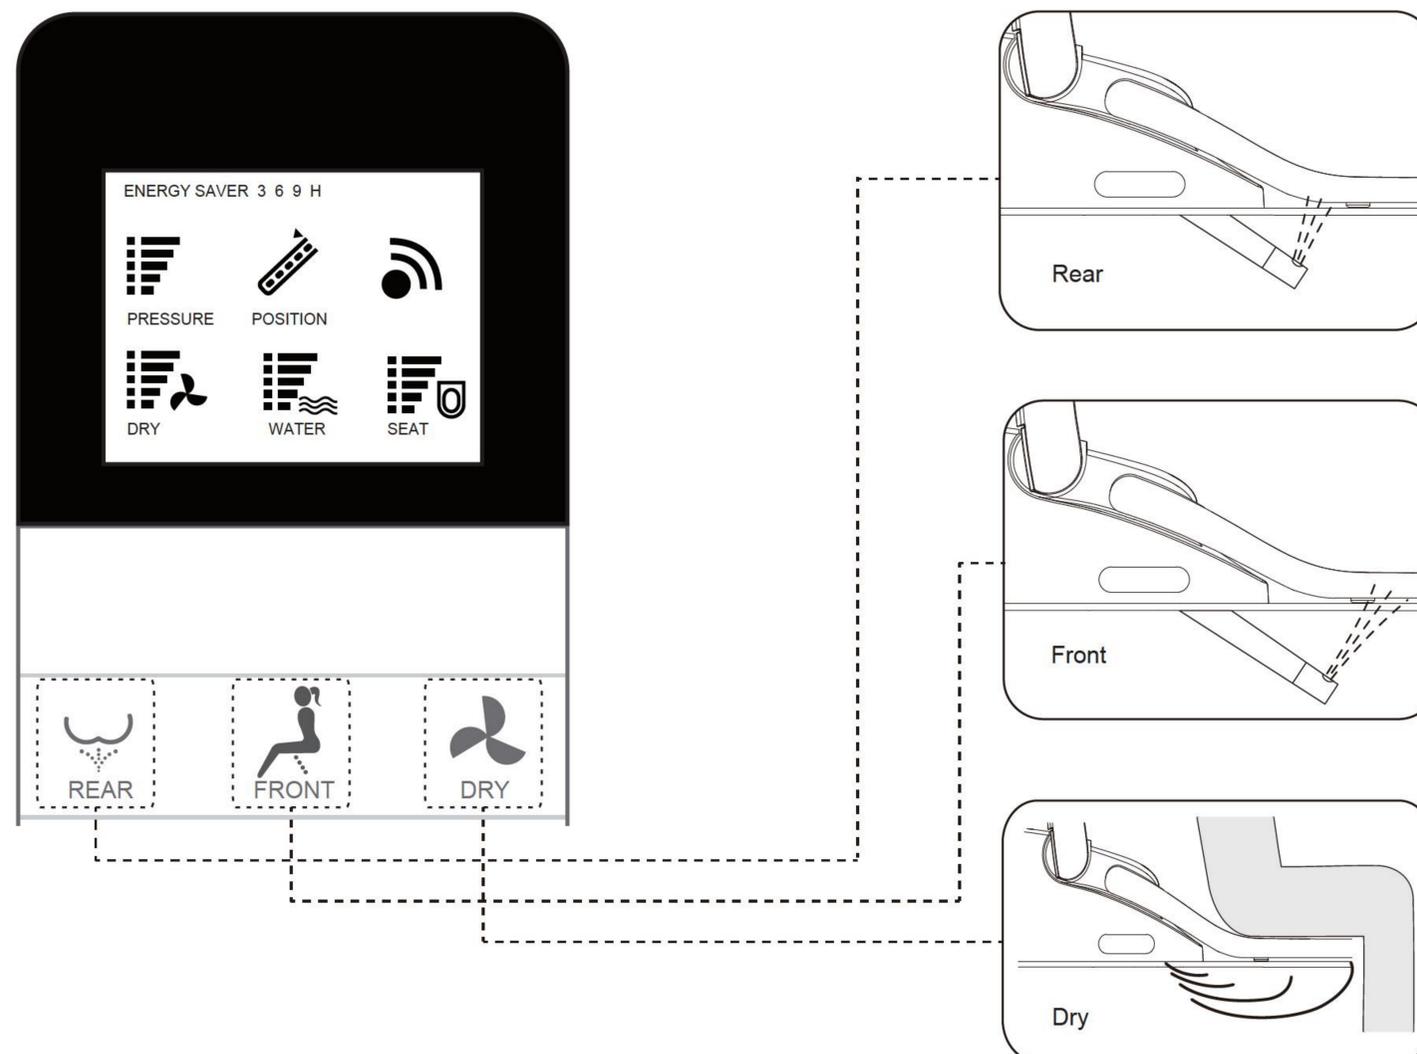

## Usage Instruction

### Massage


Press “MASSAGE” button to activate massage function, the nozzle moves forward and back to extend the cleaning scope; Press “MASSAGE” button again to stop the function.

### Spray nozzle position adjustment

During “REAR” or “FRONT”, press spray nozzle button of “◀” and “▶”, to move the position forward and backward by adjusting 5 levels.

### Water pressure adjustment

During “REAR” or “FRONT”, press water pressure button of “+” and “-”, to adjust pressure for rear and front cleaning.

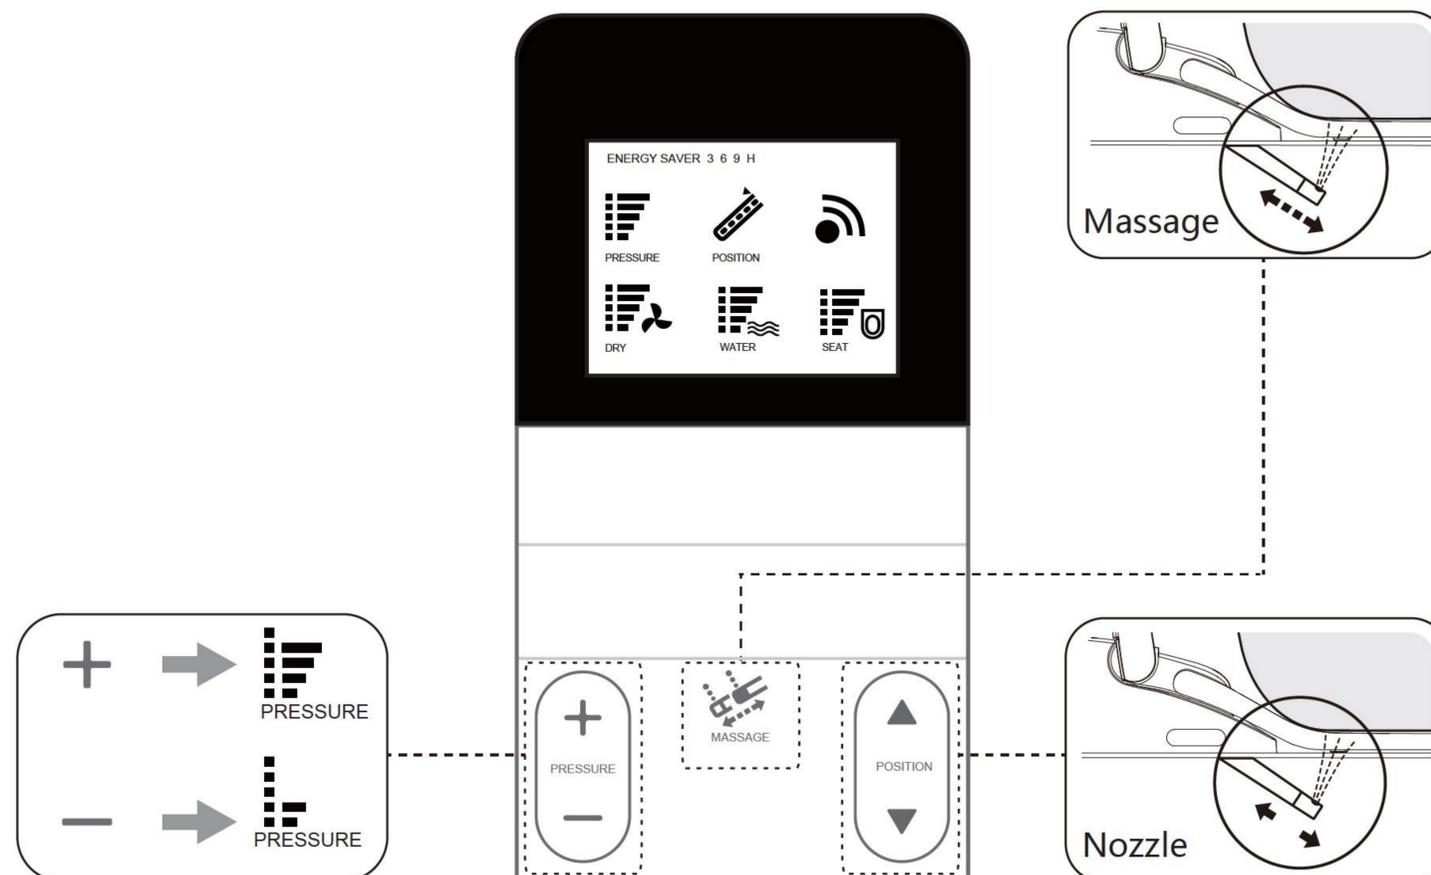


## Energy saver


### Setting energy saver time

Press “ENERGY SAVER” button, LCD screen shows energy saver and figures. It shows three options of energy saver period as 3-6-9-off, which can be selected accordingly. For example, user can set from 9:00 to 15:00 as energy saver according to following operation.

(1) Press “ENERGY SAVER” button, LCD screen shows “ENERGY SAVER” icon.

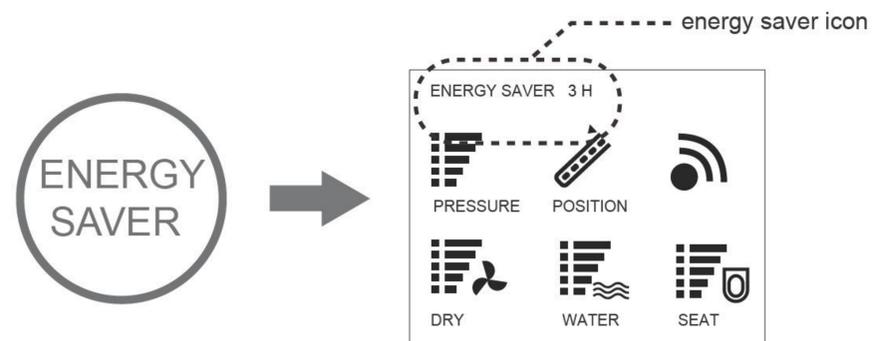

(2) Press “ENERGY SAVER” button again, LCD screen shows figure “6”, and the “ENERGY SAVER” icon disappear after 3 seconds, the setting succeeds. The toilet enters the energy saver mode from 9:00 to 15:00 every day. During this period, power light is off, and the energy saver light is on. It goes back to normal operation mode after energy saver time.

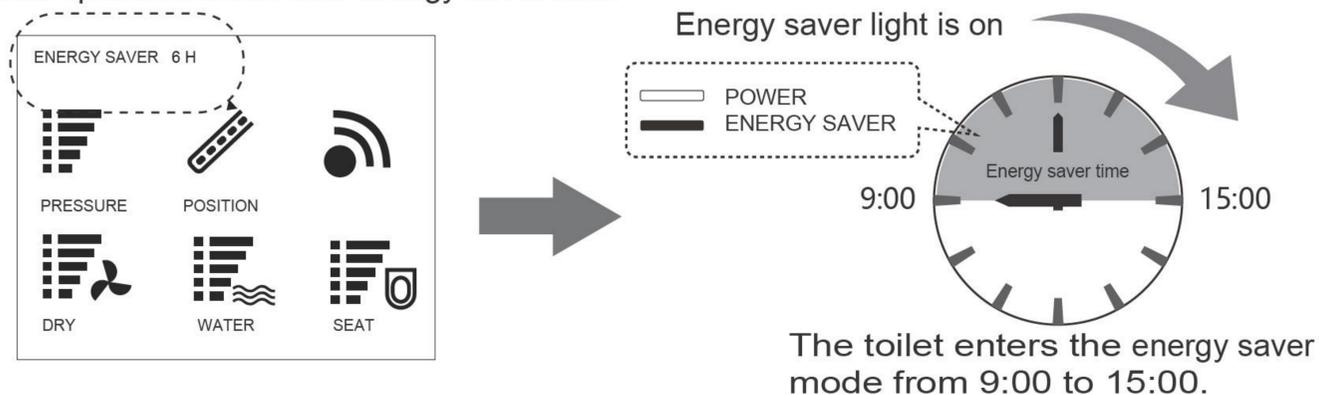

(3) Cancel energy saver set: Press “ENERGY SAVER” button continuously until this function is cancelled. (Nothing display on the screen.)

Energy saver:

The toilet will be under energy saver mode automatically after setting. Under energy saver mode, seat temperature is on low temperature status (first level) to achieve energy saver.

Notice:



If user sits on the seat, the energy saver mode is paused, and enters into the function mode, the seat starts to heat immediately (under opening seat temperature circumstance). The energy saver mode restores after user leaves.

When the energy saver mode is set, the icon disappears automatically, which is normal set.



## Usage Instruction

### Full flush (Only for the toilet with auto flush function )

Press “FLUSH” button to activate full flushing.

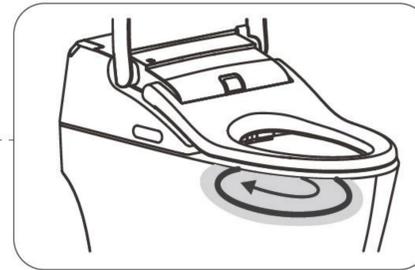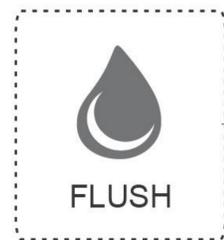

### Nozzle cleaning

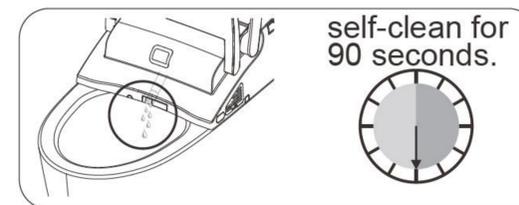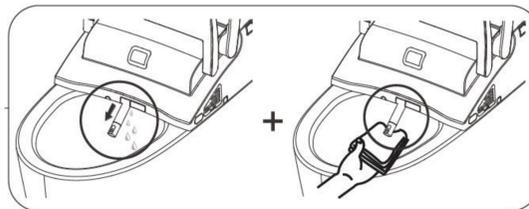

#### Nozzle self-cleaning by quick press :

Quick press “NOZZLE CLEANING” button, the nozzle self-cleans for a while and move to the front position (no spray). People can continue to clean nozzle manually.


#### Nozzle self-cleaning by long press :

Long press “NOZZLE CLEANING” button, the spray won't move forward and nozzle self-cleans for 90 seconds.



### Automatic deodorization (Only for the toilet with auto deodorization function )

#### Remark:

The deodorization function starts to work automatically as the user sits on the seat and stops automatically 3 seconds after the user leaves the seat. When drying, the function of automatic deodorization stops.

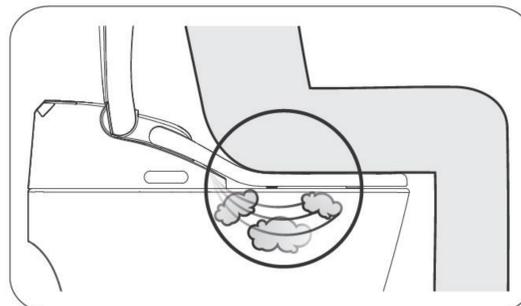


## Temperature adjustment

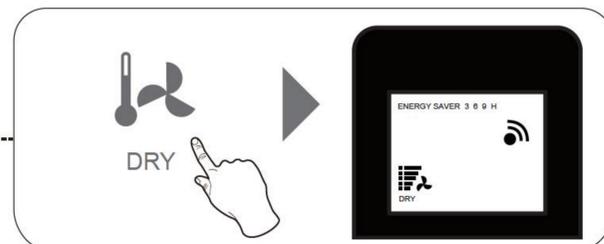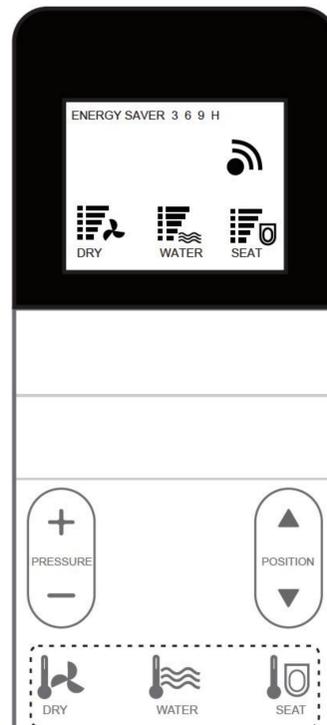


### Dry temperature adjustment:

Press "DRY" button to adjust temperature for drying.  
The LCD display of 1 to 5 lines means level 1 to 5. NO display means normal temperature. To adjust level by up and down cycle.

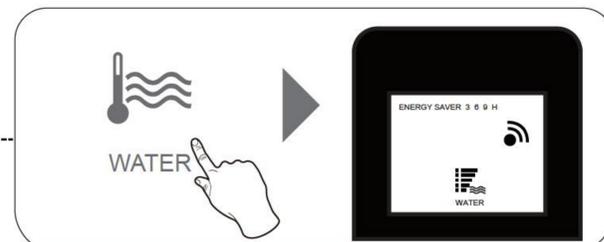

### Water temperature adjustment:

Press "WATER" button to adjust temperature for rear and front cleaning.  
The LCD display of 1 to 5 lines means level 1 to 5. NO display means normal temperature. To adjust level by up and down cycle.

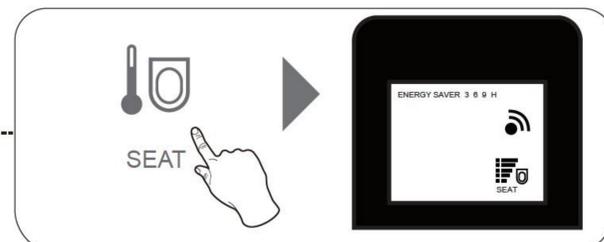


### Seat temperature adjustment:

Press "SEAT" button to adjust temperature of seat. The LCD display of 1 to 5 lines means level 1 to 5. NO display means normal temperature. To adjust level by up and down cycle.

# Usage Instruction

## User code ( Only for the toilet with User code function )

Long press “USER 1” or “USER 2” button to save the parameters, including current pressure, nozzle position, dry temperature, water temperature, seat temperature and massage status. Quick press “USER 1” or “USER 2” button to use saved parameter.

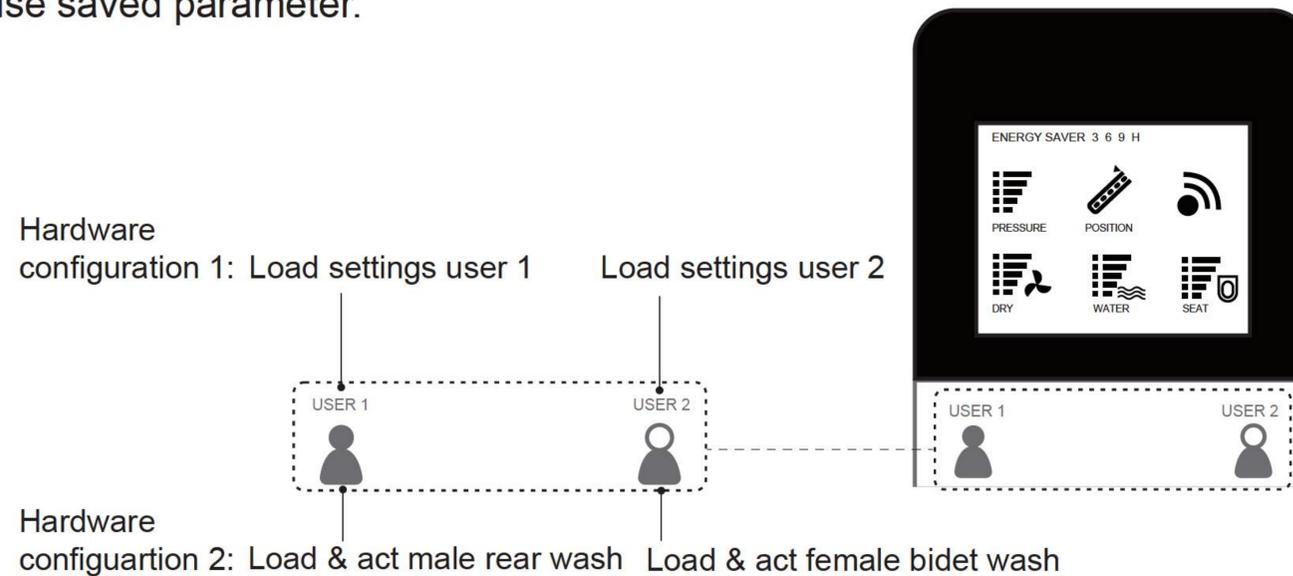


Hardware 1 support loading user settings only; hardware 2 support loading & acting user settings simultaneously. Remarks: Hardware 1 & 2 are matched with different smart seat/cover respectively. They do not coexist. Hardware 1 support V8100 series, and hardware 2 support all except V8100 series, generally for now. Configuration refer to factual product version and subject to change.

## Auto lid open/close ( Only for toilet with this function )

Press “” button to close seat cover.

Press “” button to open lid and close seat.


Press “” button to open lid and seat.

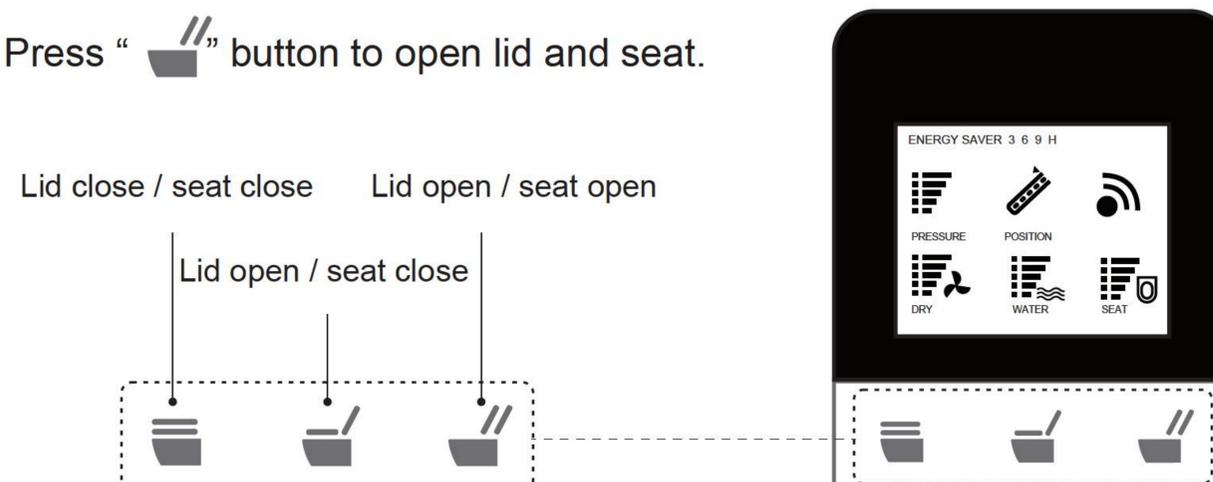

## Usage Instruction

### Auto function ( Only for the toilet with auto flush function )

Full-automatic function can be achieved by three “AUTO” buttons, convenient and practical. User can pre-set the suitable nozzle position, water pressure and temperature and save the setting. Full-automatic function will be activated by pressing the related function button when using afterwards.

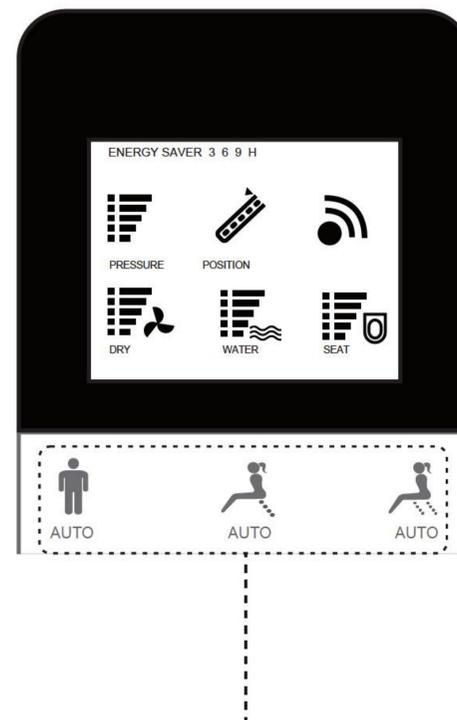

Auto rear cleaning → Rear cleaning 90s → Dry 180s → Automatic stop



Auto front cleaning → Front cleaning 90s → Dry 180s → Automatic stop



Auto rear and front cleaning → Rear cleaning 90s → Front cleaning 90s → Dry 180s  
→ Automatic stop

## Usage Instruction

### Combination button

#### Night light

Press "STOP" button, then "DRY" button, night light will be often in the off state;  
Repeat the process, night light will switch to intelligent state. Repeat above process constantly, the night light will switch between off state and intelligent state.

#### Quiet mode

Press "STOP" button and then "MASSAGE" button to turn off buzzer to avoid noise in the night; Repeat the process to start buzzer function.

#### User code

The user code needs to be set to avoid disturbance from remote controls when more than one toilets are used in the house. Turn on the toilet for setting while turn off others.

(1) Press "STOP" button and then "REAR" button to enter into user code setting.

The remote control shows only water pressure and spray position level, and characters are blinking on the screen.

(2) Press water pressure buttons of "+" and "-", to choose user code 1-9.

(3) Press "STOP" button and then "REAR" button again, remote control will save the setting and exit user code setting window, the buzzer will ring "click" to indicate successful setting.

The sum of water pressure and position level on LCD is the user code. Restart to clear the user code and re-set.

#### Automatic flush button

Press "STOP" button and then "FLUSH" button to start or close automatic flushing function. When the automatic flushing function is turned on, toilet will automatically flush after detecting user sitting for more than 6 seconds and leaving the seat for more than 3.5 seconds.

#### Auto open/close

Press "STOP" button, and then press "" button, it is the mode of auto open/close. Repeat above action to stop this function. (This key combination is only for toilet seat with auto open/close function. The default setting of auto open/close is in the off state, so it needs to be turned on at the first-use.

#### Auto air deodorizing button

Press and hold "STOP" button and then press "FRONT" button to activate or turn off auto air deodorizing function; After auto air deodorizing function is turned on, when the user is seated, the deodorization function is turned on and turned off 3S after the user leaves the seat. Deodorizing function is turned off during drying.

## Remark:

By pressing the button, the signal indicator will flash which means the signal is sent out; Then the buzzer rings "click", which means the main unit receives the signal and executes the instruction. If the signal indicator doesn't flash, that means the button is not efficiently pressed and needed to be re-pressed. If the buzzer does not ring, that means the main unit doesn't receive the signal. Please regulate the remote control direction and re-press the button.

In case of power cut during wand's spray operation, the wand cannot go back to place, please wait until the power is reset. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.

The body should touch the seat and the buzzer rings "click", which means functions of front cleaning, rear cleaning and drying are in operation. The nozzle will continue to spray for 1-2 seconds after user stands up during spray operation, so please press "STOP" button before standing up.

Use nozzle self-cleaning function after user leaves the seat. After cleaning, if user doesn't press "NOZZLE CLEANING" or "STOP" button, nozzle wand will go back after 10 minutes or user sits on the seat.




## Set auto function

### Set automatic Rear cleaning function

The default setting of automatic function is water pressure on level three, nozzle position on level three, water temperature, wind temperature and seat temperature on level three, the massage function is in the off state. User can re-set based on personal preference.

(1) Adjust water pressure, nozzle position, temperature by function button in below grey circle, and open/close massage function.

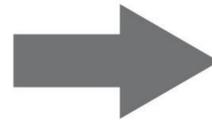

For example, the nozzle position is on level 2, and massage function is open; the water pressure is on level 4; water temperature is on level 2, while dry temperature and seat temperature are on level 1.


- (2) After setting is completed, long press rear cleaning automatic button for 3 seconds to save the setting.
- (3) After above steps, quick press “” afterwards when using, LCD displays the previous saved settings of rear cleaning level, temperature level and massage status. By this time, the toilet operates rear cleaning 90s, and then dry 180s automatically without pressing other buttons.
- (4) During automatic rear cleaning, user still can change the level, temperature and massage status, and press “REAR” button 3 seconds to save the new settings.

## Set auto function

### Set automatic Front cleaning function

(1) Press spray nozzle position adjustment button to adjust nozzle to suitable position; Press “+”, “-” to adjust water pressure; set temperature level; open/close massage function.

(2) Press “” front cleaning automatic button for 3 seconds, see below picture, and save the setting.

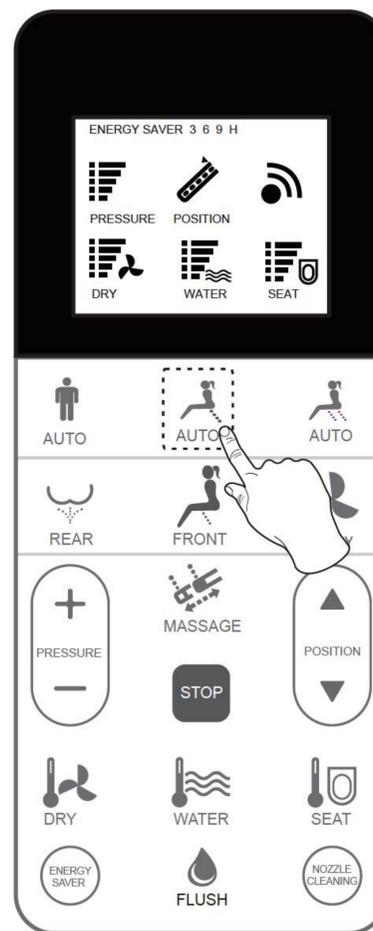

(3) After above steps, quick press “” afterwards when using, LCD displays the previous saved settings of front cleaning level, temperature level and massage status. By this time, the toilet operates rear cleaning 90s, and then dry 180s automatically without pressing other buttons.

(4) During automatic front cleaning, user still can change the level, temperature and massage status, and press “FRONT” button 3 seconds to save the new settings.