



caring mill by aura



Sleek Corn and Callus Remover
Model No. CR20

User Manual



Thank you for purchasing Caring Mill by Aura Sleek Corn and Callus Remover Set, a premium device designed with an ergonomic approach for exceptional performance.

With ten high-quality metal sapphire attachments, adjustable speed control, and bi-directional rotation, it ensures a superior user experience at home.

This product offers multiple health benefits for your feet, including improved comfort, reduced foot pain, and enhanced hygiene by removing corns and calluses.

Enjoy a customizable experience for a pain-free and hygienic foot care routine.

Contents

Warning	4
Safety notes	6
Package content	8
Attachment functions	9
Notes on handling batteries	12
Instruction for Charging	13
Instruction for use	14
Lock Function	16
Diabetes User - Friendly Feature	16
Disposal	17
Product care and maintenance	17
Technical Data / Specification	18
Customer Service	18
FCC Compliance Information	18
Note	19

Save this user manual for future reference

If this User Manual is damaged, or if you no longer have the User Manual in your possession, please contact customer service.

Warning



- Read these instructions carefully before use.
- Ensure the device is undamaged before use. If any malfunction should occur during use, shut the device off immediately and remove the plug from the electrical outlet. Contact Customer Service.
- This device is solely for treatment of hands (manicure) and feet (pedicure) as described in these instructions. The manufacturer is not responsible for damage caused by improper or careless use.
- Check the results regularly during the treatment. It is particularly important for diabetics to do so as they have a lower sensitivity to pain and could injure themselves more easily. The attachments 6,7,12,13 and 14, which are included are generally suitable for diabetics as they are only intended for use over larger areas and not spot treatment. In contrast, attachments 8 to 11 are less suitable for diabetics. Always work very carefully. If you have any doubts, consult your doctor. Functionality can no longer be guaranteed.

- For hygienic reasons, the device may only be used on one person.
- Keep packaging material away from children to avoid danger of suffocation.
- In the event of defects and operational faults, switch off the device immediately.
- Do not open the device. Failure to comply invalidates the warranty.
- Do not use the device when bathing or showering.
- Do not store or keep the device in places from where it could fall into a bath or wash basin.
- Never immerse the device in water or other liquids.
- Ensure your hands are dry before handling either the device or the plug-in power unit.
- Before and after use, before cleaning and changing any accessory parts, always unplug the power adapter from the electrical outlet. Ensure that the device is switch off completely.

Safety Notes

Use of this device can create a considerable amount of heat on your skin or nails.

- Read these instructions carefully before use.
- Ensure the device is undamaged before use. If any malfunction should occur during use, shut the device off immediately and remove the plug from the electrical outlet. Contact Customer Service.
- This device is solely for treatment of hands (manicure) and feet (pedicure) as described in these instructions. The manufacturer is not responsible for damage caused by improper or careless use.
- Check the results regularly during the treatment. It is particularly important for diabetics to do so as they have a lower sensitivity to pain and could injure themselves more easily. The attachments 6,7,12,13 and 14, which are included are generally suitable for diabetics as they are only intended for use over larger areas and not spot treatment. In contrast, attachments 8 to 11 are less suitable for diabetics. Always work very carefully. If you have any doubts, consult your doctor. Functionality can no longer be guaranteed
- For hygienic reasons, the device may only be used on one person.
- Keep packaging material away from children to avoid danger of suffocation.
- In the event of defects and operational faults, switch off the device immediately.

- Do not open the device. Failure to comply invalidates the warranty.
- Do not use the device when bathing or showering.
- Do not store or keep the device in places from where it could fall into a bath or wash basin.
- Never immerse the device in water or other liquids.
- Ensure your hands are dry before handling either the device or the plug-in power unit.
- Before and after use, before cleaning and changing any accessory parts, always unplug the power adapter from the electrical outlet. Ensure that the device is switch off completely.

Package content



1. On/Off / Button
2. LED indicator (Charging / Rotary Direction)
3. Speed control button
" + " increasing rotation speed
" - " reducing rotation speed
4. Handle
5. Front bright light
6. Sapphire disk, fine
7. Sapphire disk, coarse
8. Sapphire milling cutter, round
9. Flame milling cutter
10. Needle milling cutter
11. Cylinder milling cutter
12. Sapphire cone
13. Felt cone
14. Sapphire cone, long and coarse
15. Attachment for using the sandpaper rolls
16. 10x Sandpaper rolls
17. Buff Holder
Brown Buff, coarse
18. Green Buff, fine
19. 3x White Buffs, fine
20. Protective cap for nail dust
21. User manual
22. Carry Case
23. USB charging cable (Type C)
24. USB charging slot (Type C)



Attachment functions



Sapphire disk, coarse

Shortens thick nails easily and files nails. Be sure to use with caution: this attachment quickly removes large area of a nail.



Sapphire disk, fine

Files nails with precision and without the risk of burning the skin. The unique design only rotates the inner sapphire grinding disc, without movement of the external housing.



Sapphire milling cutter, round

For careful removal of corns — works layer by layer to prevent damage to healthy skin beneath it.



Cylinder milling cutter

Bufs rough surfaces as well as coarse smoothing of toenails. Place the cylindrical milling cutter horizontally on the nail surface and remove the coarse nail layer by moving the head in slow circles.



Needle milling cutter

The needle milling cutter is a precision tool for exposing ingrown nails and removing dead nail parts. Use this attachment at slow speed, since careless use can quickly cause injury.



Flame milling cutter

Grinds thick nails and removes ingrown nails. When treating ingrown nails, carefully position the flame milling cutter on the area to be treated & remove the desired nail parts.



Sapphire cone

Removes dry skin and calluses on the foot or heel. May also be used to trim the nail.



Felt cone

Buffes the surface of the nail after filing. Always use in circular movements to buff nails. Never allow cone to remain in one position for a prolonged time due to considerable amount of heat released.



Attachment for using

the sandpaper rolls
Rotating wheel for attaching sandpaper roll.



Sapphire cone, long and coarse

Removes hard skin and large calluses from the sole and heel. Do not remove hardened skin entirely to protect the healthy skin beneath. File until a thin layer remains then moisturize to soften the skin.



10x Sandpaper rolls

Sandpaper rolls to remove dry skin and calluses from the sole, heel, and for filing nails. 10 pieces are included.



Buff holder

It used to hold the buff for continuous buffing and polishing the nails.



Brown Buff

Coarse-grit buff should not be used to buff the surface of the nails. They are meant only to shape nails from the side.



Green Buff

Fine-grit buff can be used to smooth ridges and surface irregularities. This can be done before applying nail polish or as a first step before finer buffing.



White Buff

Fine-grained buff is used to smooth the nail to a matte surface. The finest finishing grit gives the nails a glossy shine.



Protective cap for nail dust

Collects nail dust and residue during treatment sessions.

Notes on handling batteries

- If your skin or eyes come into contact with fluid from a rechargeable battery cell, flush out the affected areas with water and seek medical assistance.
- Choking hazard! Small children may swallow and choke on batteries.
- Store batteries out of the reach of small children.
- Protect batteries from excessive heat.
- Risk of explosion! Never throw batteries into a fire.
- Do not disassemble, split or crush the batteries.
- Only use chargers specified in the instructions for use.
- Batteries must be charged correctly prior to use. The instructions from the manufacturer and the specifications in these instructions for use regarding correct charging must be observed at all times. Fully charge the battery prior to initial use.
- In order to achieve as long a battery service life as possible, fully charge the battery at least twice per year.

Instruction for Charging

- Always ensure that your hands and USB charging cable are dry before charging.
- Make sure the device is powered off before charging.
- Connect the USB Type C plug to the USB Type C charging slot on the device.
- Connect the USB charging cable to the approved AC adaptor (not supplied) or USB port on a computer for charging the device.
- A full charge will last up to 4 hours.
- The LED will flash blue to indicate that the device is being charged.
- The LED will remain a steady blue color and will dim after 5 minutes when charging is complete.
- Unplug the AC adaptor or disconnect from the computer USB port after charging.
- The LED will flash during operation when the battery runs low.



For the purposes of recharging the battery, only use the USB charging cable supplied with this device and charged by USB port on a computer or connect to a traditional wall mount approved AC adaptor (not supplied).

Make sure the device is fully charged before the first use.

Do not charge inside bathroom or on any metal surfaces.

This appliance contains batteries that are nonreplaceable.

Instruction for Use

Short press the ON/OFF switch to turn on the device;

Short press the ON/OFF switch again to turn off the device;

- 1 Select the desired rotary direction by long pressing the ON/OFF switch after the device is powered on.

The LED lights up in GREEN For > clockwise rotation and lights up in RED For > counter clockwise rotation.

Remark: This bi-directional rotation feature is used for right or left handed operators for best performance

- 2 The front light will automatically switch on when the device is powered on.
- 3 Press the speed control button "+ / -" to select the desired speed to start your treatment.
- 4 The Slek operates at 5400 RPM. Most users will desire a slower speed. We recommend you begin your treatment on a low setting and then build speed as needed.
- 5 Usually, low speed is for finger or toe nails. High speed is for thick corn or dead skin.
- 6 The two buttons marked with (+) and (-) allow you to select the speed of rotation.
(+) button is increases the rotation speed;
(-) button is reduces the rotation speed.

- 7 When the LED indicator light double flashes in the speed selection, it indicates that the you have reached either the lowest or highest speed selection.
- 8 The device will memorize the last speed setting and rotation direction for the next use. It will auto reset when charging.
- 9 When the battery power is low, the LED indicator will blink to remind you to recharge the device. The Sleek requires 4 hours of charge time for a full charge.
- 10 When the battery is completely exhausted the LED indicator will blink for 5 seconds and then will automatically shut off. A minimum charge time of 30 minutes is required for the device to function properly.

Tips: For better performance and results, do not wash your hands or feet before treatment. Wash after treatment and massage in a moisturizer to soothe your skin.



The device switches off automatically after 20 minutes. After this time, have a break of at least 15 minutes to prevent the motor from overheating.

The device switches off if an attachment is prevented from moving for approx. 3 seconds during use. To restart the device, switch it briefly off and then on again.

Lock Function

The Sleek device can be locked in order to avoid it to power on accidentally.

- **To LOCK:** Press the ON/OFF switch for 5 seconds after the unit is switched off, until a blue LED will light up for 2 seconds. The unit will then be locked.
- **To UNLOCK,** press the ON/OFF button twice in 2 seconds. First press, and a RED LED will light up. Then press again and a GREEN LED will light up. The unit will then be unlocked for regular use.
- Or you can simply unlock it by charging the unit via the USB cable.

Diabetes User - Friendly Feature

The unit comes with an over pressure stop sensor, which is specifically designed to protect you from hurting your skin or nails in case of careless over-pressuring the attachment. Once the auto-stop program is initiated, the front bright light will flash twice, and the LED indicator will flash RED. The device will then stop.

This feature is specifically designed for Diabetic users who may have low skin sensitivity.

DISPOSAL

Observe the local regulations for material disposal.

Dispose of the device in accordance with local regulations.

If you have any questions, please contact the local authorities responsible for waste disposal.

PRODUCT CARE AND MAINTENANCE

Turn the unit off and unplug the power cord from the electrical outlet before cleaning the device.

Clean the device with a slightly moistened cloth.

You can also moisten the cloth with a mild detergent to remove stubborn stains.

Keep water out of the device.

If water does contact the device, let it dry thoroughly before using.

Clean the attachments with a cloth or brush moistened with alcohol; dry them carefully afterwards.

Do not use harsh chemicals or abrasive cleaners on the device.

Technical Data / Specification:

Model No CR20

Name: Caring Mill by Aura Sleek Corn and Callus Remover

Product Size: 6.8" X 1.5"X 1.5" inch

Product weight: 6 oz (approx.)

Full charging Time: 4 hours (approx.)

Lithium-ion battery: 3.7V 2200mAh

Charging cable: USB socket with USB plug (Type C)

Charging input: 5VDC 1.0A (AC adaptor not supplied)

Customer Service

For support or inquiries please contact us at:

support@aura-medical.com

FCC Compliance Information

Manicure/Pedicure Set CR 20

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1 This device may not cause harmful interference, and
- 2 This device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the User's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

