

[Click Here](#)



Bissell steam mop user manual

Bissell lift-off steam mop instructions. Bissell steam mop not working. Bissell steam clean instructions. Bissell symphony vacuum and steam mop user manual. Bissell powerfresh steam mop user manual. Bissell steam mop how to turn on. Bissell steam mop settings. Bissell powerfresh deluxe steam mop user manual. Bissell steam mop instructions. Bissell steam mop manual.

Given article text here BISSELL Machine User Guides and Manuals Download Do not point steam at people, animals, or electrical outlets. Store indoors and unplug when not in use. Do not leave the cleaner unattended or expose hair, clothing, fingers, or body parts to openings or moving parts. Keep hands dry while handling the cleaner. If it's been damaged or dropped into water, return it to a service center. Avoid using the cleaner near flammable materials, explosive vapors, or toxic substances. Do not use it on leather, waxed surfaces, synthetic fabrics, velvet, or other delicate materials. Never immerse the cleaner in water or use it for purposes other than described in this manual. Use only manufacturer-recommended attachments to avoid fire, electric shock, or injury. Avoid adding descaling, aromatic, or detergent products to the cleaner as they may damage it or make it unsafe. Unplug by holding the plug, not the cord. Close attention is necessary when using the cleaner near children. This model is for household use only, and commercial use voids the manufacturer's warranty. The appliance has a polarized plug that reduces the risk of electric shock. To avoid any issues, ensure the plug fits fully into the outlet, and if it doesn't, contact a qualified electrician to install a proper outlet. Never change the plug or modify its design. Thank you for purchasing a BISSELL hard floor cleaner. We're proud of our product's quality and back it with a limited two-year warranty and dedicated Consumer Care department for assistance. Before doing maintenance or troubleshooting checks, make sure to plug your PowerFresh Steam Mop into an electrical outlet. Assembling the steam mop is quick and easy; it comes with several parts including a handle assembly, lower body, mop head, water tank, easy scrubber, and fragrance discs. Be cautious when using the steam mop on hardwood floors as prolonged application of steam can damage the surface treatment. Always test the steam mop in an inconspicuous area before mopping large areas and move the unit continuously while depressing the trigger. The steam mop generates hot steam, so regular foot traffic and direct sunlight can wear down timber floor surface treatment making it more susceptible to steam damage. Check with your timber floor specialist prior to using the PowerFresh Steam Mop. When operating the steam mop, ensure there is water in the tank, a knocking sound may indicate no water. The water tank should be refilled with distilled or demineralized water as tap water may cause issues. Never use chemicals in the water tank of your PowerFresh Steam Mop. Choose from three levels of steam using the SmartSet Steam Control, and switch between microfiber mop pads designed for everyday cleaning or heavily soiled floors. The easy scrubber can be used to quickly clean sticky messes and grout with ease. Be sure not to put descaling, alcoholic, or detergent products into the steam cleaner as this may damage it. 1. Fill water tank with lukewarm water for optimal performance. 2. Replace cap and tighten until snug. 3. Slide tank into place and press down firmly to secure. 4. Twist Quick Release cord wrap clockwise to fully unwrap power cord, then plug into 120-Volt outlet as described in Important Safety Instructions page 3. 5. Steam Level button will glow when PowerFresh Steam Mop is ready for use. **Note**: Expect a brief "knocking" sound from the pump during first use, which should only last a few seconds and is normal. **Tip**: Use distilled or demineralized water to prolong hard floor cleaner lifespan. Try BISSELL waters in scents like Citrus, Eucalyptus Mint, and Spring Breeze for added freshness. Before cleaning, thoroughly sweep or vacuum the floor. Do not use descaling, alcoholic, or detergent products with steam cleaner, as this may damage it or make it unsafe. **Safety Precautions**: Tinted plates on foot may get hot while in use; avoid touching. PowerFresh Steam Mop is designed for ceramic tile, laminate, marble, stone, and sealed hardwood floors. Use on waxed or some unwaxed floors may result in diminished glossiness. Do not use on unsealed wood floors. Test in an inconspicuous area first and check care instructions from flooring manufacturer. Plug unit in, wait 30 seconds for it to heat up, then choose steam level: Low (delicate floors), Medium (regular cleaning), or High (durable floors or sticky messes). **Sanitizing**: Place PowerFresh Steam Mop over the spot for a minimum 15 seconds using continuous steam. For larger areas, overlap swivel head placement. **Removing Dried-On Sticky Spots**: Use scrubby pad on steam mop, press and lock Easy Scrubber brush into place, then slowly move brush over sticky spot to remove. To turn off PowerFresh Steam Mop, continue pressing Steam Level button until blue light is illuminated. When unit stops emitting steam, unplug it. To refresh your carpet or rug with the PowerFresh Steam Mop, start by placing the swivel mop head with the attached mop pad into the carpet refresher attachment. Fill the water tank and begin gliding the steam mop in a forward and backward motion to release steam. When you're finished, unplug the machine and remove it from the carpet. Make sure not to leave the mop in one place for too long. After use, follow these steps: Unplug the power cord, remove the mop pad using the Quick Release tab, and wipe down all surfaces with a soft cloth. Store the steam mop upright in a dry area. Remember to empty any remaining water from the tank before storing it. In case of issues, refer to the troubleshooting guide: * Reduced or no steam: Check if the water tank is empty and refill it. If that's not the issue, make sure you've selected the correct steam level. * Steam level not selected: Press the steam level button to select the desired level. Please note that maintenance or service not included in this manual should only be performed by an authorized representative. For any questions or concerns, contact BISSELL at 1-800-237-7691. Accessories available for your BISSELL steam mop include: * PowerFresh Steam Mop Pad (2-pack) with Fragrance discs (4-count) * Spring Breeze Fragrance Discs - 8-pack * Odor Eliminating Pet Fragrance Discs - 8-pack * Citrus Scented Demineralized Water (32 oz.) * Eucalyptus Mint Scented Demineralized Water (32 oz.) * Spring Breeze Demineralized Water (32 oz.) Your PowerFresh Steam Mop comes with a warranty that provides you with specific legal rights. For additional instructions or to inquire about our products, contact us at 1-800-237-7691 or visit www.bissell.com. BISSELL Limited Two-Year Warranty Terms If you have any questions about the warranty or would like to report an issue, please contact BISSELL Consumer Care at your convenience. This limited two-year warranty is applicable to the product purchased from an authorized dealer and covers defects in materials and workmanship. For a period of two years from the date of purchase, BISSELL will repair or replace any defective part free of charge, subject to certain exceptions and exclusions outlined below. The warranty does not cover damage or malfunction caused by misuse, neglect, or unauthorized repair, nor does it apply to fans or routine maintenance components such as filters, belts, or brushes. Please ensure that the product is used for personal purposes only and follow the instructions provided in the User's Guide. To register your product and receive benefits such as rewards points, faster service, and product support reminders, please visit BISSELL.com/registration and provide required information. Please note that some states may not allow limitations on incidental or consequential damages, so the above exclusion or limitation may not apply to you. To contact BISSELL about their cleaners, visit their website at www.BISSELL.com/email-us or www.BISSELL.com. When reaching out, provide the model number of your cleaner and your purchase date. Keeping your original sales receipt is recommended, as it serves as proof of purchase date for warranty claims. For more information on warranties, refer to page 15.