

[Click Here](#)



Kenmore 600 series vacuum manual

Kenmore bagless canister vacuum 600 series manual. Kenmore 600 series vacuum troubleshooting. Kenmore 600 series vacuum reviews. Kenmore 600 series vacuum cleaner manual. Kenmore 600 series vacuum how to turn on. Kenmore 600 series vacuum owner's manual. Kenmore 600 series vacuum won't turn on.

Model/Modelo/Modèle: BC4026 Rev.01 1-877-531-7321 (US) / 1-844-608-3081 (CA) Vacuum Cleaner Help Line:8:00am-5:00pm EST, M-F Use & Care Guide Manuel de Uso y Cuidado Pet Friendly POP-N-GO bagged canister vacuum cleaner Aspiradora con tanque en bolsa POP-N-GO que admite mascotas Kenmore www.kenmore.com Checking components ensures safe assembly Check packaging list to confirm receipt of all parts Ensure you can identify components before starting assembly Electrical shock hazard: do not use until completed PowerMate alignment and wand insertion is necessary Handle assembly requires secure lock button placement Proper hose storage prevents damage 1. Before using the PowerMate, ensure that there is no damage to the power cord or plug, as this may result in personal injury or property damage. 2. Pull the cord out of the canister to the desired length and plug it into a 120 Volt outlet located near the floor. 3. To rewind the vacuum cleaner, turn off and unplug it first, then hold the plug while rewinding to prevent damage or injury from the moving cord. 4. Lower the wand from its upright position by pressing on the HANDLE RELEASE pedal. 5. Select a pile height setting using the height adjust pedal on the rear of the PowerMate, taking care to follow the manufacturer's cleaning recommendations for your carpet type. The jerky strokes do not provide a thorough cleaning, which is why we need to use the Active brush edge cleaners on both sides of the PowerMate. These guides can be used along baseboards or next to furniture to remove dirt that gets trapped at carpet edges. To store the wand, you can slide it into the U-shaped storage hook on the canister. This feature allows for efficient storage space conservation when storing the canister upright. Make sure not to attach or detach the handle or wands while the vacuum cleaner is turned on to avoid sparking and damaging electrical contacts or electronic controls. The PowerMate has an onboard storage area for attachments, making it easy to store them conveniently. To use the attachments, simply press the release button and slide out the attachment you need. When attaching the floor brush, first open the tool storage cover by pressing the release button. Then, push the wand collar over the floor brush neck and tilt the wand upward to lift it out. If there's any difficulty attaching or detaching the brush, refer to the instructions provided. For the dusting brush, crevice tool, and Pet PowerMate, follow these steps: open the tool storage cover, remove the attachment as needed, and follow the usage guidelines in the ATTACHMENT USE TABLE. To attach or detach attachments on the handle or wand, make sure to turn off the vacuum cleaner first. Remember to always clean your attachments before using them on fabrics, and use the 3-way On/Off switch in the HARD FLOOR position. **Important Safety Information and Performance Features** To avoid accidental starting, always turn off and unplug the vacuum cleaner before cleaning the agitator area to prevent personal injury. The PowerMate features an overload protector that prevents motor and belt damage if the agitator jams. If the agitator slows down or stops, the overload protector shuts off the PowerMate. To correct the issue, turn off and unplug the vacuum cleaner, remove the obstruction, then press the OVERLOAD PROTECTOR RESET button. The electronic suction control allows you to adjust the power of the vacuum cleaner's suction motor for different surfaces. Increase suction for carpets, bare floors, and upholsteries, and decrease suction for draperies and lightweight rugs. The CHECK BAG INDICATOR light will come on if the airflow becomes blocked. Check the disposable dust bag, motor safety filter, and other possible clog locations to correct the issue. The thermal protector automatically trips to prevent overheating and potential damage to the vacuum cleaner. If a clog occurs, turn off and unplug the vacuum cleaner to allow it to cool and reset. For best cleaning results, keep the airflow passage open and check the starred (★) areas occasionally for clogs. Turn off and unplug the vacuum cleaner before checking. To maintain optimal performance: * Check and change the dust bag when full. * Clean or replace the motor safety filter and exhaust filter if dirty. * Remove any dirt or debris in the belt path area or agitator area. Remember to always follow proper maintenance procedures and consult the user manual for troubleshooting guides. 1. To resolve suction issues with your vacuum cleaner, start by connecting the hose to the canister and turning it on. Check the end of the hose for adequate suction; if you get good suction, there's no clog in the hose. If not, remove any dirt or debris from the hose and handle. Then, connect the hose handle to the wand and check for suction at the end of the wand. If the suction is poor, clean out any debris in the wand as well. 2. Check the PowerMate swivel for blockages and clean it thoroughly. 3. To clean the exterior and reduce static electricity and dust buildup, wipe the outer surface with a damp cloth that has been dipped in a mild liquid detergent solution, then wring it dry completely. 4. Be cautious when using attachments; if they're wet, don't use them on other surfaces until you've washed them first, as they may leave marks. 5. Regularly change the dust bag to ensure optimal cleaning results; the CHECK BAG indicator will signal that it needs to be changed or airflow is blocked. 6. To replace the dust bag, follow these steps: Turn off and unplug the vacuum cleaner. Remove the hose from the canister. Pull out the hood release, then lift the canister hood. Pull out the old bag and discard it. Don't bend or crease the cardboard when installing the new bag; instead, rotate the bag mount down and push the new bag into place until it locks into position. 7. Once you've installed the new bag, close and latch the canister hood, insert the hose back into the canister, plug the cord into a wall outlet, and avoid reusing the dust bag to prevent damage to your vacuum cleaner motor. Rinse, then dry before cleaning or installing the filter. Do not use the dishwasher or install while damp. Slide the filter back into its position under the ribs in the bag cavity and secure it with the rubber retainer. Replace the bag according to the instructions on page 17 of the user manual. Before starting maintenance on your PowerMate vacuum cleaner, always turn it off and unplug it to avoid electrical shock or personal injury. When the brushes on your agitator assembly are worn down to the base support bars, it's time to replace them. To replace the agitator assembly: 1. Remove the floor brush from your PowerMate. 2. Take out the cover, belt, and agitator assembly. Refer to "Belt Changing and Agitator Cleaning" (page 20) for guidance. 3. Install a new agitator assembly. 4. Reinstall the belt and cover, following the instructions in "Belt Changing and Agitator Cleaning" (page 20). If you need to purchase a replacement agitator assembly, call 1-844-553-6667 or visit searspartsdirect.com. Troubleshooting common issues: * Vacuum cleaner won't start: Check that it's plugged in correctly, the circuit breaker hasn't tripped, and the hose electrical connections are secure. If the problem persists, refer to "Troubleshooting" (page 20) for further guidance. * Vacuum cleaner starts but shuts off: Check the hose or hood electrical connections, and ensure there are no obstructions caught in the vacuum. If the issue continues, refer to "Thermal Protector" (page 15). * PowerMate won't run when attached: Ensure the connections are plugged in correctly, the belt is not worn out, and the agitator is clean. If the problem persists, try changing the mode from HARD FLOOR to CARPET. Additionally, check the CHECK BAG Indicator to ensure it's not due to a full or clogged dust bag. Certain blockages in the vacuum's airflow passage may cause issues. To resolve this, use a tool to clear the blockage. This is a normal process and the light on the tool should turn off once it's removed. The vacuum may also pick up moveable rugs or push them with too much force due to excessive suction. Adjusting the suction setting to a lower power level can help resolve this issue. If the cord won't rewind, try cleaning the dirty power cord by pulling it out and rewinding it. Additionally, if the vacuum is leaving marks on the carpet, refer to the VACUUMING TIPS section (page 12) for guidance. The Kenmore 125 Series Bagged Canister Vacuum features a HEPA dust bag that caters to multiple surfaces, boasting four height adjustments. It boasts power and performance with 12 amps of energy, accompanied by a retractable cord storage system. The vacuum weighs between 20-24 pounds and comes equipped with controls on the handle. Three HEPA filters are included in the product, along with various accessories like the Crevice Tool, Pet PowerMate, Dusting Brush, and Bare Floor Tool.