




STORM DOOR MOUNTING FRAME



SCREW COVER INSTALLATION INSTRUCTIONS

Starting at one end of the screw cover, engage either side of cover into the aluminum track in mounting frame. Apply pressure to opposite side of cover to "snap" into place working your way the entire length. NOTE: It may be necessary to trim the cover length to fit.

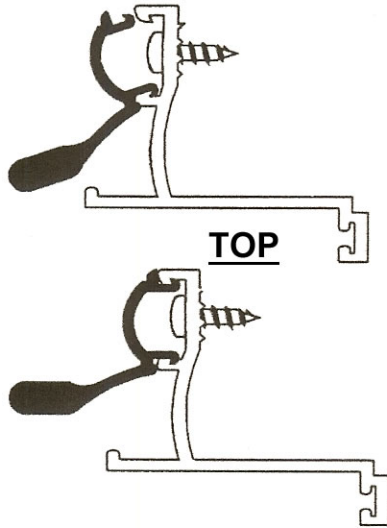

**ENGAGE COVER
INTO TRACK**

**THEN ROTATE
AND SNAP INTO PLACE**

