

Astragal Kit Installation Instructions For All Croft Combination Screen & Storm Doors

Please check your kit to be sure it contains all of the following items:


- 1 Continuous Z-bar head
- 1 Astragal
- 2 Dead bolts
- 4 #6 x 3/8 flat head screws for attaching dead bolt
- 2 #6 x 3/8 pan head screws for attaching door strike

It is suggested and recommended that two persons install this unit.

- 1) Remove all packaging, Z-bar head, Z-bar latch jambs and prehang clips from both doors.
- 2) Attach astragal to latch jamb of stationary door using the screws that held the prehang clips as well as the two remaining screws in latch jamb.

The top of the astragal should be placed 5/16" down from the top of the door.

- 3) Join the two doors together using the full length Z-bar head. Reattach two prehang clips on the top of the doors under the second screw from the latch side of the door.
- 4) Cut bottom of hinge Z-bars and astragal to properly fit height of opening.
- 5) Check overall width and if necessary, strip the jambs of the wooden doors to insure proper fit.
- 6) Place double unit in opening, plumb the jamb of the operating door and fasten securely. Position stationary door so that the latch jambs on both doors are parallel and fasten securely.
- 7) Adjust expanders at the bottom of the doors.
- 8) Attach dead bolts to astragal.
- 9) Apply hardware as per instructions in hardware kit with exception of the strike. Attach strike to astragal using shims if necessary.

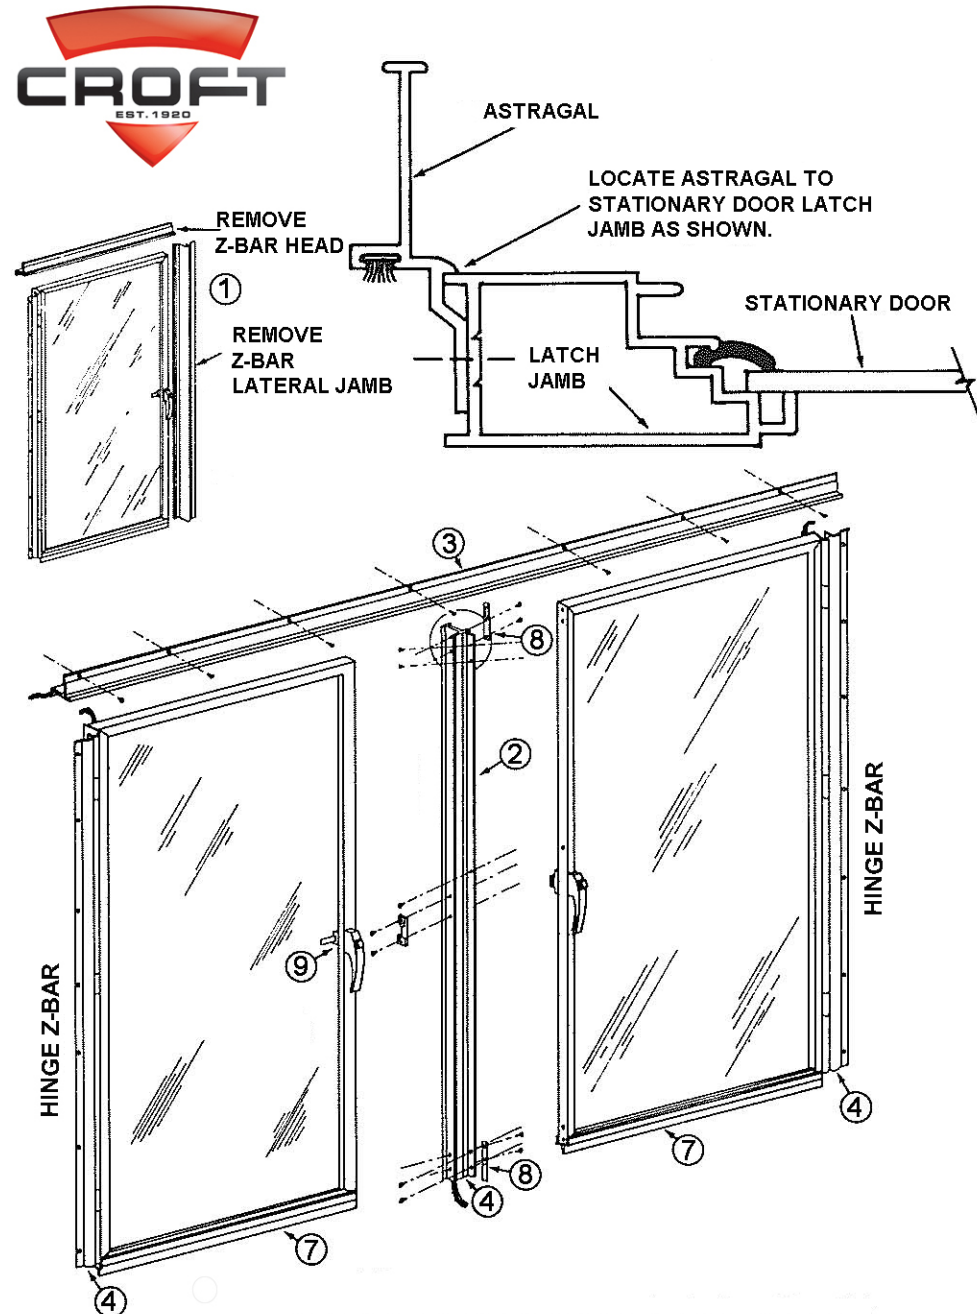

ASTRAGAL KIT FOR DOUBLE (FRENCH) DOOR UNIT

ASTRAGAL WILL FIT EITHER RIGHT OR LEFT HAND OF ANY STYLE CROFT DOOR.