


## SPK-IN

### IN Series Splice Connection Kits

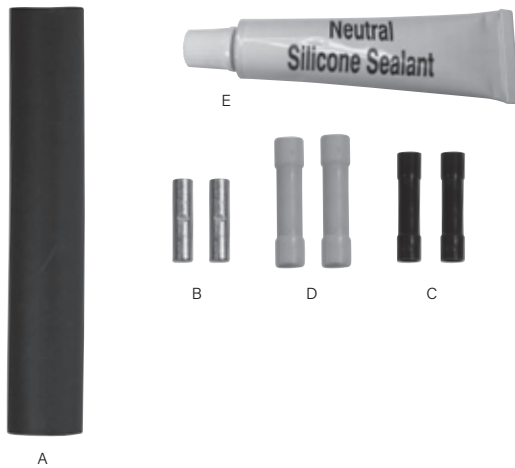

#### DESCRIPTION

The SPK-IN kit components allow you to make one splice on IN Series cables. The Electric Connection Kit is FM Approved. The kit is FM approved and CSA certified.

#### NOTE:

- Fiberglass Tape is required to attach cable to pipe.
- Silicone Sealant is provided ONLY with SPK-IN-5

#### TOOLS REQUIRED

- Lineman's Pliers
- Wire Strippers/Crimping Tool
- Utility Knife
- Heat Gun



#### SPK-IN (FOR 1 SPLICE) INCLUDES:

- A. 1 Heat Shrink Sleeve (.75" x 6")
- B. 2 #12-10 Non-Insulated Butt Splices
- C. 2 #12-10 Insulated Butt Connectors
- D. 2 #16-14 Insulated Butt Connectors

#### SPK-IN-5 (FOR 5 SPLICES) INCLUDES:

- A. 5 Heat Shrink Sleeve (.75" x 6")
- B. 10 #12-10 Non-Insulated Butt Splices
- C. 10 #12-10 Insulated Butt Connectors
- D. 10 #16-14 Insulated Butt Connectors
- E. 1 Tube of Silicone Sealant\*

\*California Prop 65 compliant.



This kit and the cable used with it must be installed by a qualified electrician. All assembly, installation, and test instructions must be followed. Improper installation can result in property damage, serious injury, and/or death due to electric shock and fires. Please call Delta-Therm Corporation at 1-800-526-7887 with any installation or operating questions.