



IQUBE SIDE MOUNT START UP

After the electrician completes installation of a required 208-230V 35A or 45A power source to the Breaker Panel, follow the following steps to set up the IQUBE Side Mount Unit.



1. Turn on the circuit breaker next to the unit. Make sure your main circuit breaker is also turned on.
2. Gain access to the unit's controller by locating the controller cover on the right side of the unit.

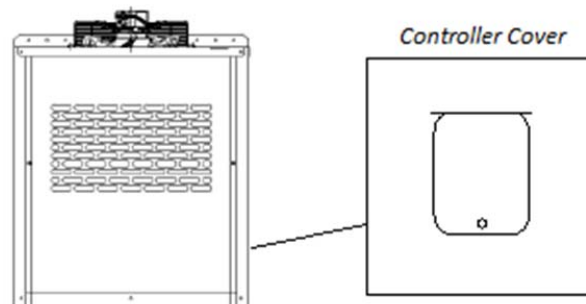

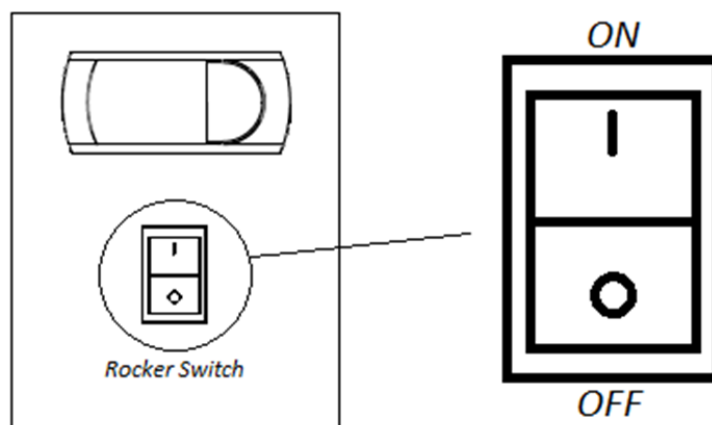








3. Turn the rocker switch under the controller (led display) on. Note: When power is applied, display may be on but if the rocker switch is not on, the unit will not operate.




4. This unit can be used as a freezer or cooler, to change the unit's settings follow the following steps.

A. **Press and hold the red**  button for 4 - 5 seconds until the controller displays **PS** and release the  button.

B. Press  button again when **PS** is flashing. Change 0 to 22 by pressing the  button. Once at 22 press  button and you will see **PS** flashing again.

C. Press the   button until you locate **EZY** and press the  button. Press   or  button to change setting to **"1"** (if using it as a cooler) or **"2"** (if using it as a freezer).





Once you have chosen your settings, **press and hold the**  button for 4 - 5 seconds to save your settings.

(THIS STEP IS VERY IMPORTANT AS MISSING THIS STEP WILL NOT SAVE YOUR SETTINGS)

D. If you would like to change the temperature settings, please follow the steps below.

Cooler : EZY 1 is preset for 37°F Temperature Setting Range : 37°F - 50°F

Freezer : EZY 2 is preset for 0°F Temperature Setting Range : 0°F - 35°F

I. **Press and hold the red**  button for 1-2 seconds. You will see the default setting above flashing. Press  or  to change the temperature to your desired setting. Press  after you have changed the temperature setting.

5. When you have successfully completed setting up the unit, the led display will show the current temperature of the walk in box.



Scan the QR code to download the IQUBE Manual

If you have any questions or concerns, please call Infinity Refrigeration at 1-888-328-9050 or visit www.infinityref.com for more information.



INFINITY
REFRIGERATION