





Minjng Magazine AWARDS 2019
WINNER






MARKET OPPORTUNITIES

- World cyanide market for gold processing at c. USD 5-7 billion p.a.
- Cyanide is predominately used in large-scale mining operations which represents c. 70% of gold production
- c. 20% of the world's gold is produced by the ASGM sector
- Target market of over 14,700 large-scale, new mines
- Over 6,300 mines banned or have an aversion to cyanide
- CET's non-toxic solution is applicable in 90% of gold production

MARKET PENETRATION

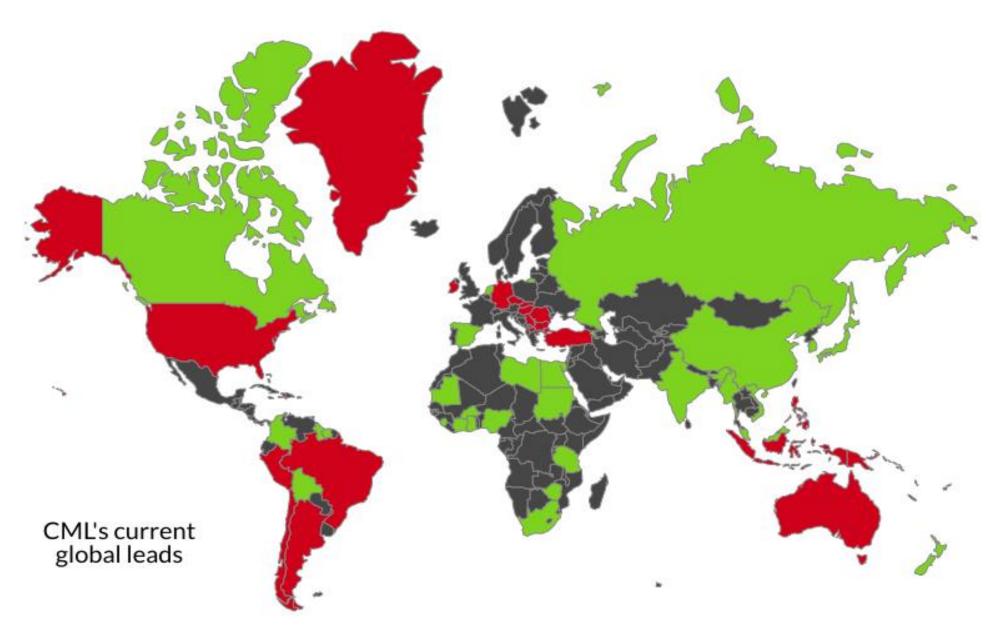

Active Leads
Countries or sub territories that have banned or have an aversion to cyanide for new projects

Active Leads
Countries with active leads which can still use cyanide for new projects

PROGRESS UPDATES

- Over **500** active leads since marketing commenced, of which 60 are going through test planning and logistics 54 mines in various stages of testing and process evaluation.
- More than **150** tests done globally with recoveries as good as and if not better than cyanide. Carbonaceous ore tested resulted in 45% + improvement on cyanide in some cases.
- Plant and chemical manufacture, sales and distribution partnership discussions with 6 re-sellers globally.
- New patents identified and provisional lodgement completed in November 2020.

TARGET MARKET₁

Development Stage	Total Mines	Cyanide Aversion
Exploration	4,963	2,215
Feasibility	483	216
Grassroots	3,049	1,039
Scoping	6,213	2,870
TOTAL	14,708	6,340
Region	Total Mines	Cyanide Aversion
Africa	1,228	38
Asia-Pacific	3,368	2,552
Europe	1,001	134
Latin America and Caribbean	2,733	1,340
Middle East	62	0
USA and Canada	6,316	2,276
TOTAL	14,708	6,340

1. Derived from S&P Analytics







MINING MAGAZINE AWARDS 2019

- Winner of "Mineral Processing" category
- Industry-choice award celebrates excellence and innovation

Excerpt from Mine Magazine Awards 2019 Winners page:

"In June 2019, Clean Mining launched a cleaner and safer processing solution for gold miners, which as the potential to transform the gold sector and responsible mining globally. The innovative and cost-effective solution replaces toxic sodium cyanide, used in gold processing since 1887..."





WHY CYANIDE IS A PROBLEM:

- Accidents / containment failures lead to catastrophic pollution
- Massive environmental and health risks
- Significant environmental incidents, some involving water bodies, have continued to occur globally



List of recent cyanide-caused gold mining disasters







WHAT IS OUR SOLUTION?

- Award-winning, non-toxic solution, developed alongside CSIRO
- Widely applicable / scalable to broad range of ores / operations
- Potential to eliminate hazardous tailings dams entirely
- Only genuine solution for replacing mercury in ASGM



SOLUTION OF SOLUTION





MENZIES DEMONSTRATION PROJECT (2018)

- Project verified stability of leach solution in leaching gold with sustainable reagent.
- Demonstrated reagent consumption of less than 2 kg/t (majority of loss is entrained with solids going to tailings).
- The recoveries for vat leaching were typically >80% of leachable gold, benchmarked against bottle roll leach tests.
- While this project initially used vat leaching tanks, agitated tanks has since been implemented in the processes.








SOLUTION USED AT SCALE BARRICK GOLD.

- Developed by CSIRO for a minerology <u>specific</u> to the Barrick Goldstrike mine.
- This was the pre-curser to the current technology which has been expanded to other ore types by CSIRO & now owned by Clean Earth Technologies
- Current production Scaled to 13,400 tonnes per day since 2015
- Maintained 350,000 450,000 oz/y of gold to operations

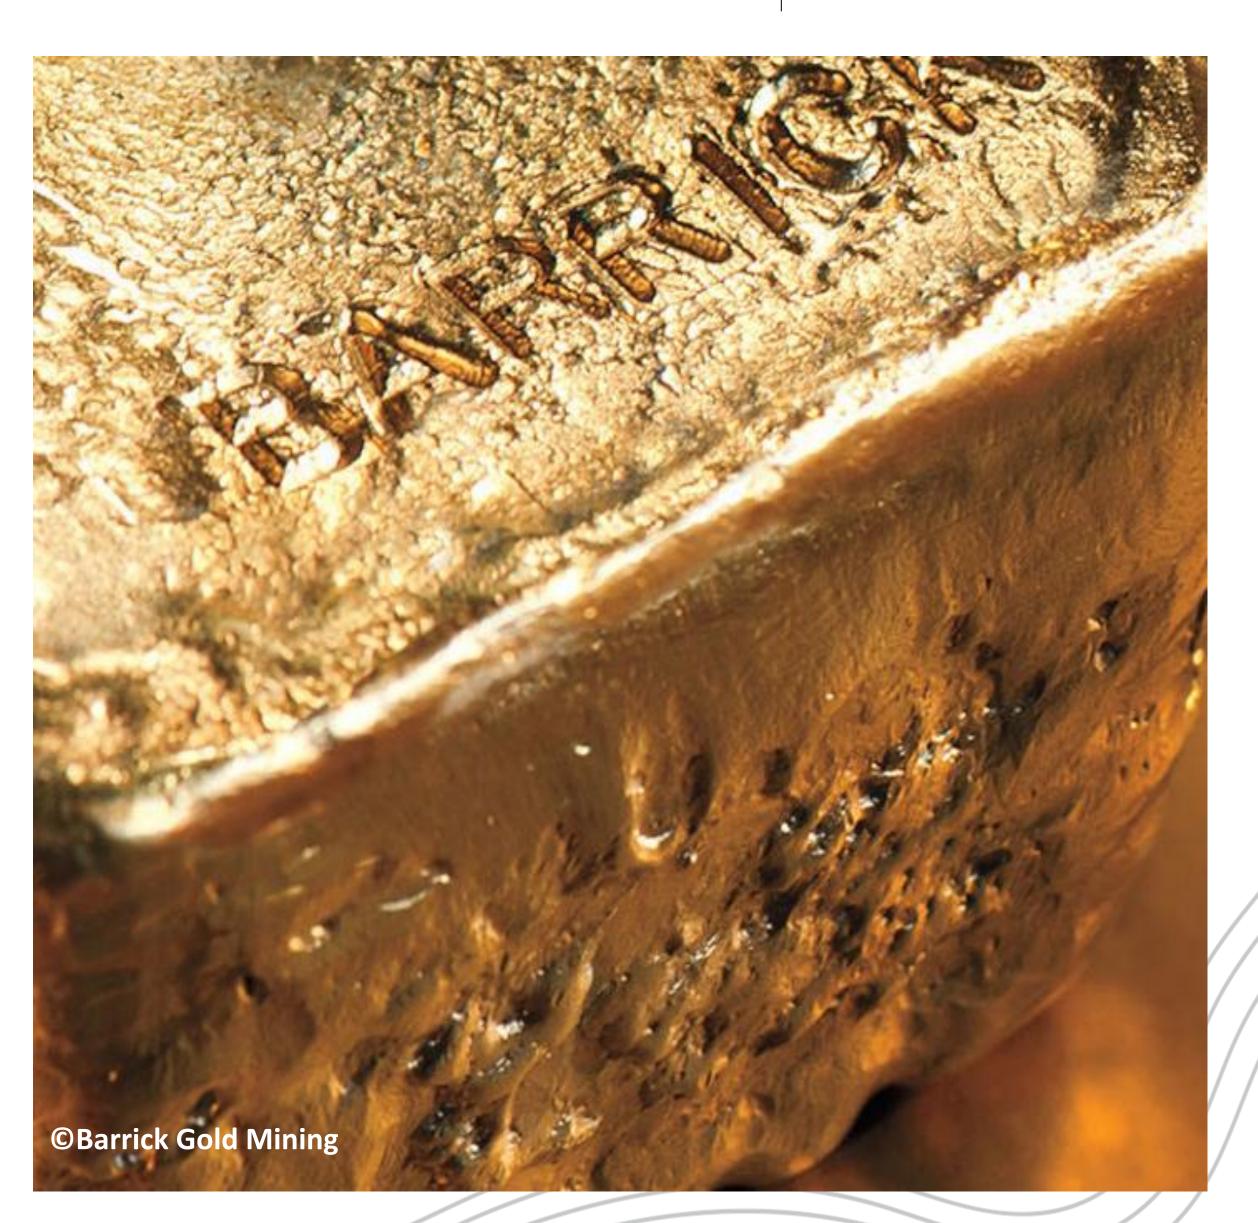





R&D TEST DEMONSTRATION: ARTISANAL SOLUTION

- CLEAN PRODUCTION "Mercury Free" Simple
 & Rudimentary
- COLLABORATIONS AGC shared values and mission to rid Artisanal Mining of Mercury





https://youtu.be/EeXIt1xpYh0

WHAT ARE THE STEPS 2

HOWIT WORKS

TESTING FLOWSHEET



ICP Extended Sweep	HPLC / ICP	SAMPLE	DRY			MOGENISE,
Ag	CML Reagent	RECEIVAL	(60°C	IPLES C)		NTROL CRUSH IM IF NEEDED
AI Ba	Free CN Tetrathionate				_	
Вe	Pentathionate					
Bi	Trithionate		SPLIT II	NTO TESTWOR	RK CHARGES	
Ca	Ag					
Cd	Cu					
Co	Fe -					
Cr Cu	Zn Ni	500g				500g
Fe	Pb					
K	Ca					
Li	Mg					
Mg	Со	Head Assay				
Mn	Cd	ricad Assay				Mill to P80 -
Mo Na	Hg				ے دیلئے	
Ni Ni					•	
P			hľ (
Pb						
SiO2						
Sr T:		केस केस केस		500g		
Ti V		•		1	CML REAGENT LEACH	
Y		ICP Extended Sweep	FAA Au Dup		TEST	
Zn					* 40% SOLIDS, w/w * DURATION: 48 HRS	
As					* SAMPLES TAKEN & ANALYSED AT:	
Hg					4, 24, 48 HRS	
Sb Se						
C - Total						—
C - Organic			Interval Solutions AAS: Au		Residue Solids Au: FAA Dup	Interval Solutions AAS: Au
S - Total			Residue Solution		Αυ. ΓΑΑ Dup	Residue Solution
S - Sulfide			HPLC / ICP			HPLC / ICP

IISE, **CRUSH** EEDED ill to P80 – 75**µ**m **CYANIDE LEACH TEST** * 40% SOLIDS, w/w * DURATION: 48 HRS SAMPLES TAKEN & ANALYSED AT: 4, 24, 48 HRS I Solutions Residue Solids Au: FAA Dup AS: Au

TESTING FLOWSHEET

Clean Mining FOR A RICHER EARTH

SCHEDULE A

1.SCOPE OF TEST WORKS - PHASE 1 A

In-Scope In-

Sample preparation, leach and assay:

- a) Crushing and screening of ore samples to P80 75 micron
- b) Head analysis
 - ICP: Extended sweep including S and C
 - FAA: Au (Dup)
- c) Leaching of crushed ore
 - 48hr bottle roll
 - CML Reagent leach solution (samples taken at 4, 24 & 48 HRS)
- d) Assay of leach tails
 - Leachable Au in solution + solid tail FAA Au (Dup)
- e) Leach solution analysis
 - HPLC

The Deliverables

- Gold Recovery
- Leaching kinetics determines residence time
- Reagent consumption for leaching

1.SCOPE OF TEST WORKS - PHASE 1 B

In-Scope

Sample leach and assay:

- a) Head analysis
 - ICP: Extended sweep including S and C
 - FAA: Au (Dup)
- b) Leaching of ore 48hr bottle roll
 - CML Reagent leach solution (samples taken at 4, 24 & 48 HRS)
- c) Assay of leach tails
 - Leachable Au in solution + solid tail FAA Au (Dup)
- d) Leach solution analysis
 - HPLC

The Deliverables

- Gold Recovery
- Leaching kinetics determines residence time
- Reagent consumption for leaching

1.SCOPE OF TEST WORKS - PHASE 1 C

In-Scope

Sample preparation, leach and assay:

- a) Crushing and screening of ore samples to P80 75 micron
- b) Head analysis
 - ICP: Extended sweep including S and C
 - FAA: Au (Dup)
- c) Leaching of crushed ore
 - 48hr bottle roll
 - CML Reagent leach solution (samples taken at 4, 24 & 48 HRS)
 - Cyanide leach solution (samples taken at 4, 24 & 48 HRS)
- d) Assay of leach tails
 - Leachable Au in solution + solid tail FAA Au (Dup)
- e) Leach solution analysis
 - HPLC

The Deliverables

- Gold Recovery
- Leaching kinetics determines residence time
- Reagent consumption for leaching

1.SCOPE OF TEST WORKS - PHASE 1 D

In-Scope

Sample leach and assay:

- a) Head analysis
 - ICP: Extended sweep including S and C
 - FAA: Au (Dup)
- b) Leaching of ore 48hr bottle roll
 - CML Reagent leach solution (samples taken at 4, 24 & 48 HRS)
 - Cyanide leach solution (samples taken at 4, 24 & 48 HRS)
- c) Assay of leach tails
 - Leachable Au in solution + solid tail FAA Au (Dup)
- d) Leach solution analysis
- HPLC

The Deliverables

- Gold Recovery
- Leaching kinetics determines residence time
- Reagent consumption for leaching


TRADITONAL





TRADITIONAL GOLD CIL PLANT

Figure 1 illustrates an example of a traditional CIL plant for the purpose of indicating differences to a Clean Mining plant.

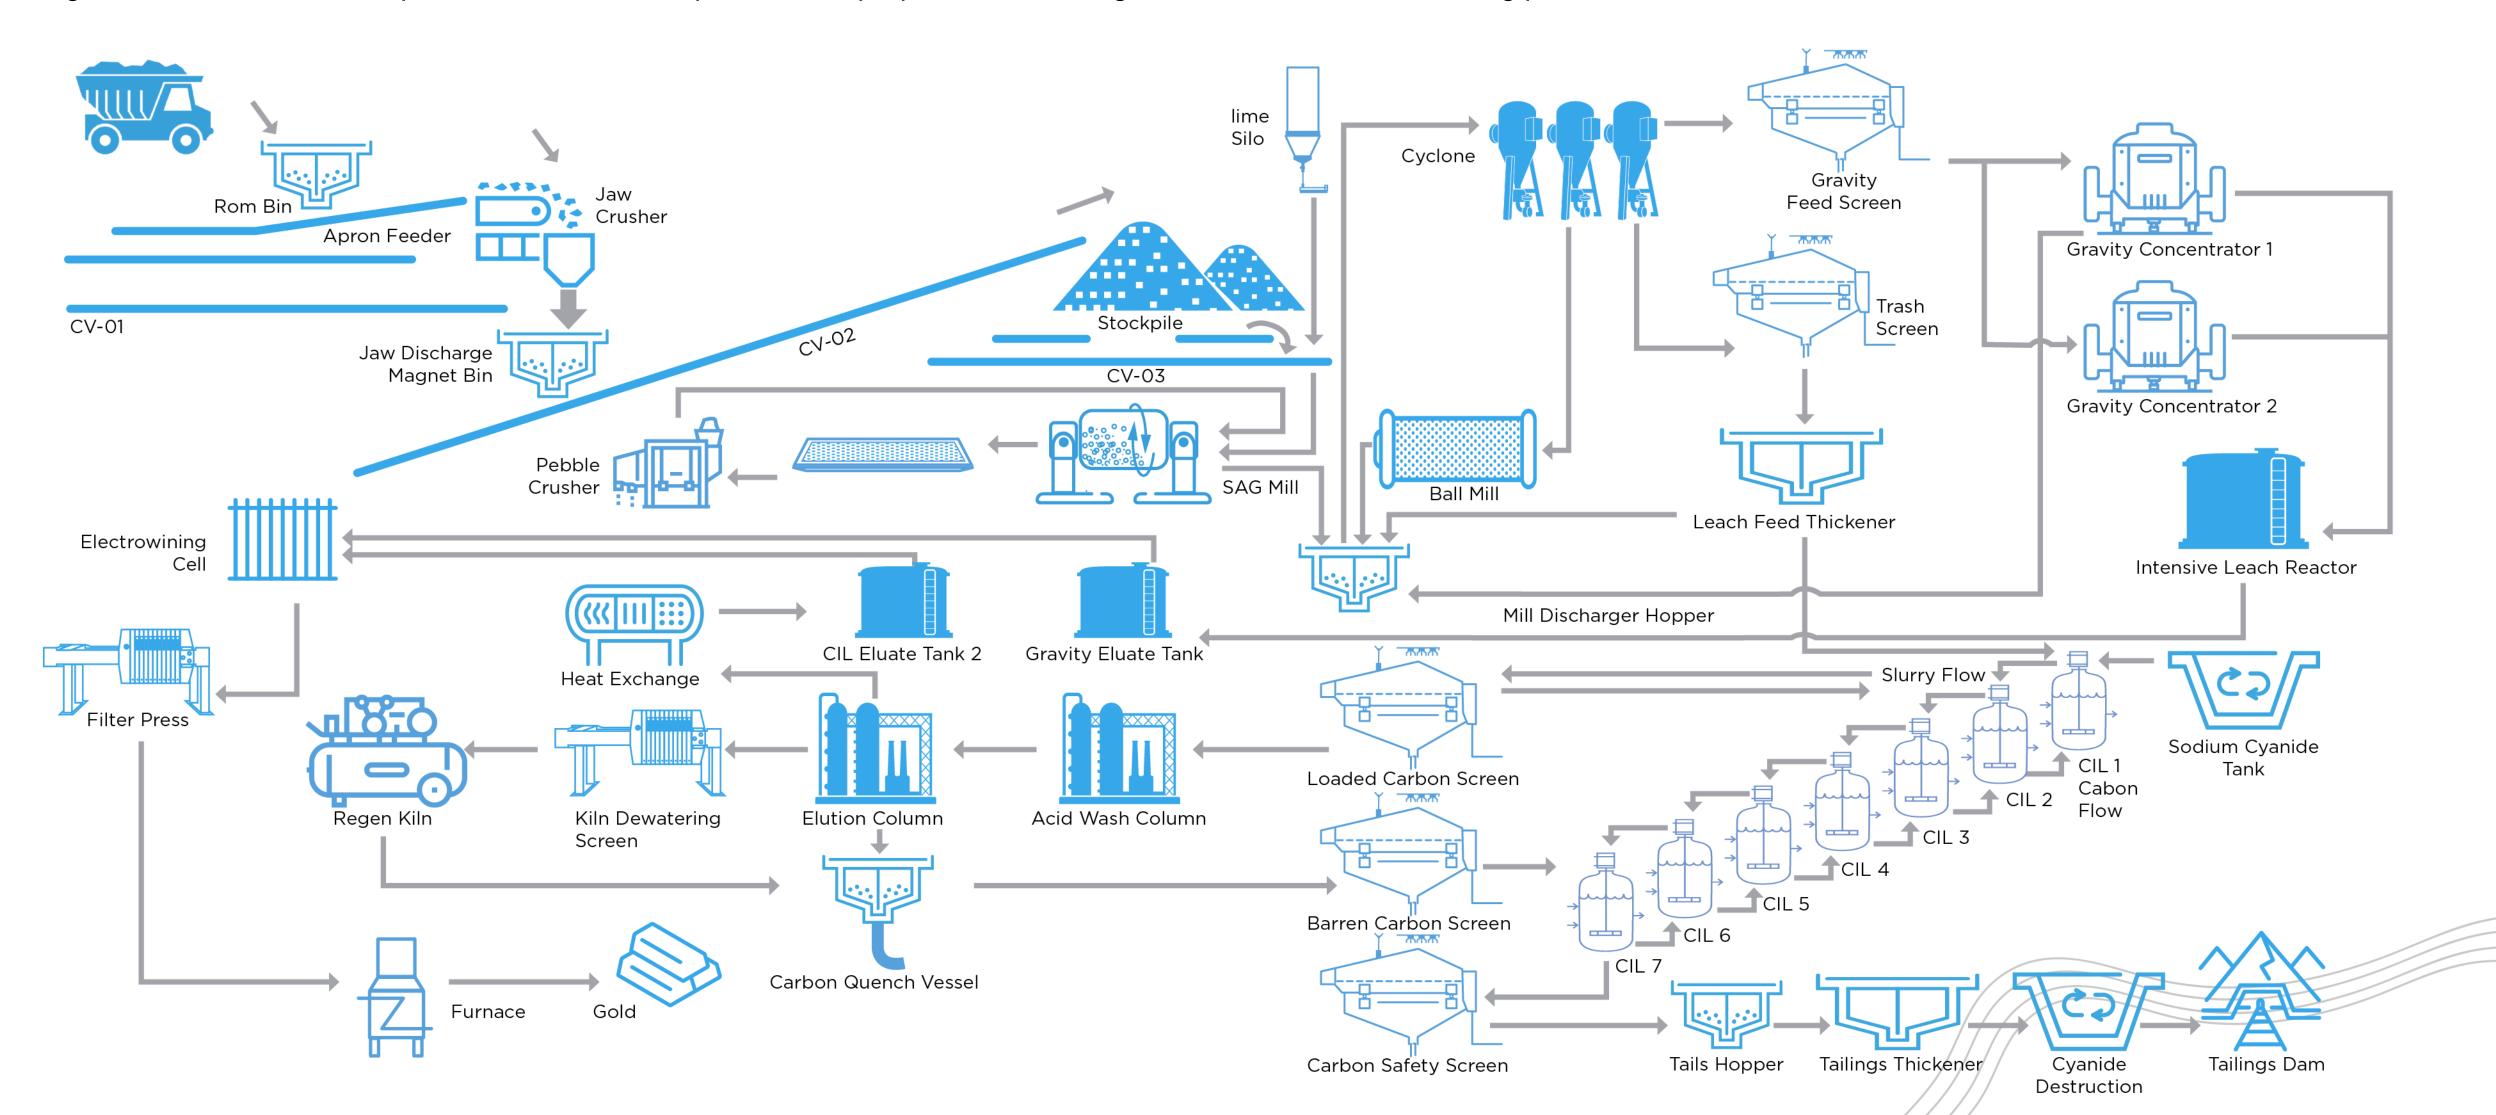






TRADITIONAL GOLD CIL PLANT

Figure 2 illustrates equipment (in highlighted grey sections) that are not required when using the Clean Mining technology.

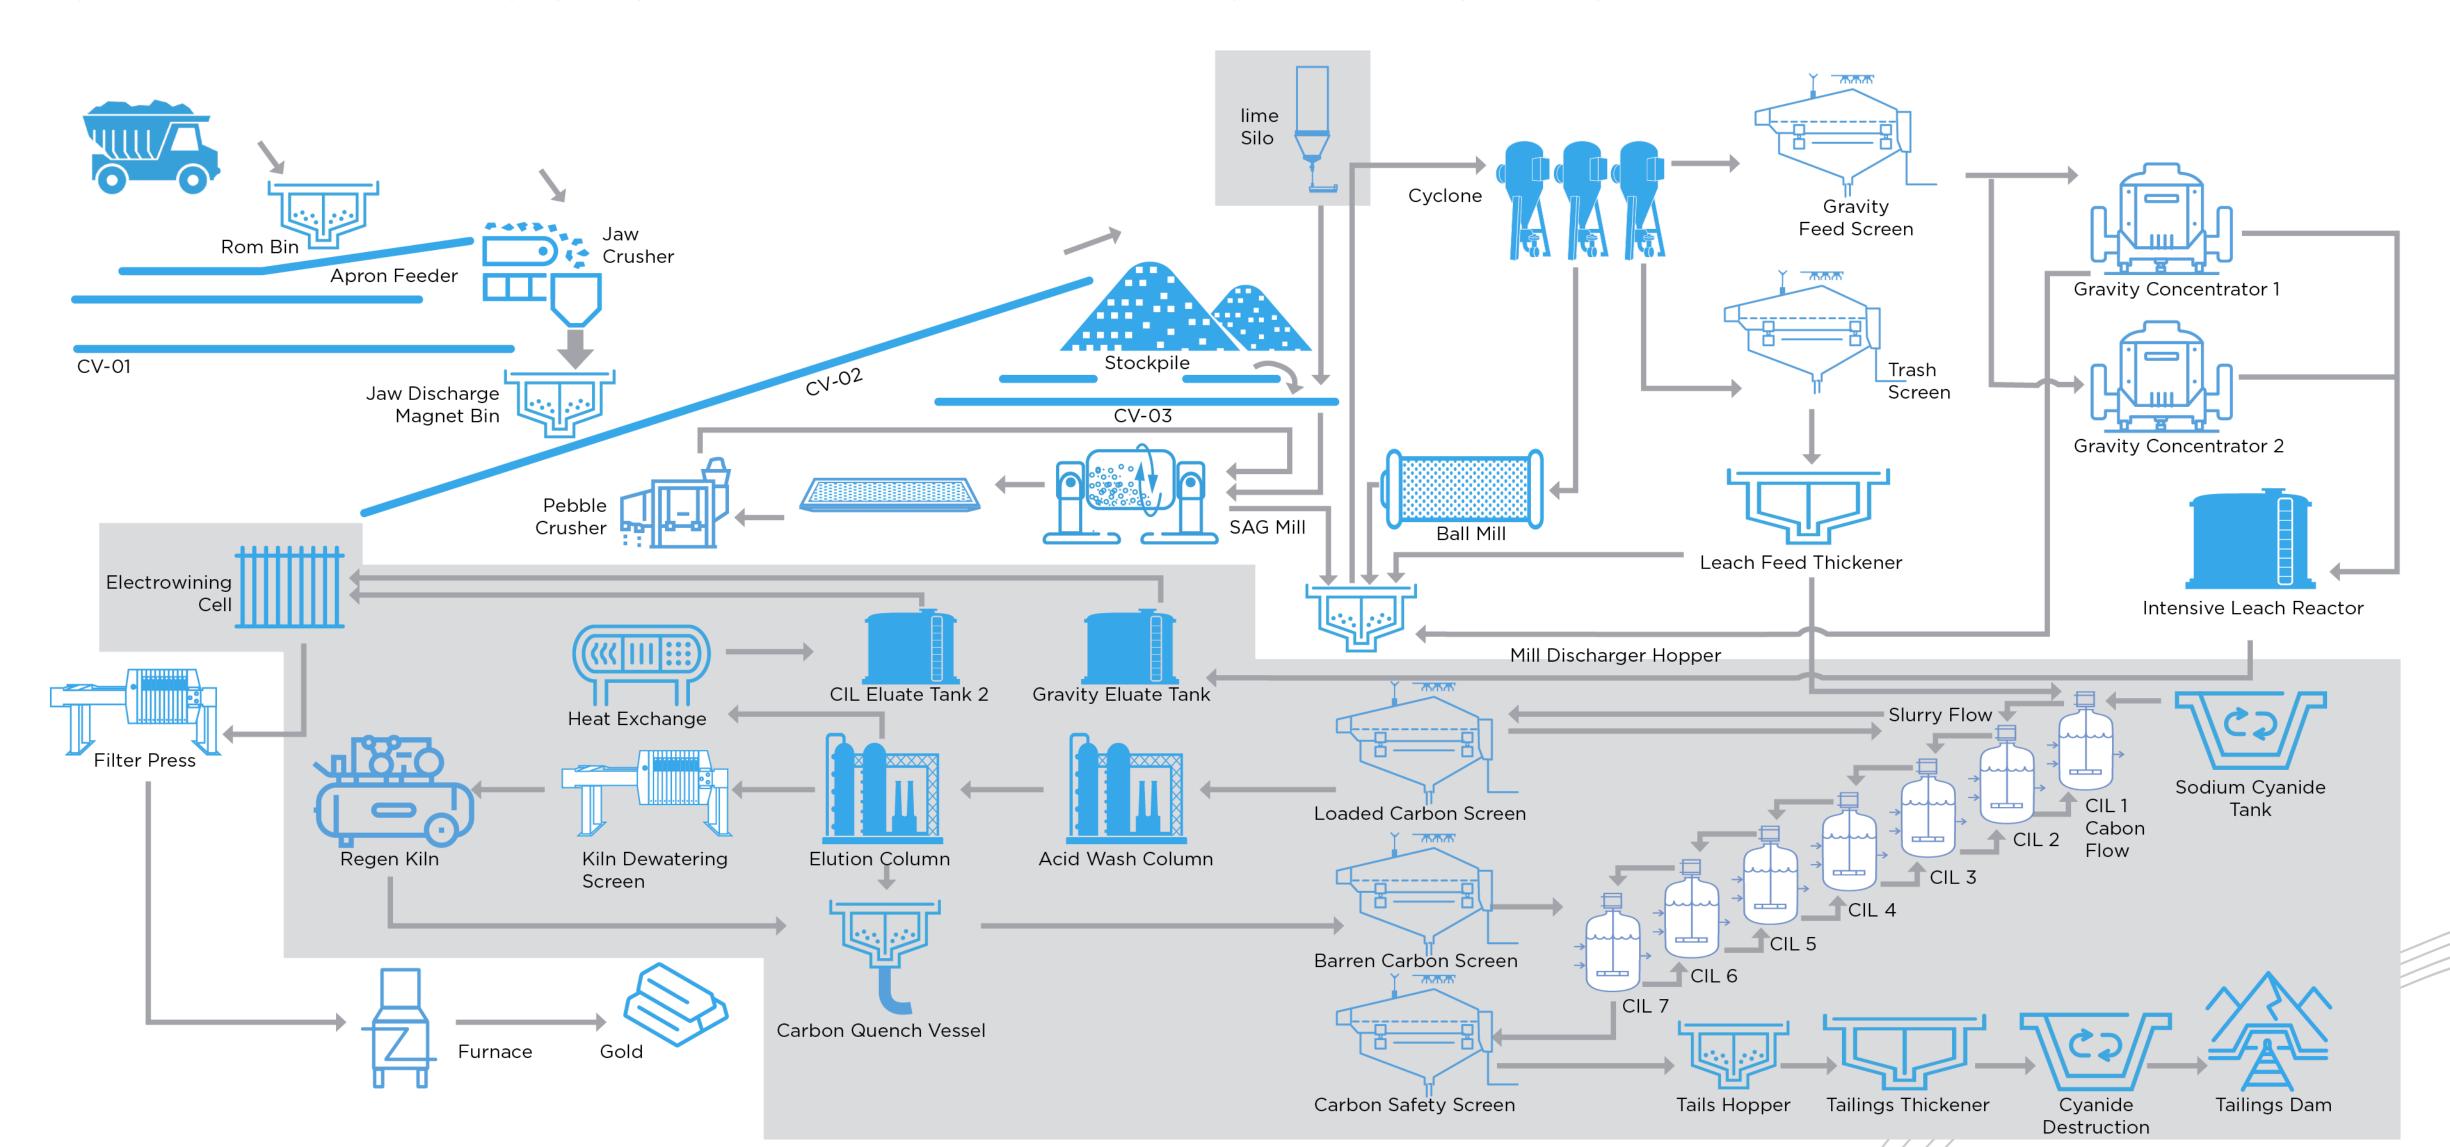






CLEAN MINING GOLD PLANT

Figure 3 illustrates equipment (in the highlighted grey section) required when using the Clean Mining technology.

These are standard equipment within the industry.

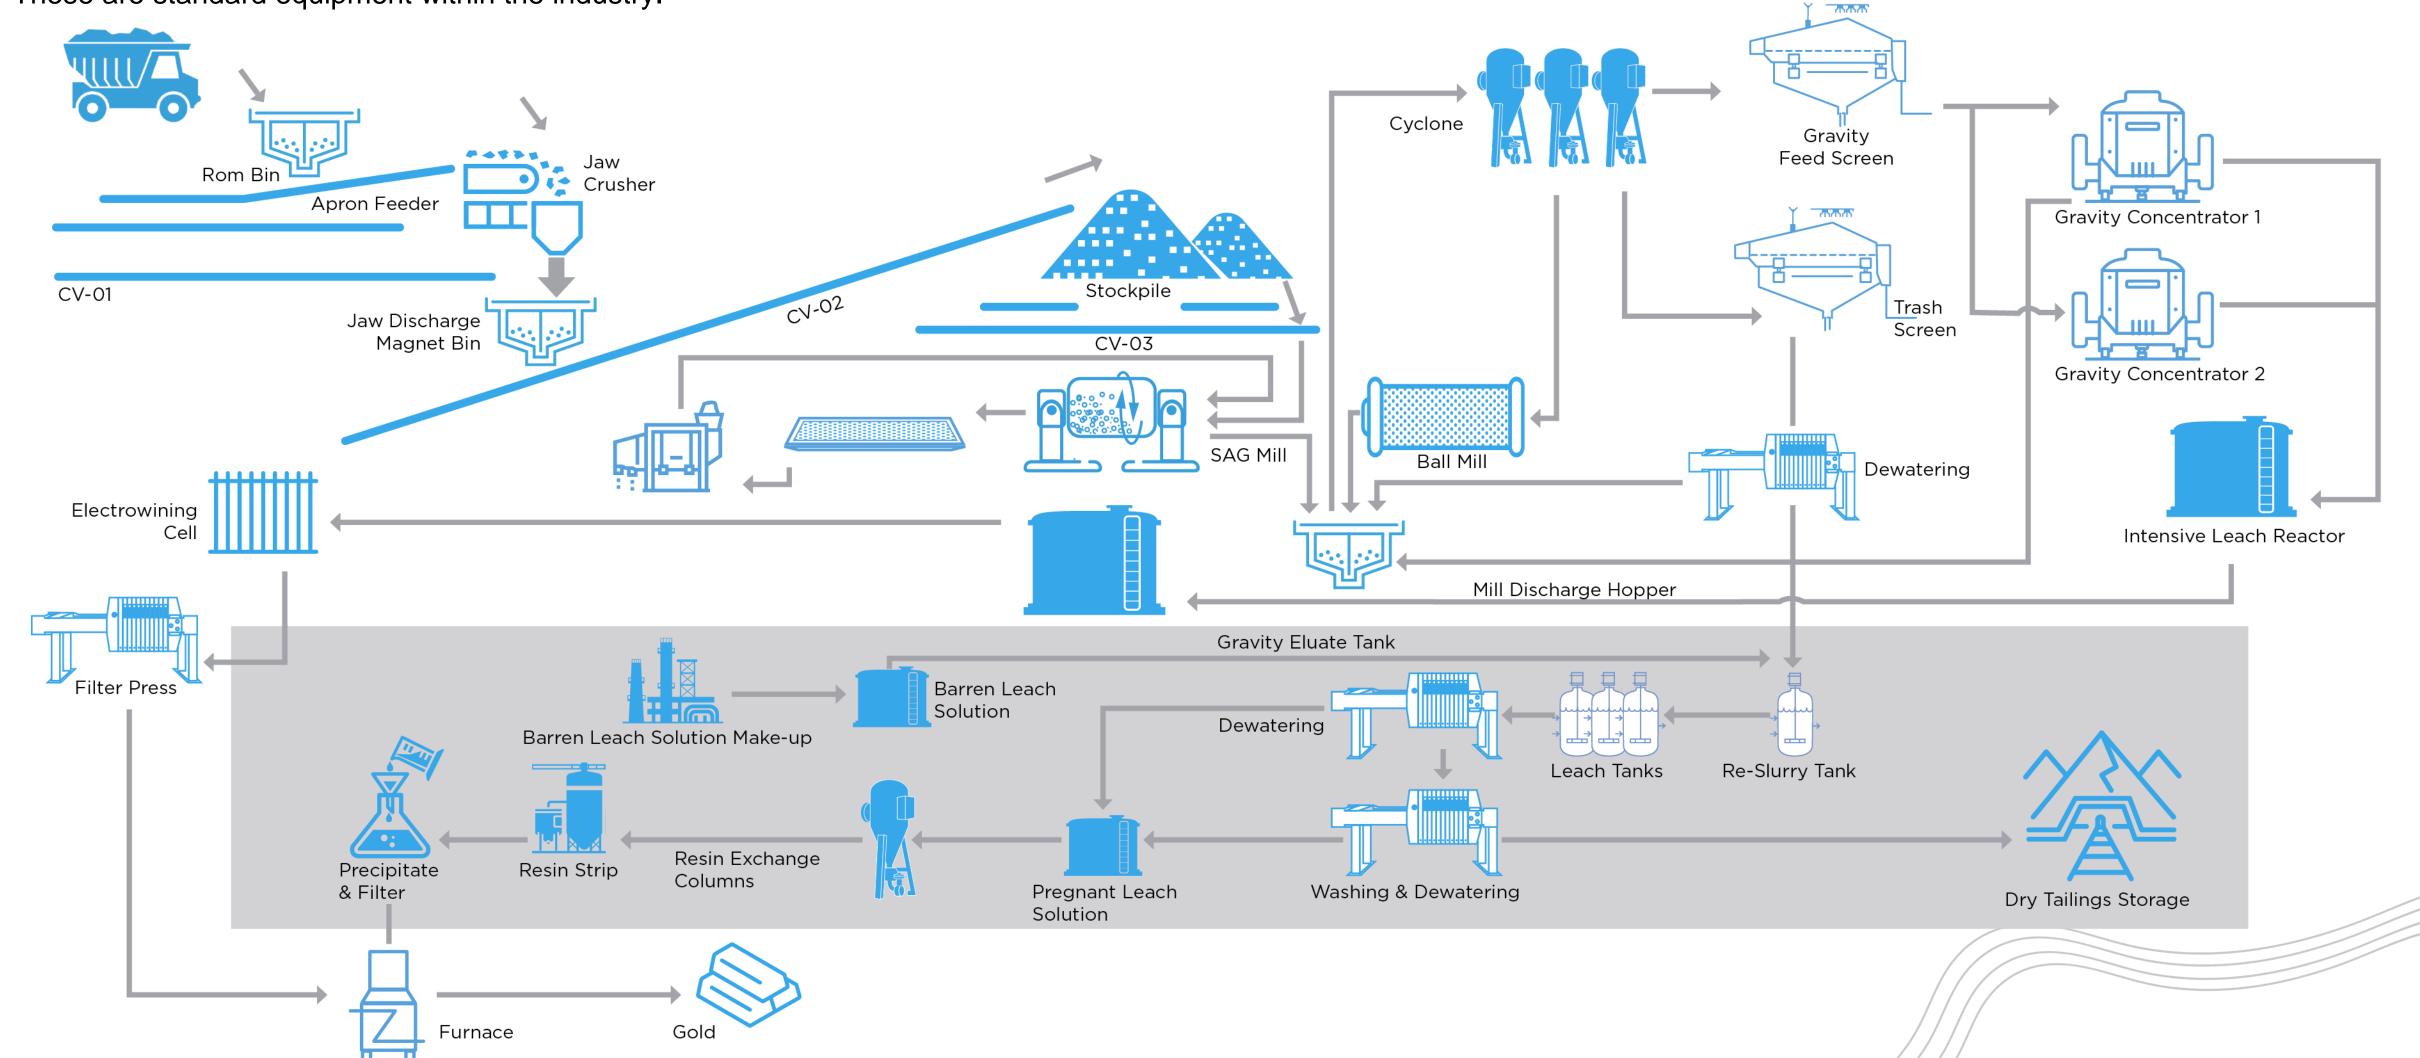






CLEAN MINING GOLD PLANT

Figure 4 illustrates Clean Mining's IP engagement in RED, which ultimately turns gold back into a solid for extraction.

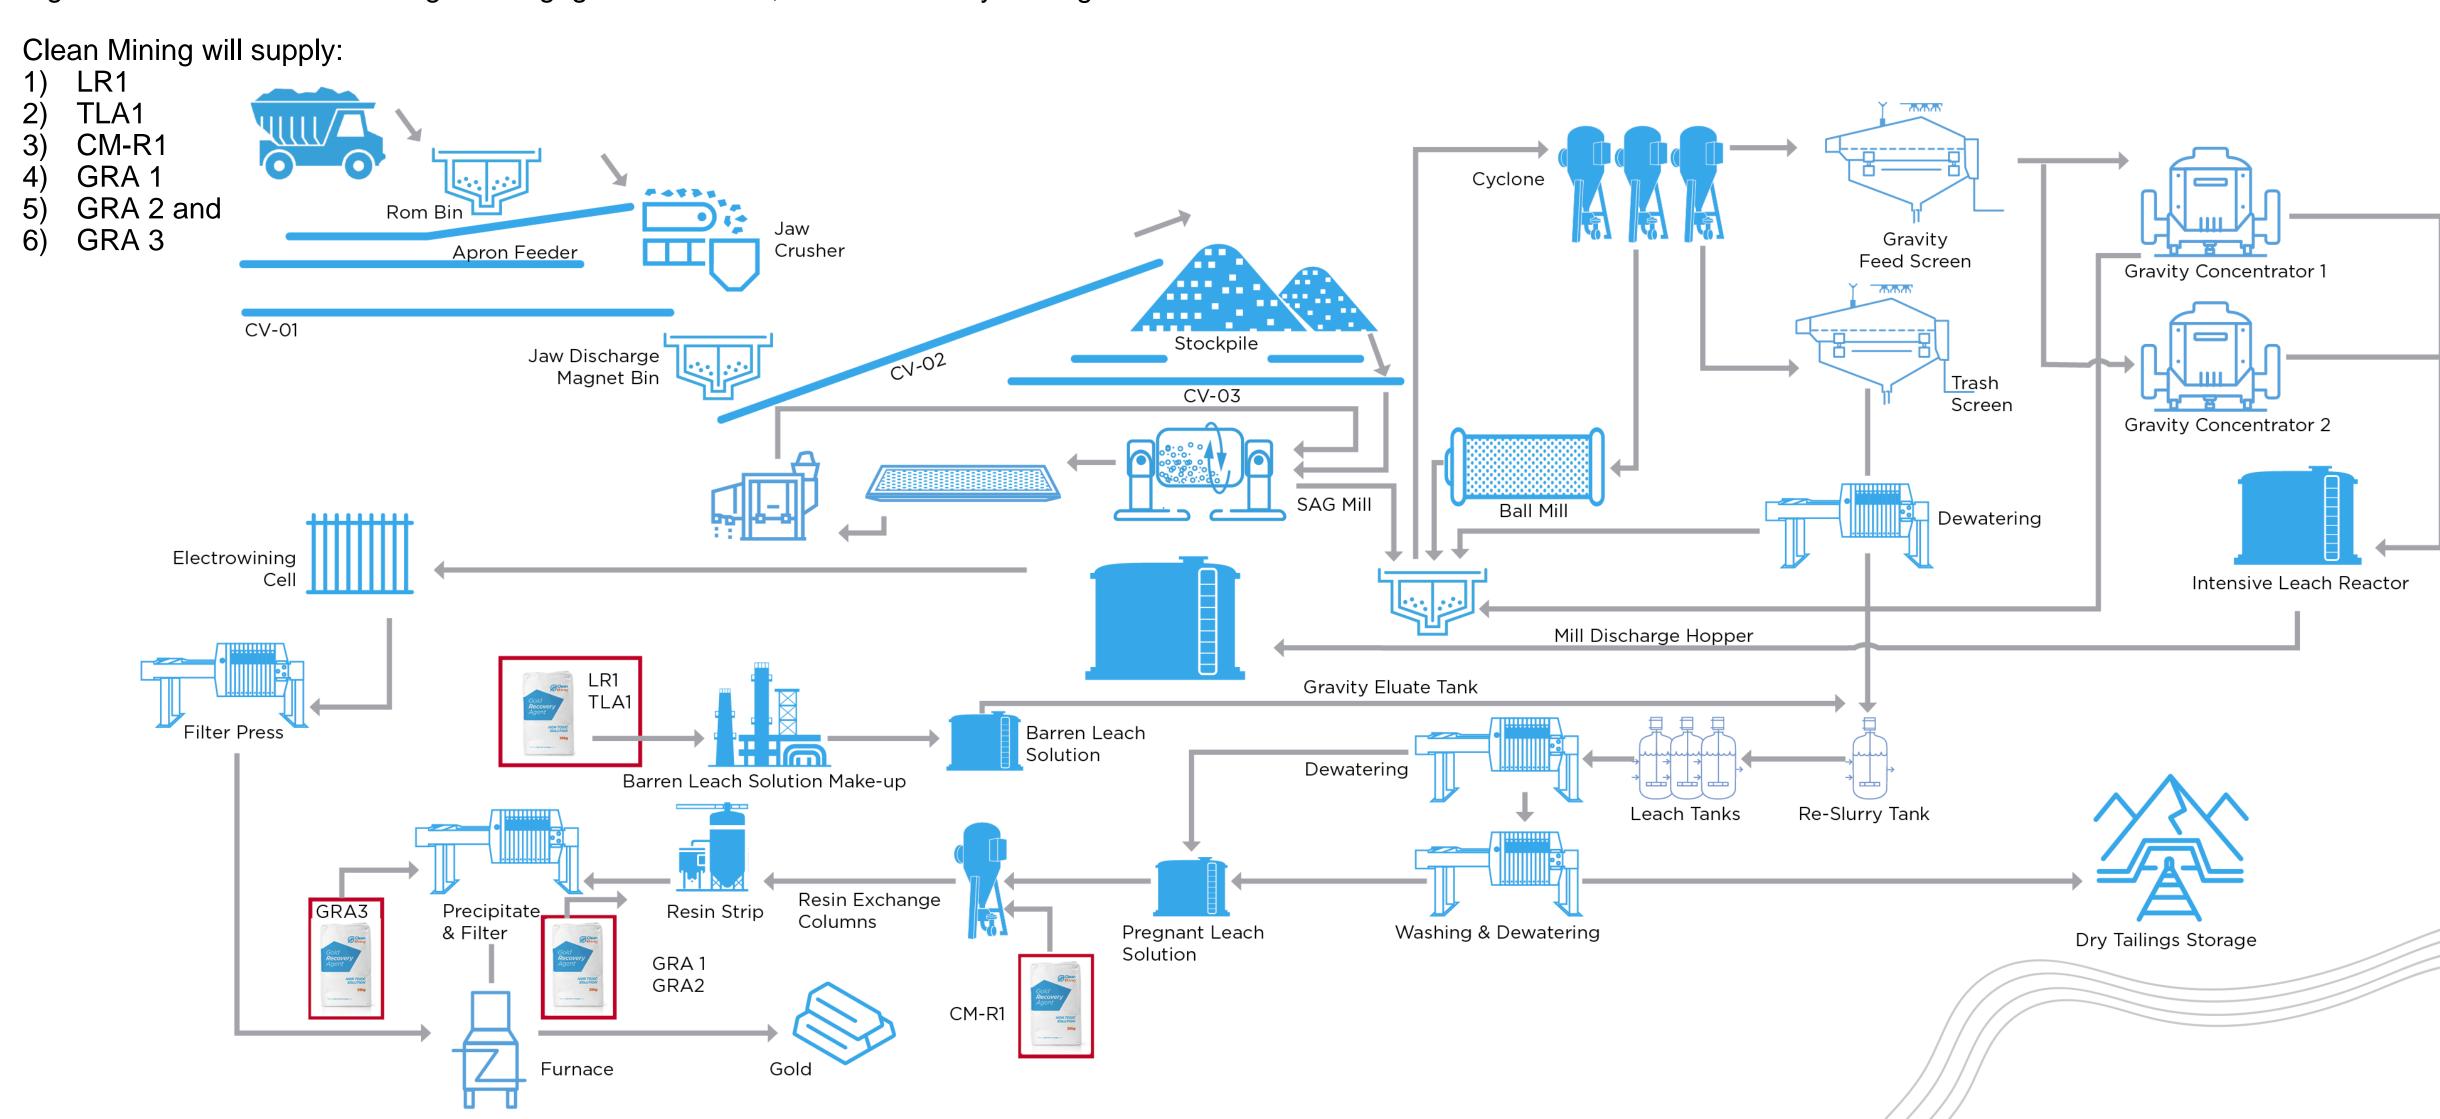


WHAT SETS US A PART 2






TRADITIONAL - "DIRTY GOLD"

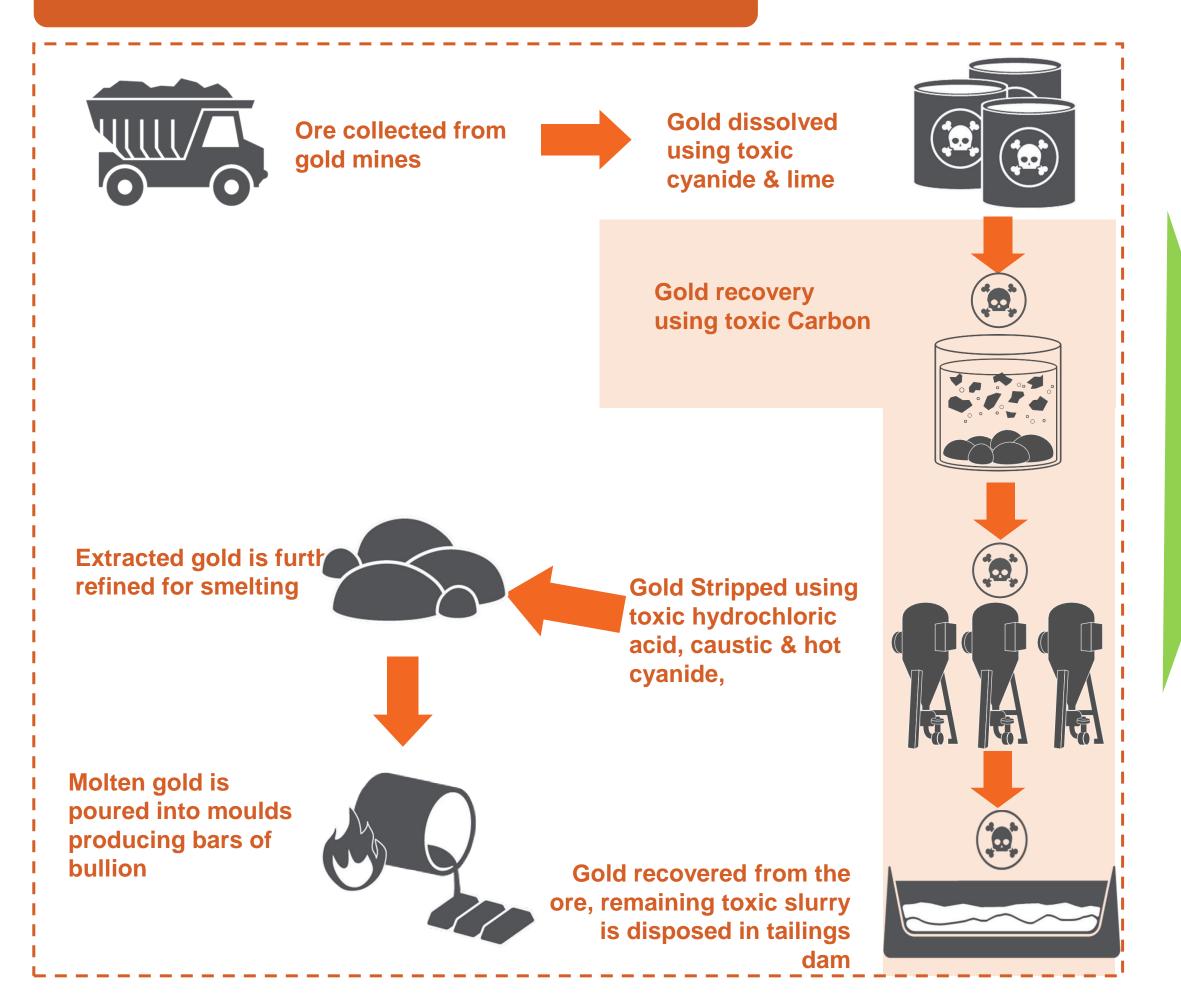

CET - "CLEAN GOLD"

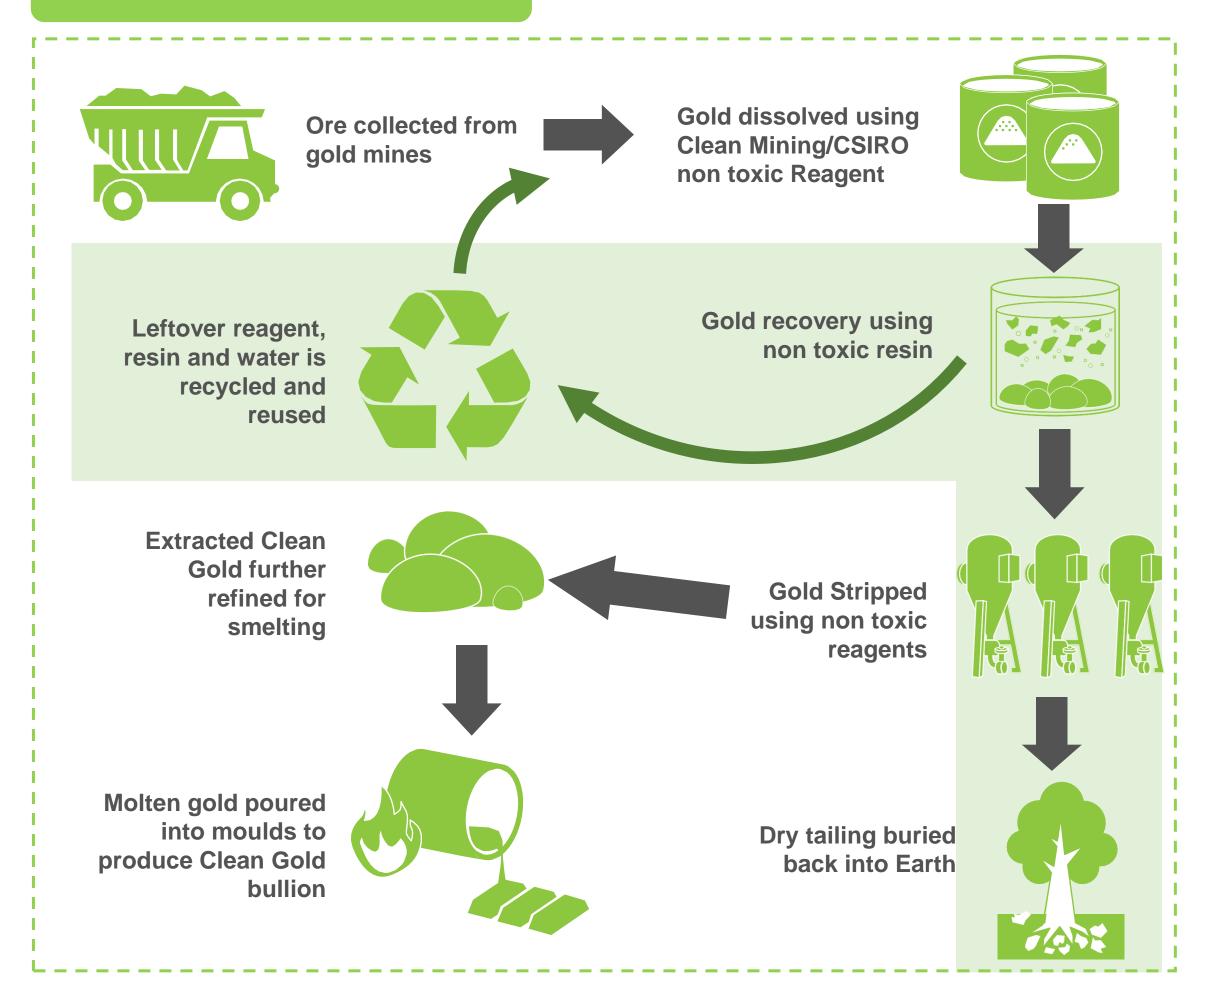





TRULY "CLEAN GOLD"

Cleaner planet, healthier communities

- Brand promotes ethical production methods
- Retailers and consumers assured of premium product
- With social license and sustainability credentials

Leaf logo

 Prominent on all gold produced by the Clean Mining technology and where similar philosophies are implemented



RATE OF GOLD EXTRACTION

We have conducted over 150 tests globally on the rate of gold extraction using our non-toxic solution








Description	Size (µm)	Head (g/t)	NaCN Leach Recovery	CML Leach Recovery
Sulfide (Refractory)	841	43.9	82.63 @ 24hrs	87.38 @ 24hrs
Oxide	58.5	1.78	88.38 @ 24hrs	92.01 @ 24hrs
Oxide	75	1.32	88.62 @ 24hrs	92.07 @ 24hrs
Arsenic Bearing Formation	75	1.23	80.88 @ 24hrs	85.13 @ 24hrs
Porphyry Gold, Chalcopyrite	68	1.35	50.98 @ 48hrs	78.77 @ 48hrs
Organic Contaminated	>2000	17.25	97.11 @ 48hrs	97.05 @ 48hrs
Sulfide (Refractory)	126.9	1.85	71.74 @ 24hrs	79.99 @ 24hrs
Oxide	75	2.99	86.67 @ 24hrs	91.09 @ 24hrs
Concentrate	>2000	706	88.8 @ 24hrs	92.13 @ 24hrs
Banded-Iron Formation	75	449	98.25 @ 24hrs	97.76 @ 24hrs
Oxide	75	5.23	98.59 @ 24hrs	95.29 @ 24hrs
Concentrate Tail	>2000	506	94.21 @ 24hrs	87.07 @ 24hrs
Sulfide (Refractory)	841	43.9	82.63 @ 24hrs	87.38 @ 24hrs
Oxide	58.5	1.78	88.38 @ 24hrs	92.01 @ 24hrs
Concentrate	75	1.32	88.62 @ 24hrs	92.07 @ 24hrs
Banded-Iron Formation	75	1.23	80.88 @ 24hrs	85.13 @ 24hrs
Oxide	68	1.35	50.98 @ 24hrs	78.77 @ 24hrs
Concentrate Tail	>2000	17.25	97.11 @ 24hrs	97.05 @ 24hrs





USA - PHASE 1


- Sample Head Grade: 43.9g/t Au
- Ore Type: Sulfide (Refractory)
- Restricted approval process for toxic practices

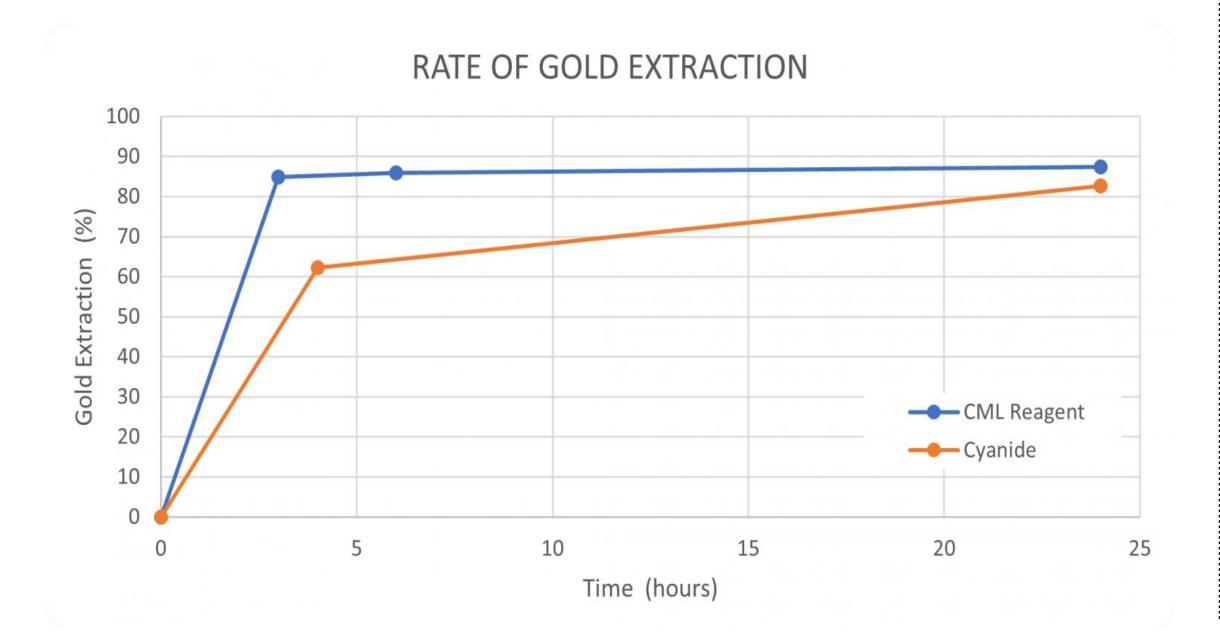

EUROPE - PHASE 1

- Sample Head Grade: 1.78g/t Au
- Ore Type: Oxide
- Cyanide Banned

RATE OF GOLD EXTRACTION

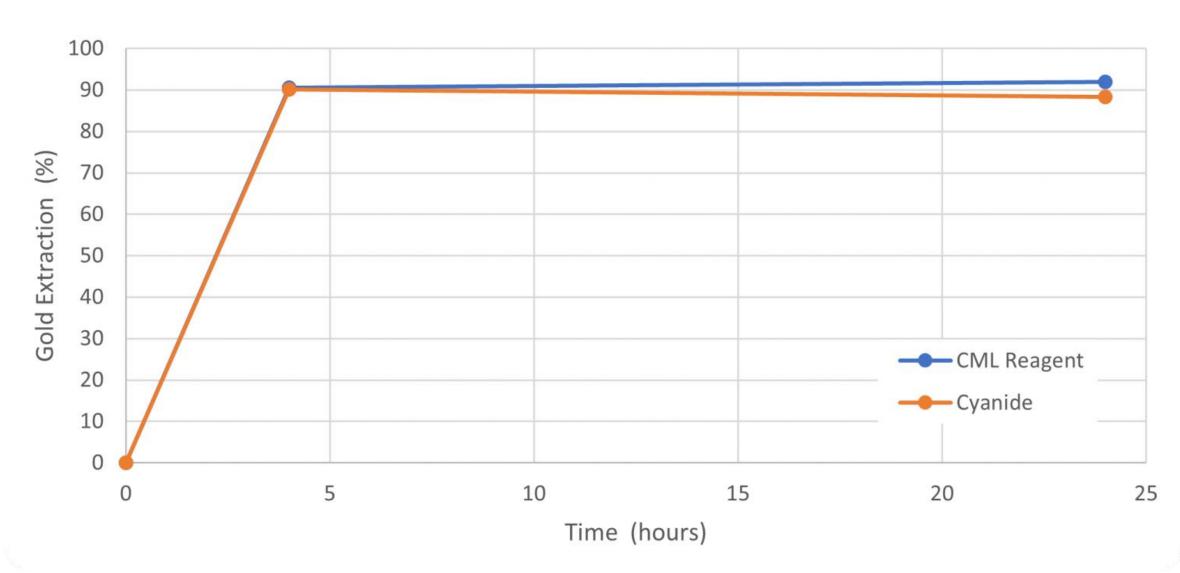






SOUTH AMERICA - PHASE 1


• Sample Head Grade: 1.32g/t Au

• Ore Type: Oxide

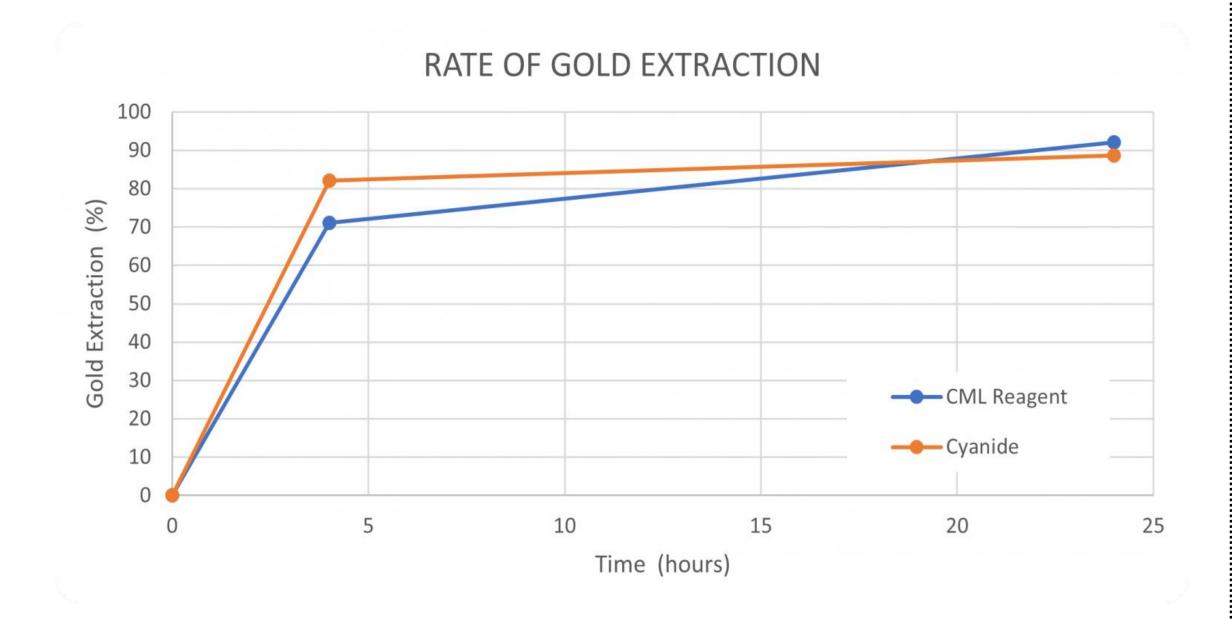

EUROPE - PHASE 1

- Sample Head Grade: 1.23g/t Au
- Ore Type: Arsenic bearing formation
- Cyanide Banned

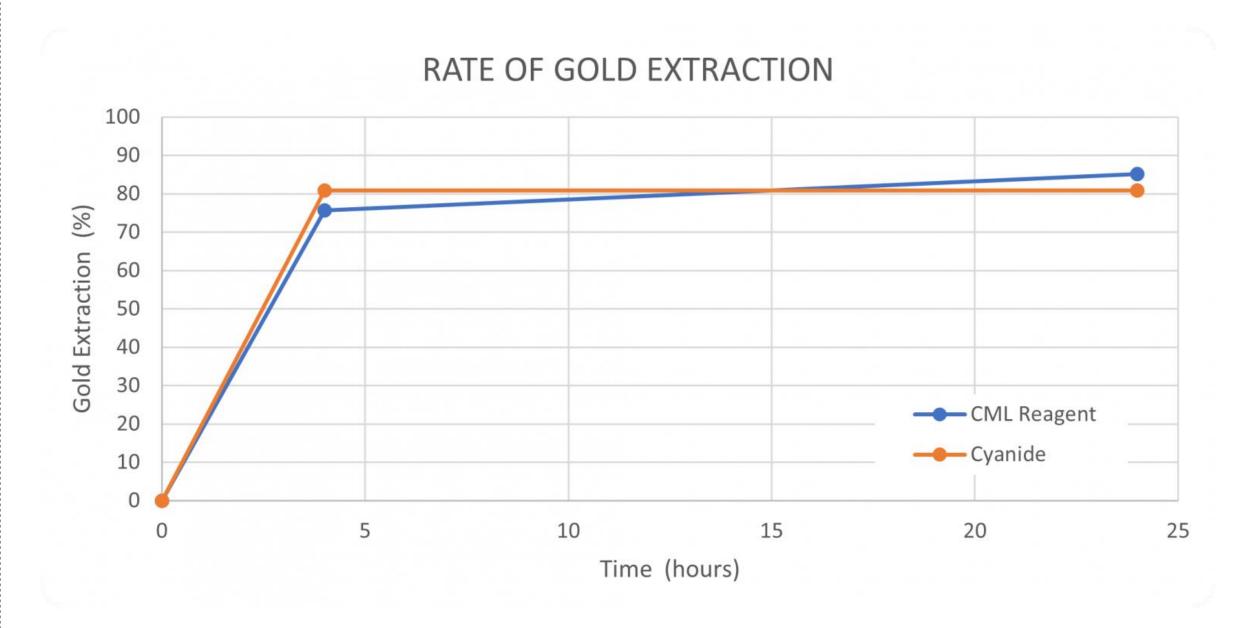







SOUTH AMERICA - PHASE 2

Gold leaching and IX recovery conducted by five sequential elution cycles

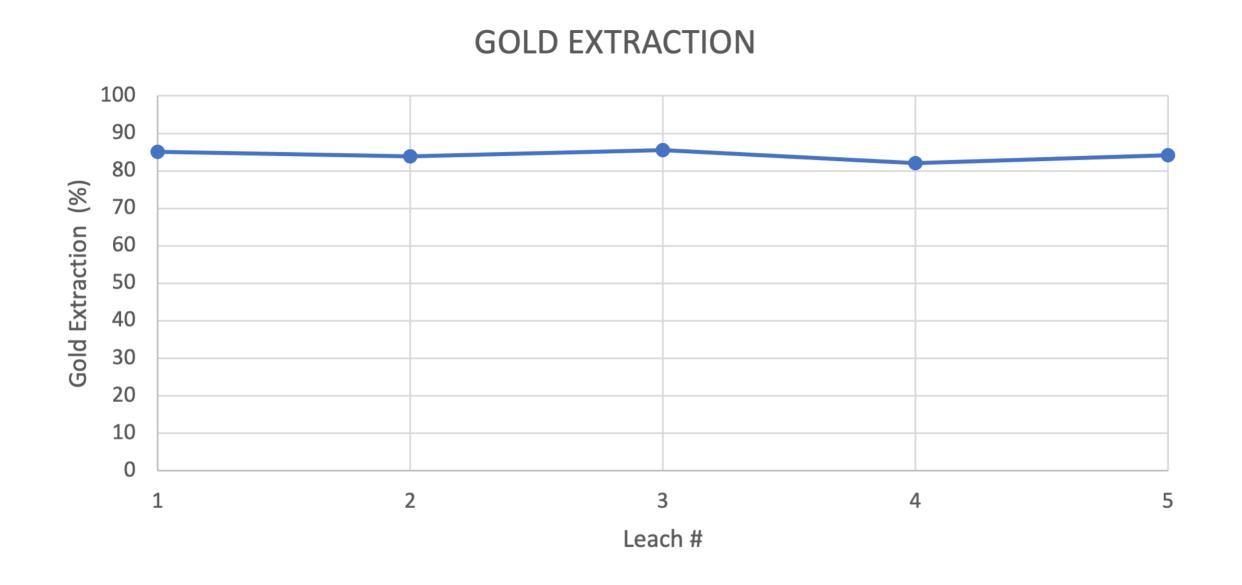

EUROPE - PHASE 2

Gold leaching and IX recovery conducted by five sequential elution cycles

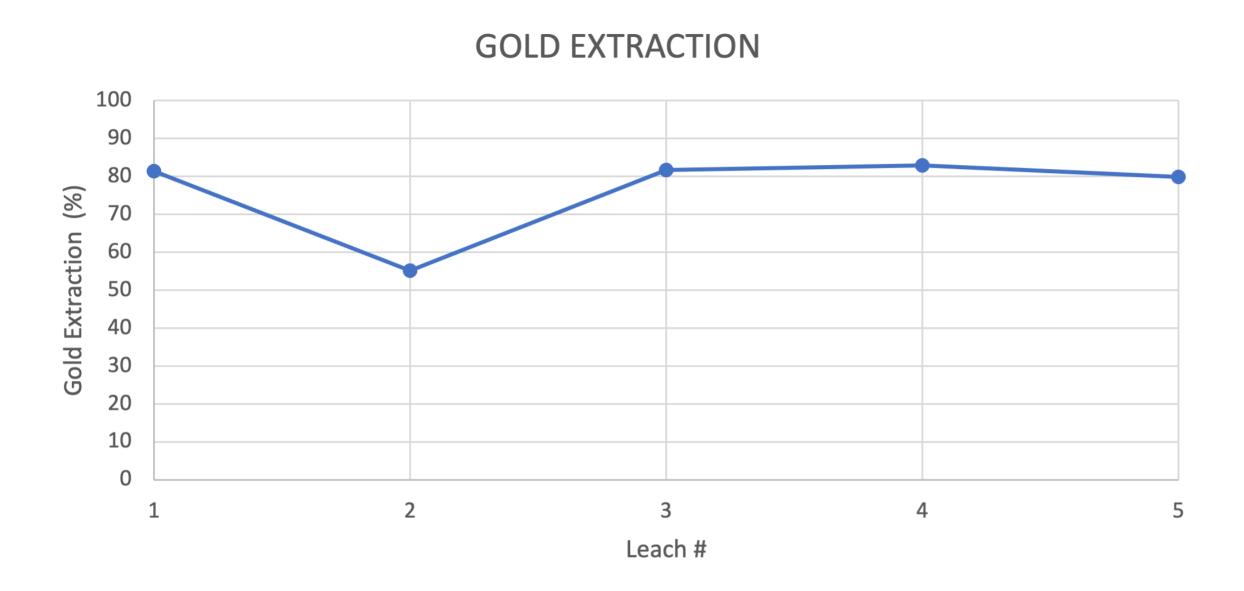







MIDDLE EAST – PHASE 1

- Sample Head Grade: 1.35g/t Au
- Ore Type: Chalcopyrite, porphyry with gold
- Aversion to toxic practices

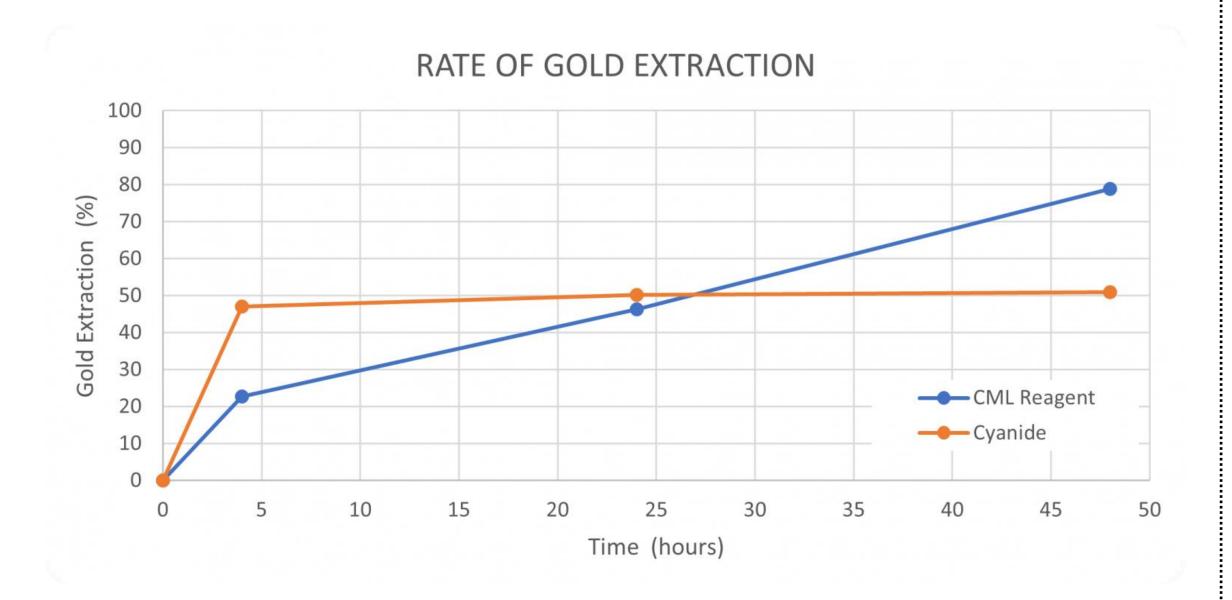

ASIA – PHASE 1

- Sample Head Grade: 17.25g/t Au
- Ore Type: Organic Contaminated
- Aversion to Cyanide and Mercury

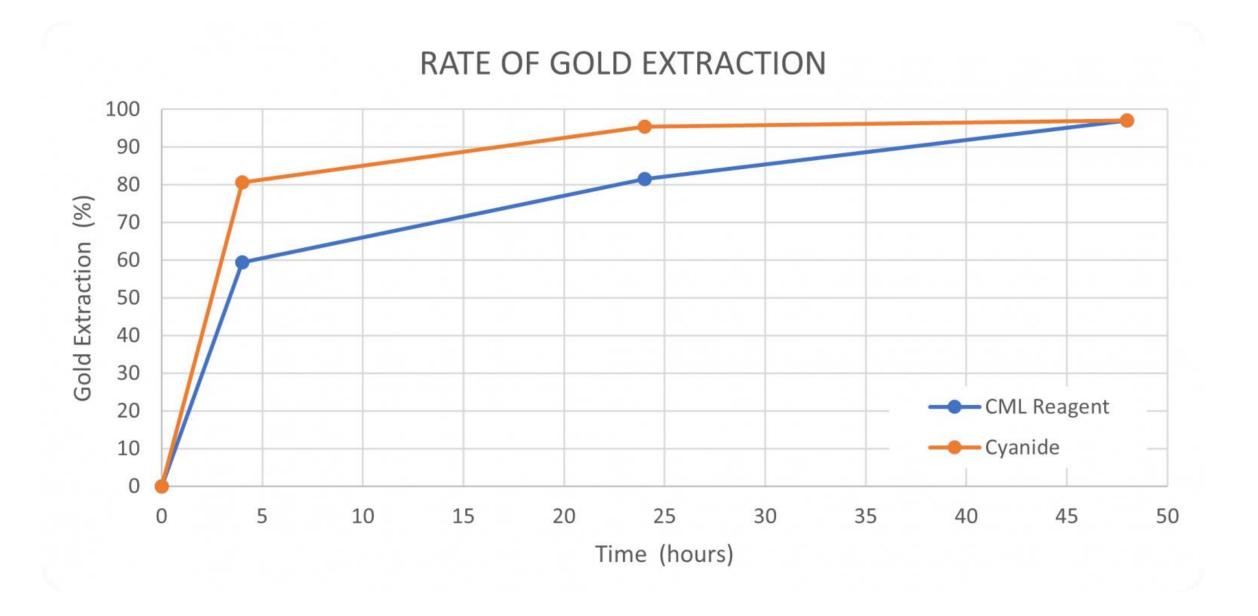






EUROPE-PHASE 1

- Sample Head Grade: 1.85g/t AuOre Type: Sulfide (Refractory)
- Cyanide Banned

RATE OF GOLD EXTRACTION

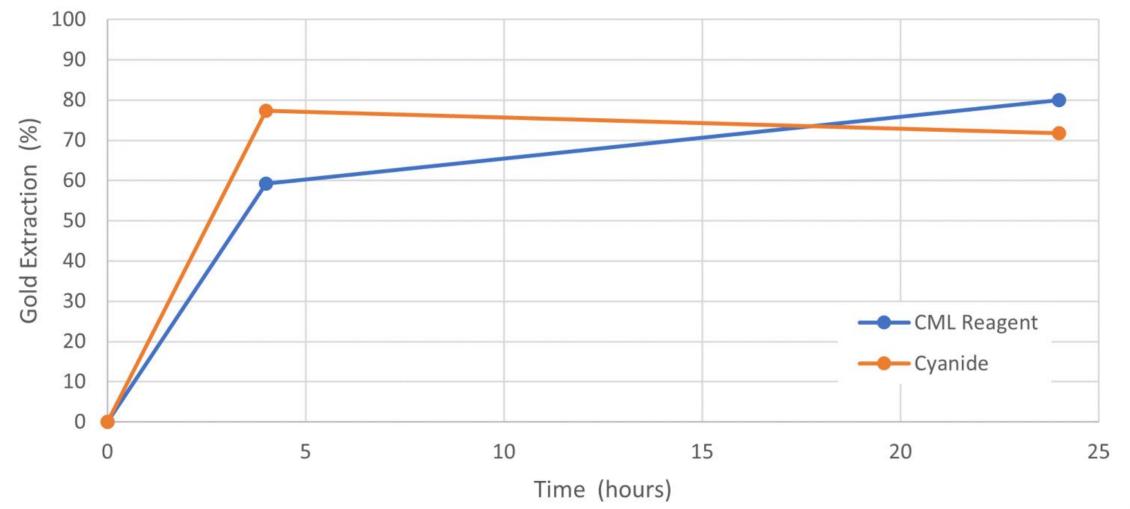


EUROPE – PHASE 2

Gold leaching and IX recovery conducted by five sequential elution cycles

Ore Type: Oxide

GOLD EXTRACTION

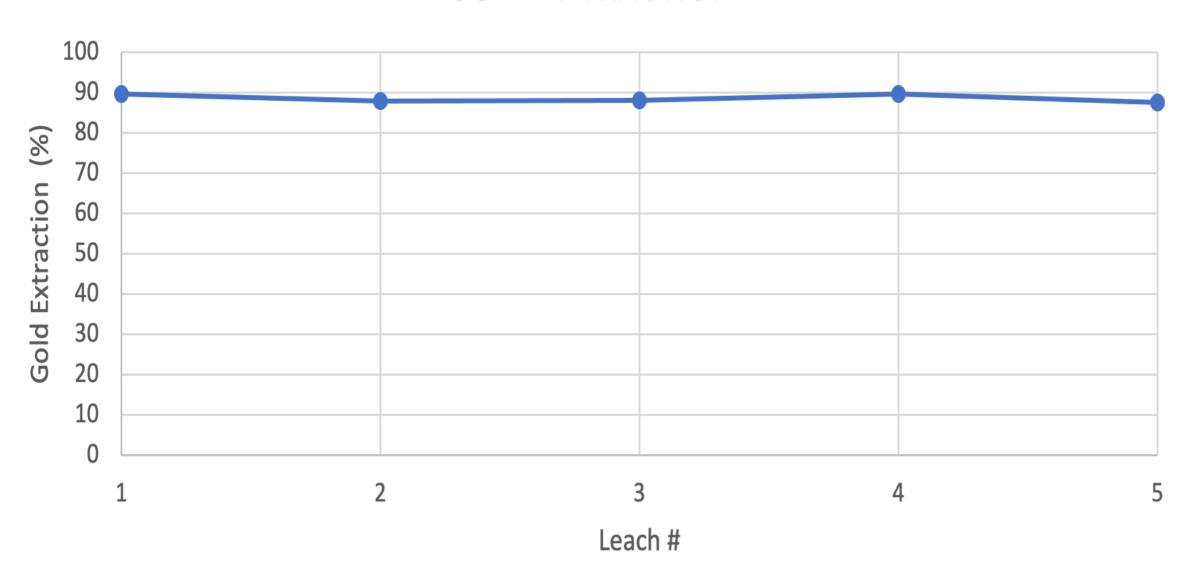






WESTERN AUSTRALIA – PHASE 1


Sample Head Grade: 2.99/t Au

• Ore Type: Oxide

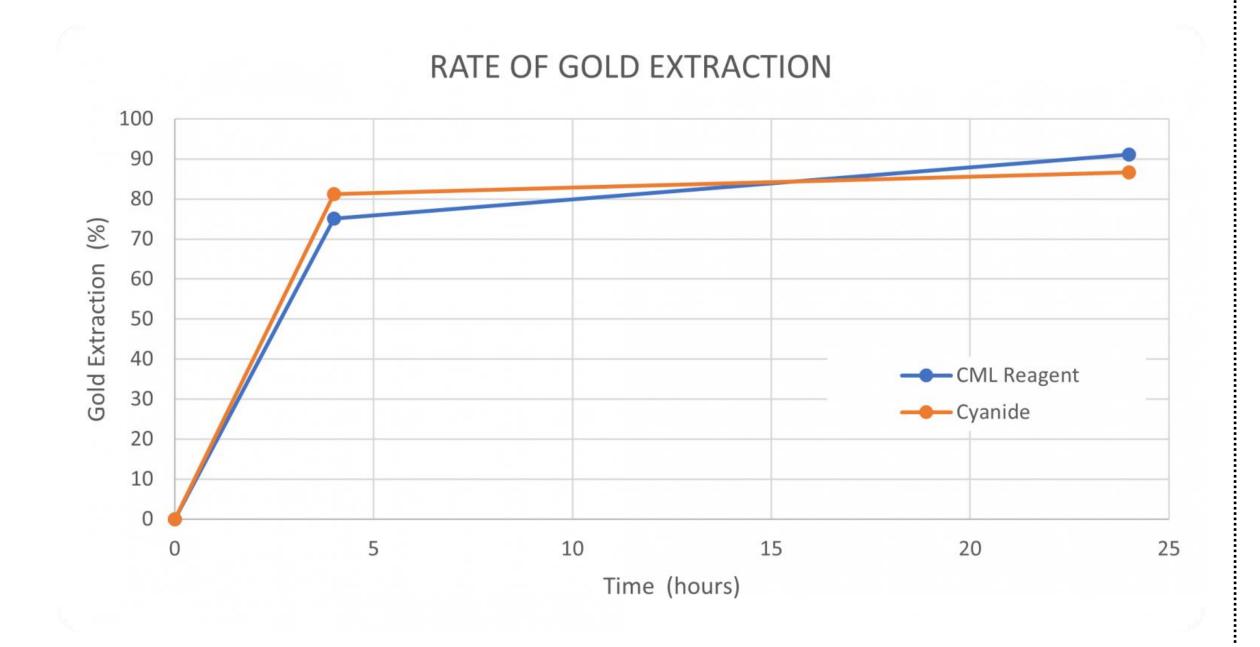

WESTERN AUSTRALIA – PHASE 2

Gold leaching and IX recovery conducted by five sequential elution cycles

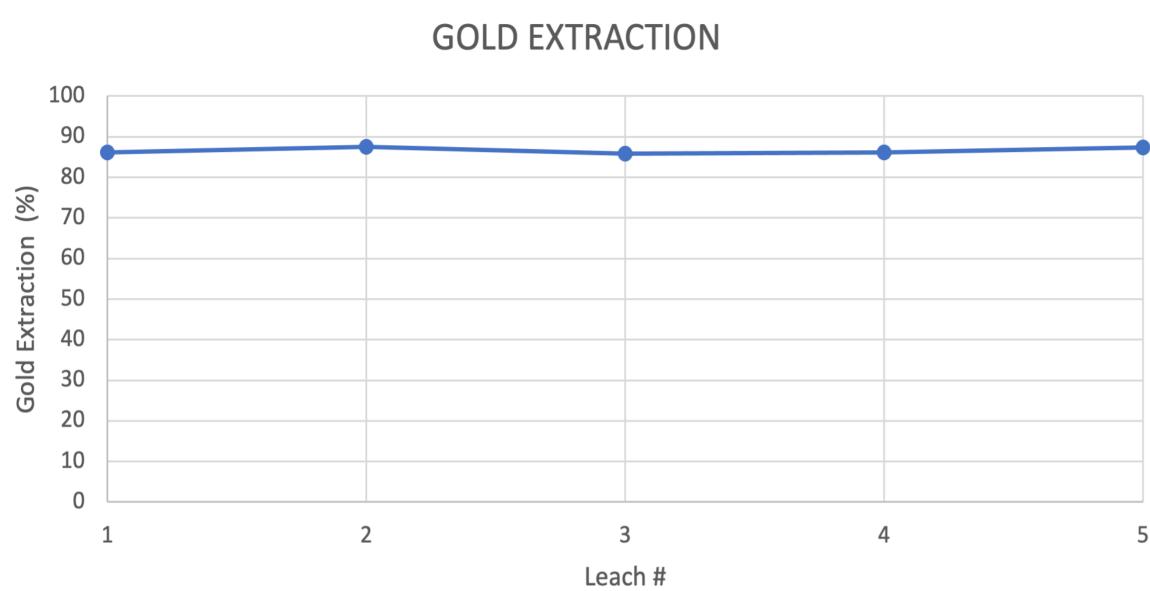







WESTERN AUSTRALIA – PHASE 1

- Sample Head Grade: 706g/t Au & 1020g/t Ag
- Ore Type: Concentrate

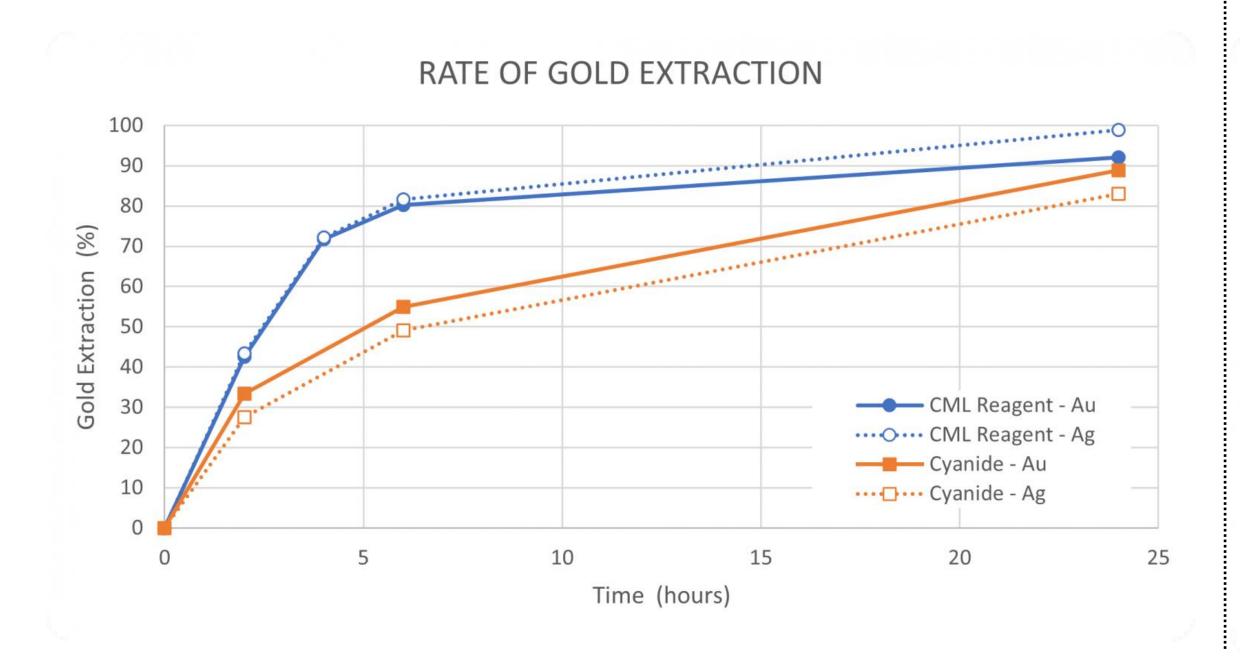

WESTERN AUSTRALIA – PHASE 1

- Sample Head Grade: 449g/t Au
- Ore Type: BIF (Banded Iron Formation)

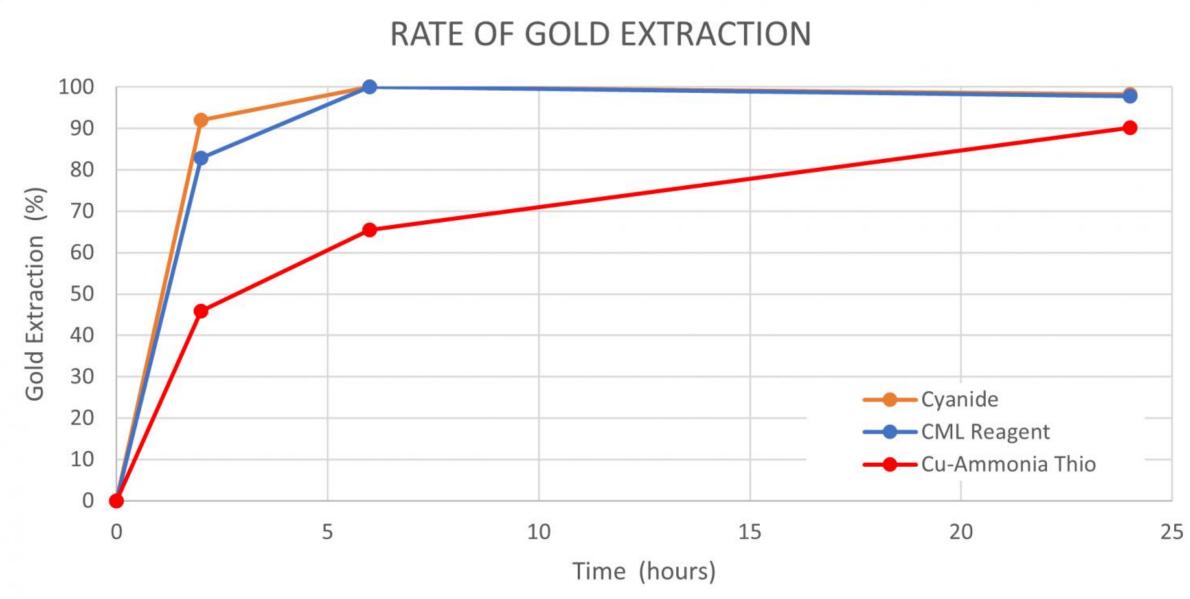






WESTERN AUSTRALIA – PHASE 1

• Sample Head Grade: 5.23g/t Au


Ore Type: Oxide

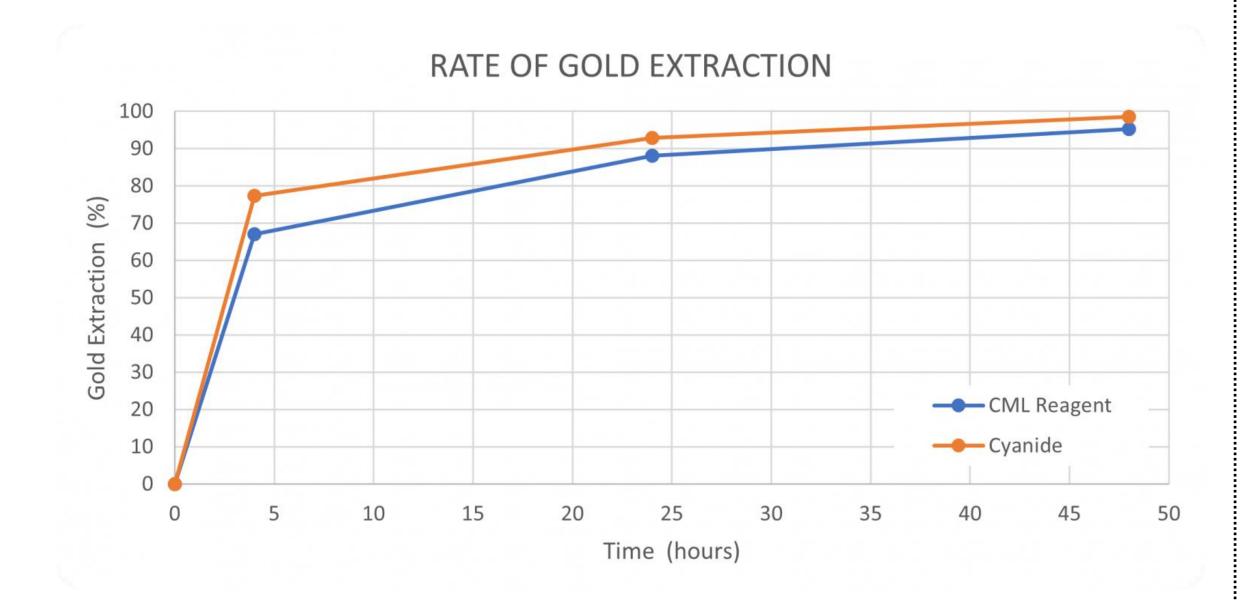

EASTERN AUSTRALIA – PHASE 1

Sample Head Grade: 263g/t Au

Ore Type: Concentrate Tail

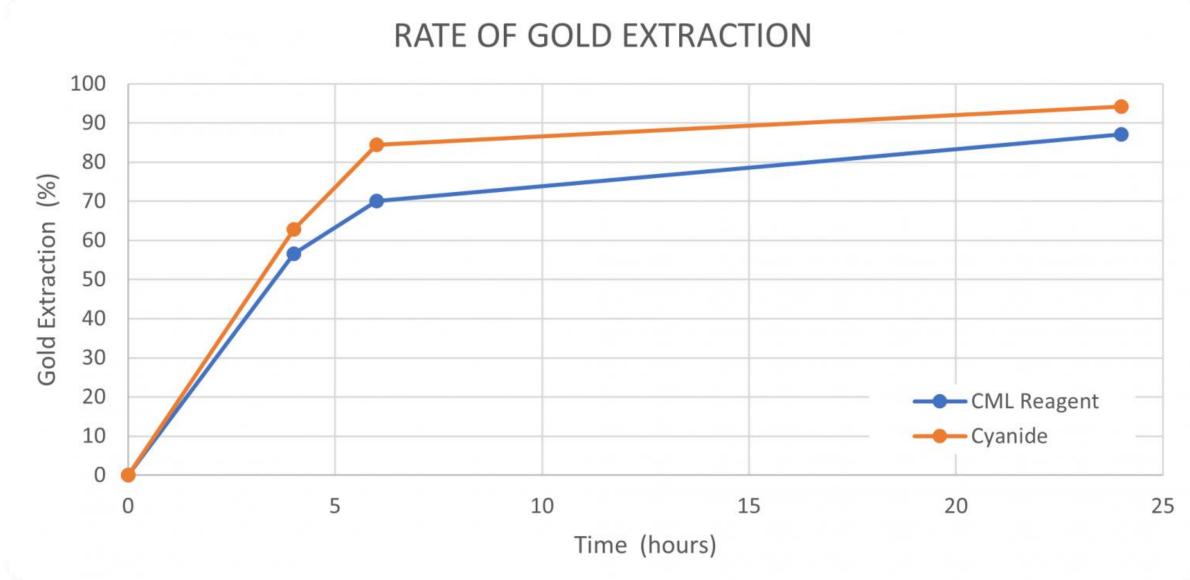






WESTERN AUSTRALIA

Sample Head Grade: 5.23g/t Au

Ore Type: Oxide

RATE OF GOLD EXTRACTION

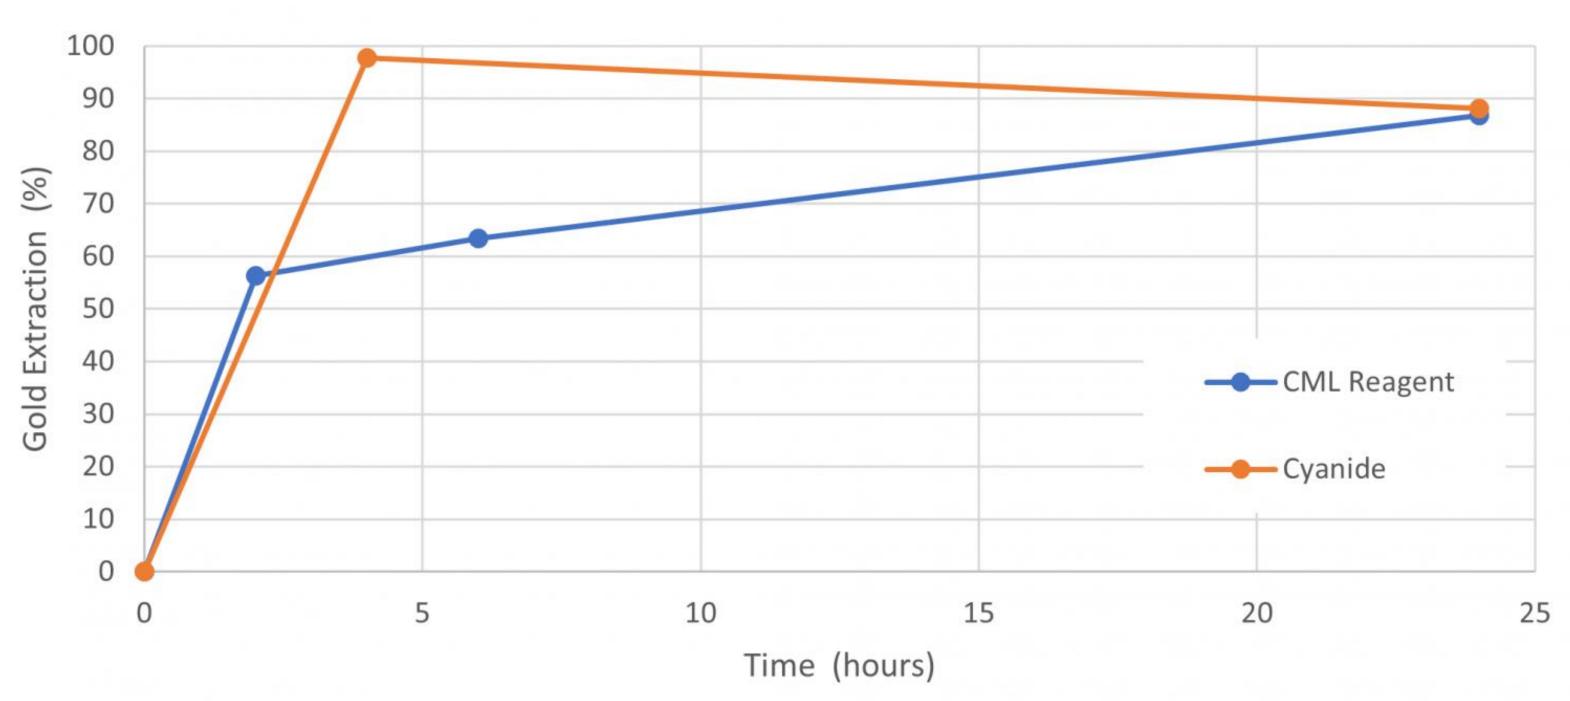






Clean Mining's innovative ore processing technology represents an important scientific breakthrough that eliminates the use of cyanide and mercury in the extraction of gold from Artisanal to Large-Scale Mining. Aligned with the United Nations Sustainable Development Goals for 2030, the technology offers a potentially cheaper, cleaner and responsible processing option that is:



ETHICAL AND RESPONSIBLE

The safest and most sustainable gold processing reagent developed to date, with benefits for governments, mining companies, communities and workers worldwide.

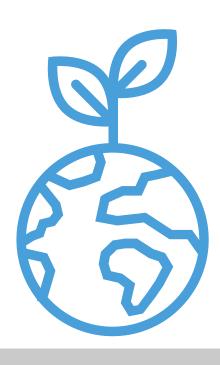

SAFER AND SUSTAINABLE

Cyanide & Mercury-free, delivering a safer, more sustainable process without leaking, spillage or exposure to hazardous chemicals.



GREATER GOOD

Kinder to the environment in production, uses and disposal. Ensuring a cleaner, healthier planet for future generations.

THANK YOU

SINGAPORE 112 Robinson Road, #05-04, Singapore 068902

AUSTRALIA Office 3, 10 Eastbrook Terrace, East Perth, WA, 6004

T +65 9382 6401 E info@cleanearth.tech W www.cleanearth.tech

Join the Clean Revolution













