

Clearlight[®]


Portable Infrared Dome Sauna

Owner's Manual






CONGRATULATIONS

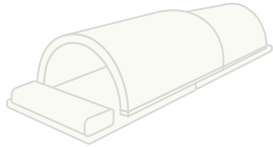


Congratulations on your purchase of a Clearlight Infrared® Dome Sauna. We are confident that you will enjoy the many benefits of your sauna for years to come.

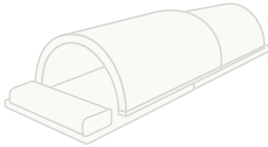



Please read this manual before using your sauna for the first time. Please keep this manual for future reference.







TABLE OF CONTENTS

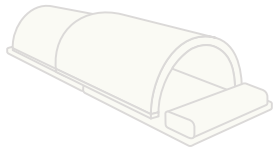

Why Detoxify	2
Component List	4
Assembly Instructions	4
Instructions	5
Specifications	5
Usage	7
Care and maintenance	9
Safety Instructions	10
Warranty	12

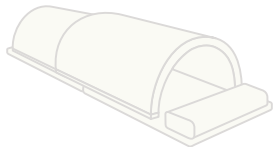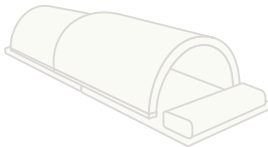

* The information contained in this manual is subject to change without notice.

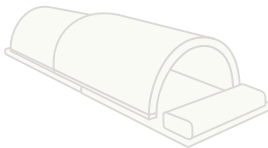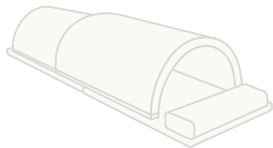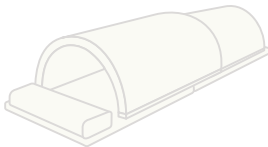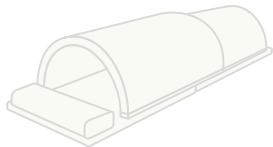

WHY DETOXYFY

WHY IS DETOXIFICATION IMPORTANT

Excerpted from: Literature Review & Comparison Studies of Sauna/Hyperthermia in Detoxification Townsend Letter for Doctors, June 1992 Zane R. Gard, M.D. & Erma J. Brown, BSN, PhN

The past 150 years have been a time of incredible progress for medicine, science and industry. Because of these advancements we now enjoy longer, more productive lives. However, there are many who pay a tremendously high price for our modern lifestyle. The by-products of our chemical technology have resulted in ubiquitous contamination of our atmosphere, lakes, oceans and soil. Our natural environment is now permeated by a barrage of “unnatural” substances.

Unquestionably, many of the chemical sources have been in existence for centuries. However, today we are exposed to chemical concentrations far greater than were our ancestors. Although the human mechanism is known to be accommodating, ecological alterations are now occurring at a faster rate than our bodies are able to adapt. We are now faced with a situation where inadequacies or uncertainties centering around the manufacturing, use, storage, and disposal of toxic chemicals, have resulted in an overwhelming number of environmentally-induced illnesses.

Since 1965, over 4 million distinct chemical compounds have been reported in scientific literature. Over 6000 new chemicals were added to this list between 1965 and 1978. As of 1981, of over 70,000 chemicals in commercial production, 3,000 have been identified as intentionally added to our food supplies and over 700 in drinking water. During food processing and storage 10,000 other compounds can become an integral part of many commonly used foods. Added to this list of potential body toxins, petrochemicals, industrial waste, medical and street drugs, radiation (X-rays, nuclear fallout etc.) and tons of pesticides, herbicides, and insecticides, the result is an incredible chemicalavalanche to have befallen the human race in a relatively short period of evolutionary history.

There is currently a wealth of scientific evidence showing that thousands of drugs, preservatives, pesticides, and other pollutants remain stored in the body long after exposure. We know for example that an organochlorinated pesticide such as the metabolites of DDT have a half life of between 20 and 50 years in the fat deposits of humans. According to the U.S. Environmental Protection Agency over 400 chemicals have been detected in human tissue; 48 were found in adipose tissue, 40 in breastmilk, 73 in the liver and over 250 in the blood.

The process of bodily accumulation and storage of toxins is known as “toxic bio-accumulation”. Though the predominate storage site in the body is the fatty tissue, toxins may re-enter the bloodstream during times of physical stress (i.e.. illness, fasting, excessive heat, exercise) or emotional stress.

WHY DETOXIFY

WHY IS DETOXIFICATION IMPORTANT

Every organ that is accessible to these chemicals, which have been mobilized or released from the fat, is being continually exposed at low levels. As stated by Dr. William L. Marcus, Senior Advisor and Chief Toxicologist for the U.S. Environmental Protection Agency, "It's a chronic exposure. That's why chemicals like dioxin, even in small amounts, are extremely dangerous. Unfortunately the human body has no previous experience with these chemicals and there is no natural machinery in the body to break them down, much less eliminate them.

Human accumulation of such compounds as DDT, PCP, PCB, and dioxin, reflect biologically persistent chemicals which are partitioned in the body from water into lipids. Eventually the metabolizing of xenobiotics (chemicals foreign to the biological system) leads to the accumulation of the chemicals and/or their products in lipid deposits throughout the body, particularly in adipose tissue. The simple chemistry involved in this process can be illustrated by the fact that some chemicals readily dissolve in water, while others dissolve only in oil bases. Oil soluble chemicals therefore have a tendency to accumulate in body fatty tissue or lipids, which are also insoluble in water. There is no such thing as a fat "cell"...[rather] almost every cell has a fat component. The brain has a high fat content as does virtually every organ.

Directly or indirectly, toxic residues find their way into our air, food and water supplies. The net effect of this ecological overload is to alter the body's balance or "homeostasis". This interference with our natural biological tendencies to restore internal balance, results in "disease" in one form or another. According to Professor Edward J. Calabrese of the University of Massachusetts, and author of Pollutants and High Risk Groups, "It is this homeostatic process which neutralizes the pollutant's effect and returns the system to equilibrium.

"Marshall Mandell, MD, nationally renowned in the field of bio-ecologic medicine, wrote in a recent publication that the influx of chemicals in our society today "has resulted in a lowered threshold of resistance and subsequent inability to cope with the natural and unnatural environment due to altered body metabolism, enzyme dysfunction, nutritional deficiencies, and hormonal imbalances." Health depends on the balance of both external and internal environmental forces.

In response to the above facts, many health care practitioners have been recommending a vast array of detoxification programs. Circulating toxins and toxic bowels need proper cleansing. The removal of these toxins is relatively well known. When toxins are deposited in fat storage sites this becomes much more complicated. The only way to remove toxins from the fat storage sites is to mobilize the toxic fat. Heat-stress [of a sauna] is an effective method of removing fat-stored toxins from the body.

COMPONENT LIST


Upper Dome 1	Curtain 1	Infrared Mat Control 1	Headrest 1
Lower Dome 1	Infrared Mat 1	Dome Control Panel 1	

ASSEMBLY INSTRUCTIONS

The Clearlight Dome has been designed for easy assembly. It can be setup and ready to use in minutes. When your session in the dome is finished, it can be easily disassembled and placed in a storage area.

The Clearlight Dome can be used on an elevated table such as a massage or chiropractic table. Only use a table that can support your weight and the weight of the Clearlight Dome (76.9lbs./34.9kg).

1. Open the box and remove all of the contents. Identify each component.
2. Read the entire manual before assembly.
The system performs the same whether used in your home or in a professional medical facility. Please check with your physician before use if concerned about any health challenges.
3. Verify that an electrical outlet of proper voltage is available at the location to be used.
4. Position the mat.
5. Place a towel over the entire length of the mat.
Smooth out the towel making sure that wrinkles are removed.
6. Place the headrest into position at the top of the mat.
Place the two domes at the bottom of the mat positioned so that the open end faces the headrest.
7. Connect the cord labelled "Upper Dome" on the control box to the upper dome power socket.
8. Connect the cord labelled "Lower Dome" on the control box to the lower dome power socket.
9. Plug the unit into the electrical outlet (check for proper voltage and grounding).
10. Turn on and set the Dome Control Box to its lowest setting.
This can be adjusted when you are ready to use the unit.
Note: The upper and lower dome can be adjusted separately.
11. Verify that the red LED's on the front panel are lit.
12. Place the Dome Control Box in such a position as to be easily reached when using the unit.
13. Use the supplied End Curtain to enclose the dome and retain the heat.
14. Setup is complete. You are now ready to enjoy your Clearlight Infrared Sauna Dome.

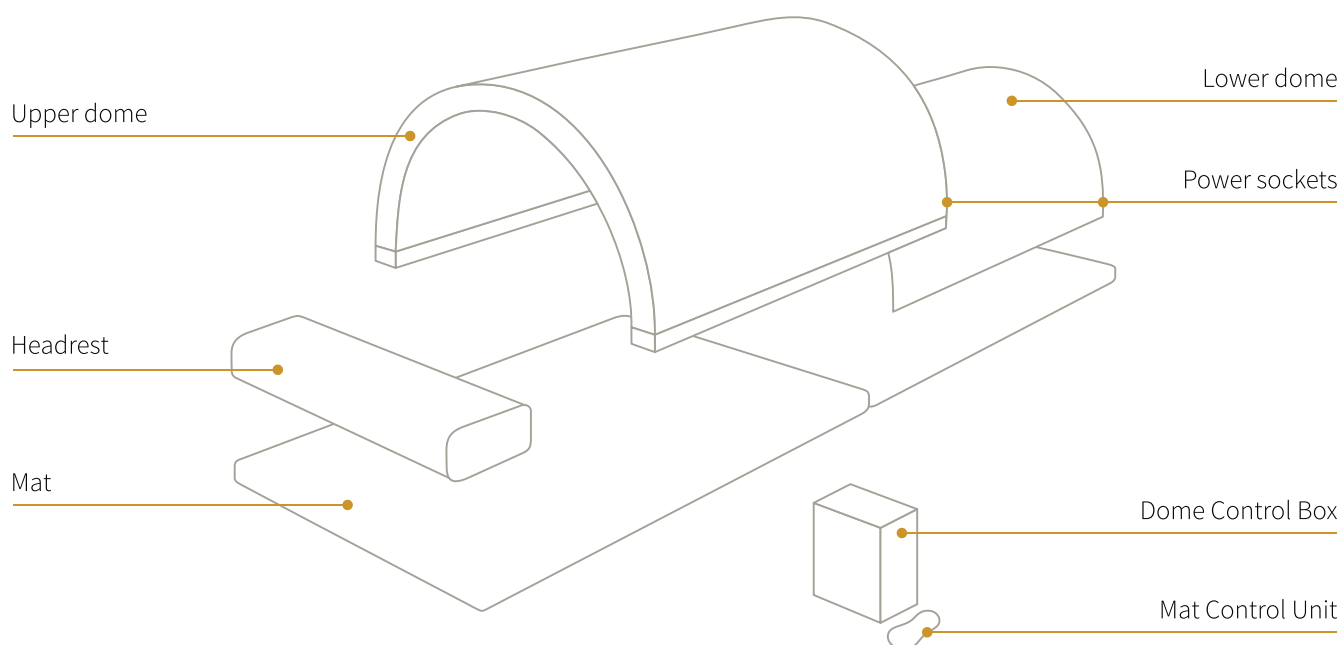

INSTRUCTIONS

Read and fully understand the Disclaimers, Precautions, and Cautions as listed within the instruction and reference manual. If for any reason, you feel unwell, nausea, dizziness, or any discomfort, immediately turn off the sauna dome and exit the unit. Keep the control box within reach when using the unit.

Do not use near water. Always use a grounded electrical receptacle.

PLACE THE CONTROL BOX IN A POSITION THAT ALLOWS THE ON/OFF SWITCH TO BE EASILY REACHED.

Far infrared waves are most effective when they can contact bare skin. Considering this, it best to get undressed before using the system.

SPECIFICATIONS DOME

Dimensions: adjustable up to 175 cm x 71 cm x 46 cm

Weight: 67 lbs. (30.4 Kg)

Electrical: 230V, 50 HzMax

Power: 960W

SPECIFICATIONS MAT

Dimensions: 180 cm x 70 cm x 4 cm

Weight: 9.9 lbs (4.5 Kg)

Electrical: 230V, 50 HzMax

Power: 380W

USAGE

We recommend working up to a 30 minute session once a day.
If a longer session is desired, please contact your physician.

Place a towel next the unit. This will be used when are you are finished with your session.

Set the temperature setting on the Control Box.
For your first session the unit should not be set higher than five (5).

Warm-up time will from five to ten minutes, depending on the temperature setting.

Setting	1	2	3	4	5	6	7	8	9
°F	110	115	120	125	130	135	140	145	150
°C	43	46	49	52	54	57	60	63	65

Set the timer on the Control Box. **The maximum time that the unit can be set for is sixty (60) minutes.**

It's now time to enter the sauna dome. Side the Upper Dome back so that it is resting on top of the Lower Dome. Sit on the bath towel covering the mat and gently pull the Upper Dome back and over our body by gripping the frontal trim as you lie down. Touching the heating surface will feel HOT to the touch but will NOT BURN the skin.


Position your head on the headrest so that you are comfortable. The headrest is positioned outside of the dome. Close the drop curtain to retain the heat within the dome. Relax and enjoy the relaxation and health benefits of your sauna dome. Do not have your head inside of the dome for prolonged periods. Exit the dome immediately if feeling faint or dizzy.

When your session is over, the timer will beep and the unit will automatically shut off. Push back the upper dome and exit the unit.

The Clearlight Dome Sauna will cause you to sweat profusely. Taking a shower after each session will remove perspiration from your skin and add to the cleansing feeling that is felt when using the unit.

At the end of each session, remove the towel that is over the mat. Fully extend the domes and let them cool down. Collapse the two domes only after they are completely cool.
After use, the mat and pillow should be wiped down using a mild anti-bacterial detergent. Use a clean towel to dry all surfaces.

DOME CONTROL BOX

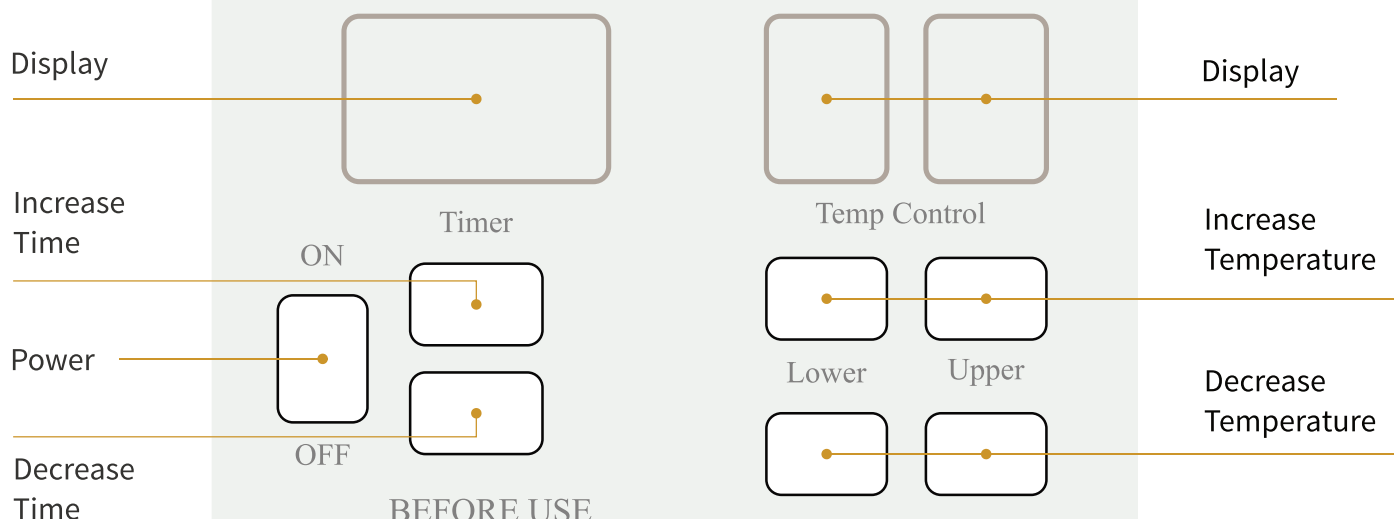

BEFORE USE

- Read the instruction manual
- Observe all Warnings and Contradictions
- Place clean terry cloth towel on mat

OPERATION

- Turn the POWER switch on
- Set the preferred heat mode
- Set the timer using the + / - keys
- The unit will automatically shut OFF at the ends of set time


CAUTION

- When using for the first time, use the No. 1, Level One setting for 5 to 10 minutes
- As your body becomes accustomed to the Infrared heat of the you may elect to increase the time and temperature
- If session is to last more than 30 minutes set the Temperature on No.1, Level One

9	8	Level Four	146° F~150° F / 63° C~66° C
7	6	Level Three	136° F~145° F / 58° C~63° C
5	4	Level Two	126° F~135° F / 52° C~57° C
3	2	Level One	110° F~125° F / 43° C~52° C
1			

IF YOU FEEL UNCOMFORTABLE,
TURN OFF IMMEDIATELY

MATCONTROL PANEL

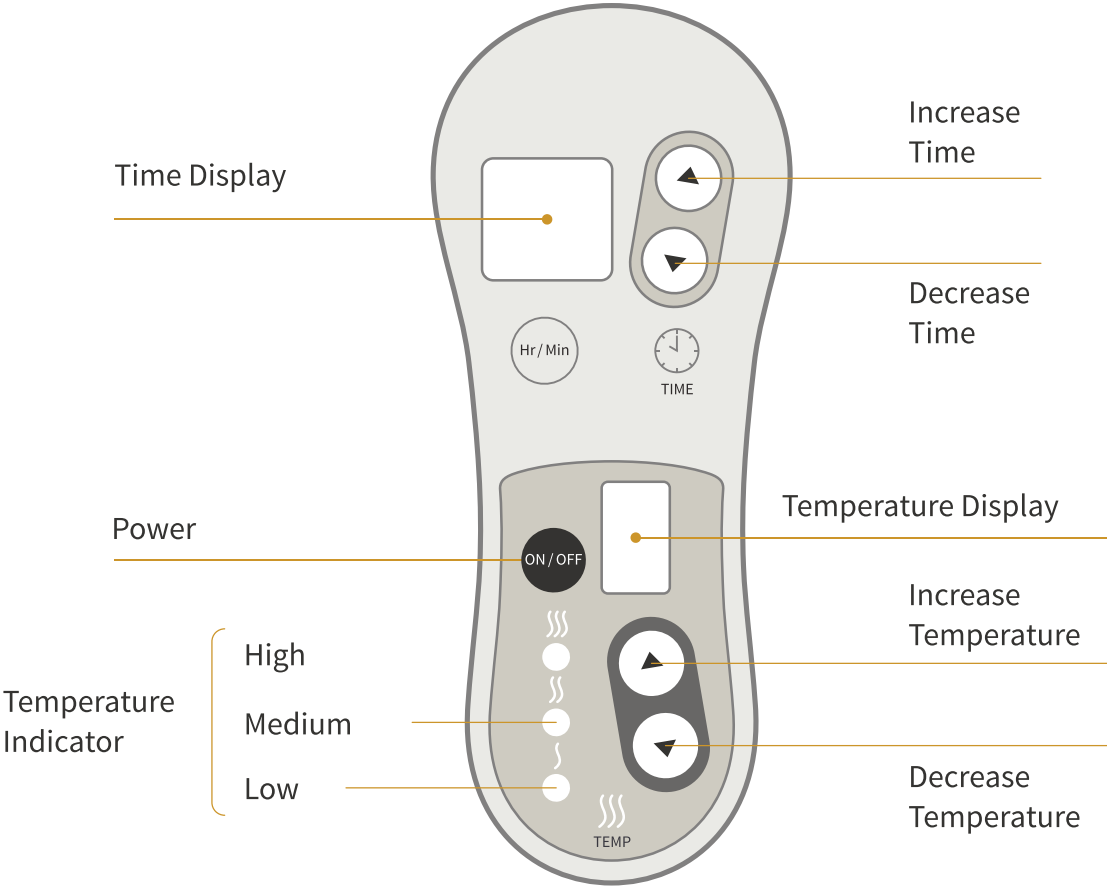

Pressing this turns the mat on or off



Pressing this changes the time [CD] control from minute to hour and vice versa. Time may not be set to hour intervals when using the high temperature setting.



Pressing this changes the temperature [SSi] from High, Medium, and y Low. The temperature range is between 113-149°F (45-65°C)

MAT

- 1 Remove mat from box
- 2 Place where you can be sufficiently supported
- 3 Plug the cord into the receptacle on the control box
- 4 Plug the power cord from the control box into a power outlet (be sure that voltage of the power outlet matches the voltage printed on the back of the control box)
- 5 Press power on the control box
- 6 Set Temperature by pressing the temperature button until you reach the desired setting (high, medium, low)
- 7 Set time by pressing the time increase or decrease button until you reach the desired setting (1-60 minutes or 1-12 hours)
- 8 Place a large towel over the entire length of the mat

CARE AND MAINTENANCE

Unplug the power cord after each use.

When unplugged, mat may be wiped down with a damp cloth or household disinfectant, being sure not to get the control box or power cords wet. Always keep the mat covered with a towel during use to keep it clean.

The control unit may be disconnected from the mat and both may be placed in the original packaging for storage in a cool place

The Outer material is made from water resistant, breathable polyester.

This provides maximum comfort for the user, as the skin will not stick to the surface when wet.

Water rolls right off the surface of the product, facilitating cleaning and disinfecting.

Time may be set for up to 12 hours at 1 hour intervals.

It can also be set for up to 60 minutes at 5 minute intervals at the highest setting

Temperature range is from 45-65 degrees Celsius (113-149 degrees Fahrenheit) and may be set at 3 levels: High, Medium, and Low.

SAFETY INSTRUCTIONS

- 1. READ INSTRUCTIONS** - All safety and operating instructions should be read before the Dome Sauna is installed & operated.
- 2. RETAIN INSTRUCTIONS** - The safety and operating instructions should be retained for future reference.
- 3. HEED WARNINGS** - All warnings on the Dome Sauna should be adhered to.
- 4. FOLLOW INSTRUCTIONS** - All operating and usage instructions should be followed at all times.
- 5. CLEANING** - Unplug the Dome Sauna from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleansers inside the dome. Use a damp cloth for cleaning.
- 6. ATTACHMENTS** - Do not use attachments that are not recommended by the manufacturer as they may cause hazard.
- 7. WATER OR MOISTURE** - Do not use this product near water-for example near a bathtub, in a wet basement, or near a swimming pool or similar area.
- 8. GROUNDING OR POLARIZATION** - This dome is intended for use with a 3-wire properly grounded power socket. Do not defeat the safety purpose of the supplied line cord and plug.
- 9. POWER SOURCES** - This product should be operated only from the required type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company.
- 10. POWER-CORD PROTECTION** - Power supply cords should be routed so they are not likely to be walked on or pinched.
- 11. LIGHTNING** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet.
- 12. OVERLOADING** - Do not overload wall outlets and extension cords as this can result in a risk of fire or electrical shock.
- 13. SERVICING** - Always unplug this product from the wall outlet before servicing the product.

SAFETY INSTRUCTIONS


- 14. **POWER SUPPLY** - Do not remove power supply covers. No user-serviceable parts are located inside the power supply.
- 15. **REPLACEMENT PARTS** - When replacement parts are required, only use parts specified by the manufacturer. Unauthorized substitutes could result in fire, electrical shock or other hazards.
- 16. **SAFETY CHECK** - Upon completion of any service or repairs to this product by a service technician, ask the technician to perform safety checks make certain that the product is in proper operating condition.

PRECAUTIONS FOR POWER SUPPLY



This FEMALE INLET takes the MALE POWER CORD from the back panel. Make sure that the cord is plugged securely into this inlet at all times.

Rear Heater Inlet

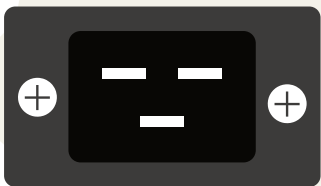

This MALE INLET takes the FEMALE PLUG on the main power cord. Make sure that the cord is plugged securely into this inlet at all times.

B Main Power Cord Inlet

WARRANTY

DOMES SAUNA LIMITED LIFETIME WARRANTY

Sauna Works, Inc. ("Company") offers the following to the original purchaser of any Sauna Works manufactured or distributed Clearlight® saunas ("Sauna") and designated parts and accessories:

Product	Indoor Residential-Use Dome Sauna	Outdoor Residential-Use Dome Sauna	Commercial-Use Dome Sauna
Clearlight® Dome Sauna	Lifetime	N/A	5 Years
Factory-Installed Dome Sauna Controls and Wiring	Lifetime	N/A	5 Years
Factory-Installed Heater Components	Lifetime	N/A	5 Years
Factory-Installed Audio Components	Lifetime	N/A	5 Years
Labor on Clearlight® brand Dome Sauna (USA & Canada only)	7 Years	5 Years	5 Years
Labor of Factory-Installed Components	7 Years	N/A	5 Years
Non-Factory Installed Components, Options, Parts and Accessories	Per manufacturer's warranty unless specified in Sauna Works' Quote, Invoice or Website		

WARRANTY

DOMES SAUNA LIMITED LIFETIME WARRANTY

For the coverage period specified (“warranty period”), Company agrees to repair or replace, at its sole option, the products listed above, subject to and solely in accordance with the terms, conditions, exclusions and limitations set forth herein. PLEASE READ THIS LIMITED WARRANTY IN ITS ENTIRETY TO UNDERSTAND YOUR RIGHTS AND OBLIGATIONS.

LIMITED WARRANTY ON DOME SAUNA AND FACTORY-INSTALLED COMPONENTS

Company warrants to the user during the warranty period (a) that the Dome Sauna will maintain its structural integrity and for outdoor models, that it will not leak, and (b) that factory-installed components (i.e., heater controls, power supply, electrical wiring, and audio system) will be free from defects in material or workmanship. This limited warranty shall not apply to any display model unless expressly agreed by Sauna Works in writing at the time of purchase or to any Dome Sauna installed more than six months after the delivery date.

LABOR WARRANTY FOR DOME SAUNA AND FACTORY-INSTALLED COMPONENTS

The Dome Sauna and factory-installed components are covered under Company’s labor warranty for the specified labor warranty period.

PURCHASE FROM OUTSIDE THE MAIN DISTRIBUTION AREAS OF CLEARLIGHT SAUNAS INTERNATIONAL

If you purchase a Dome Sauna outside the main distribution areas*, your freight is covered by our freight insurance for the delivery of your product to the final address. However, in case of any warranty claims, we exclude cost for labour (if any) and part freight (typically within \$100).

*Areas that lie outside the main distribution area will be assessed on a case-by-case basis.

LIMITED WARRANTY ON NON-FACTORY-INSTALLED COMPONENTS, OPTIONS, PARTS AND ACCESSORIES

Non-factory installed components, and Sauna Works options, parts and accessories are not warranted to the user against defects in material or workmanship except to the extent of any warranty period expressly set forth in the Sauna Works final quote or invoice. These items may also be covered by a manufacturer’s warranty which may have a longer duration than this limited warranty. Please confirm with the manufacturer of these items the duration of its warranty. If no warranty period is specified, only the manufacturer’s warranty, if any, shall apply. The Sauna Works water-resistant cover warranty only applies to the cover’s fabric under normal usage and environmental exposure. It does not cover failure or unserviceability resulting from excessive environmental exposure, cleaning or other chemicals, or failure to follow the care instructions included with the cover.

DISCLAIMER OF IMPLIED WARRANTIES

ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED IN THEIR ENTIRETY OR TO THE FULLEST EXTENT ALLOWED BY LAW. THIS LIMITED WARRANTY TAKES THE PLACE OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, IN FACT OR AT LAW, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

WARRANTY

DOME SAUNA LIMITED LIFETIME WARRANTY

WARRANTY LIMITATIONS AND EXCLUSIONS

The warranty period begins on the date the unit is purchased by the user. This warranty may not be transferred, sold, donated, gifted or assigned to a third party except with the prior written consent of Sauna Works, in its sole and absolute discretion. Absent written consent, only the original purchaser can make claims hereunder. All warranty labor must be performed by Company or its designated representative using authorized Sauna Works parts. No agent, dealer, distributor, service company or other party is authorized to change, modify, or extend the terms of this limited warranty in any manner whatsoever. Any warranty so provided shall be solely their separate obligation. As used in this warranty, (a) “commercial use” shall mean any use that involves a fee, rate, charge, or other consideration, any use directly or indirectly in connection with a business, going concern, or undertaking intended for profit or pecuniary gain, and any non-residential use, (b) “residential use” shall mean when purchased for use by a single family for internal household purposes, and (c) “user” shall mean the original purchaser. The limited warranty does not cover defects, damage, or failure (“Damage”) caused by the delivery service providers or common carrier, the installer, user, or other persons and animals, including without limitation, termites and other wood-destroying insects or rodents. The limited warranty excludes Damage resulting from transportation, careless handling, improper location, storage, or relocation, as well as from cleaning, painting, staining or other use of abrasive or improper chemicals. The limited warranty also excludes Damage arising from user’s or a third party’s negligence; modification of any type for any reason (including modification to meet local codes); improper installation (including installation not in accordance with instructions and specifications provided with the unit); connections supplied by the installer of the equipment, an electrician or a third party; improper voltage supply; unauthorized electrical modification; misuse; improper use; abuse; incorrect operation, lack of proper routine or preventive maintenance; unauthorized repair by a third-party; normal wear and tear; fire, and acts of God such as lightning, floods, earthquakes, etc. Outdoor-Use Dome Sauna warranties do not include damage arising from a failure (i) to maintain the Dome Sauna on a flat, level, hardtop surface with adequate drainage and (ii) to keep the exterior free and clear from plants, trees, grasses, soil, and snow deposits.

The limited warranty does not include: labor, transportation, or other costs incurred in the removal and/or reinstallation of the original unit and/or installation of a replacement unit; any costs relating to obtaining access for repair; or loss of use damage, including loss of sales, profit or business advantage of any kind under any circumstances. The labor warranty is provided in the United States of America and Canada only. User shall be obligated to pay for postage and handling for mailing and delivery of any products outside the United States and Canada. Dated proof of purchase of the product is required for a warranty claim. These disclaimers shall be equally applicable to any labor or service provided by Company and its designated representatives.

WARRANTY

DOME SAUNA LIMITED LIFETIME WARRANTY

RESPONSIBILITIES OF OTHERS

Unless otherwise expressly agreed in writing, (a) all installers are separately contracted for by user and are not under the direction and control of Company, (b) the installer is the user's responsibility, and (c) Company will have no obligation, liability, or responsibility in connection with the same. Your installer is responsible for inspecting the unit prior to installation and ensuring the unit is free of defect or damage. Notices are placed on and in the unit and on the shipping carton advising the installer of this responsibility. In the event of a problem identified prior to installation, the unit must not be installed, and Company is not responsible for failures or damage that could have been discovered, repaired, or avoided by proper inspection prior to installation. Damage occurring in transit is the responsibility of the carrier. The user or installer MUST open the crate and inspect the unit for damage when it is delivered. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection requested. Failure of the carrier to respond should be reported to the seller and the carrier. Your freight claims should be filed promptly thereafter. Damage occurring to the unit during installation is the responsibility of the installer and/or building contractor and damage occurring thereafter is the responsibility of the user. Failure of any non-factory installed components, parts and accessories is the sole responsibility of the equipment manufacturer except as provided above. Any replacement parts shall be covered only by the original equipment manufacturer warranty, if any. Your installer is responsible for knowing local code requirements and installing the unit safely in accordance with the same. The Company is not responsible for costs to modify any product to obtain any code approval, such as city, county, or state building codes.

WARRANTY SERVICE

For the user's benefit, the Company maintains a list of independent service personnel to perform required warranty service repairs. Such firms are not agents or representatives of the Company and cannot bind the Company by words or conduct. The Company will provide the warranty service described above when the following conditions have been met: the failure is covered by the warranty; the user has informed an Authorized Sauna Works Warranty Service Department Representative of the nature of the problem during the warranty period; conclusive evidence (e.g., proof of purchase or installation) is provided to the foregoing by the user proving that the failure occurred or was discovered within the warranty period; and, an authorized independent service person or Company representative has been permitted to inspect the unit during regular business hours within a reasonable time after the problem was reported by the user. In order to obtain warranty service, contact Sauna Works at:

Clearlight Saunas Europe GmbH
Lehmweg 10B
20251 Hamburg
Germany
+49 (0) 40 4011 0162 (Option 3)

Clearlight Saunas UK Ltd.
Unit 1, West Links,
Tollgate Business Park
Chandlers Force
SO53 3TG
+44 (0) 23 2026522 (Option 3)

WARRANTY

DOME SAUNA LIMITED LIFETIME WARRANTY

To obtain warranty service, call or write the above. Provide a description of the problem and proof of purchase. You will be instructed how to obtain replacements and where to return, at your expense, the failed component(s), option(s), or accessory(ies). All replacement parts, equipment, and repairs shall assume the remaining warranty period of the part(s) replaced and do not extend the same.

The Company's warranty obligation shall be discharged upon tender of replacement or repair. The customer's refusal to accept the tender terminates the Company's warranty obligation. Company will only pay for shipping and handling fees to return the repaired or replacement unit to you if we elect to replace the defective unit.

LEGAL RIGHTS: This Limited Warranty gives you specific legal rights. There are no warranties applicable to Clearlight® brand products manufactured and distributed by Company, except as expressly stated herein or as implied by applicable state and federal laws. You may also have other rights that vary from state to state. Some states do not allow limitations on how long an implied warranty lasts, disclaimer of certain warranties, or the exclusion or limitation of incidental or consequential damages, so some of the above limitations and exclusions may not apply to you. Company will not be responsible for any statements or representations made in any form that go beyond, are broader than, or are inconsistent with any technical specifications furnished by the Company.

WARRANTY REGISTRATION

To register your product, please go to our website www.clearlight-saunas.eu/warrantyform. You will then be prompted to enter your product Serial Number followed by your warranty registration information.

The warranty must be registered within thirty (30) days from the date of purchase in order for this warranty to become effective.

LIMITATION OF LIABILITY

THE REMEDIES DESCRIBED IN THIS LIMITED WARRANTY ARE YOUR SOLE AND EXCLUSIVE REMEDIES AND COMPANY'S ENTIRE LIABILITY, INCLUDING, WITHOUT LIMITATION, FOR ANY BREACH OF THIS LIMITED WARRANTY. COMPANY'S LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY USER FOR THE APPLICABLE DEFECTIVE PRODUCT, NOR SHALL COMPANY UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT. IN ADDITION, THE COMPANY WILL NOT BE RESPONSIBLE FOR CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT FROM ANY CAUSE WHATSOEVER, INCLUDING BUT NOT LIMITED TO COMPANY'S GROSS NEGLIGENCE. THIS EXCLUSION APPLIES EVEN IF COMPANY WAS ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Clearlight®



EU

+49 40 4011 0162
info@clearlight-saunas.eu
www.clearlightsaunas.eu

UK

+44 23 8202 6522
info@infrared-sauna.co.uk
www.infraredsauna.co.uk

IRL

+353 818 370 066
info@infraredsauna.ie
www.infraredsauna.ie